

## Preface

**Thank you for choosing FRECON developed and produced FR500A&FR510A series vector control inverter.**

FR500A&FR510A series vector control inverter is mainly positioned as a high-end market for OEM customers and the specific requirements of fan and pump load applications, its flexible design, both embedded SVC and VF control in one, can be widely used for speed control accuracy, torque response speed, low-frequency output characteristics and other situations with higher requirements.

This user manual supplies a detailed description of FR500A &FR510A series vector control inverter includes product characterization, structural features, parameter setting, operation and commissioning, inspection maintenance and other contents. Be sure to carefully read through the safety precautions before use, and use this product on the premise that personnel and equipment safety is ensured.

### IMPORTANT NOTES

- ◆ To illustrate the details of the products, pictures in this manual based on products with outer casing or safety cover being removed. When using this product, please be sure to well install outer casing or covering by the rules, and operating in accordance with the manual contents.
- ◆ The illustrations this manual for illustration only and may vary with different products you have ordered.
- ◆ The company is committed to continuous improvement of products, product features will continue to upgrade, the information provided is subject to change without notice.
- ◆ If you are using have questions, please contact our regional agents or our customer service center. Customer Service Tel 0755 -33067999.
- ◆ The company's other products please visit our website. <http://www.frecon.com.cn>



## Contents


<b>PREFACE</b> .....	<b>- 1 -</b>
<b>CONTENTS</b> .....	<b>- 2 -</b>
<b>CHAPTER 1 SAFETY PRECAUTIONS</b> .....	<b>- 4 -</b>
1.1 SAFETY CONSIDERATIONS .....	- 4 -
1.2 PRECAUTIONS .....	- 6 -
<b>CHAPTER 2 PRODUCT INFORMATION</b> .....	<b>- 8 -</b>
2.1 NAMEPLATE INFORMATION .....	- 8 -
2.2 INFORMATION OF PRODUCT MODEL .....	- 9 -
2.3 TECHNICAL FEATURES.....	- 11 -
2.4 PARTS DRAWING.....	- 13 -
2.5 CONFIGURATION, MOUNTING DIMENSIONS AND WEIGHT.....	- 14 -
2.6 FLANGE MOUNTING DIMENSIONS.....	- 17 -
2.7 EXTERNAL DIMENSIONS OF KEYPAD.....	- 19 -
<b>CHAPTER 3 INSTALLATION AND WIRING</b> .....	<b>- 21 -</b>
3.1 INSTALLATION ENVIRONMENT .....	- 21 -
3.2 INSTALLATION DIRECTION, SPACE AND COOLING .....	- 21 -
3.3 FIXED MANNER .....	- 23 -
3.4 REMOVE & MOUNT KEYPAD AND COVER .....	- 24 -
3.5 DUST COVER INSTALLATION AND REMOVAL (OPTIONAL ACCESSORIES) .....	- 27 -
3.6 CONFIGURATION OF PERIPHERAL DEVICES .....	- 27 -
3.7 WIRING WAY.....	- 31 -
3.8 TERMINAL CONFIGURATION.....	- 32 -
3.9 EMI SOLUTIONS .....	- 40 -
<b>CHAPTER 4 OPERATION AND DISPLAY</b> .....	<b>- 42 -</b>
4.1 INTRODUCTION OF KEYPAD .....	- 42 -
4.2 VIEWING AND MODIFYING FUNCTION CODES.....	- 44 -
4.3 VIEWING STATUS PARAMETERS .....	- 44 -
4.4 MOTOR AUTO-TUNING.....	- 45 -
4.5 PASSWORD SETTING.....	- 45 -
4.6 KEYPAD LOCK .....	- 45 -
4.7 SHORTCUT MENUS FUNCTION CODE DESCRIPTION .....	- 45 -
<b>CHAPTER 5 LIST OF PARAMETER</b> .....	<b>- 46 -</b>
5.1 FIVE LED (DIGITAL) DISPLAY INDICATORS.....	- 47 -
5.2 STANDARD FUNCTION PARAMETERS .....	- 47 -
<b>CHAPTER 6 SPECIFICATION OF PARAMETERS</b> .....	<b>- 82 -</b>
GROUP F00 SYSTEM PARAMETERS .....	- 82 -
GROUP F01 FREQUENCY COMMAND.....	- 85 -
GROUP F02 START/STOP CONTROL START/STOP CONTROL .....	- 88 -
GROUP F03 ACCEL/DECEL PARAMETERS.....	- 92 -
GROUP F04 DIGITAL INPUT.....	- 94 -
GROUP F05 DIGITAL OUTPUT .....	- 103 -
GROUP F06 ANALOG AND PULSE INPUT .....	- 107 -
GROUP F07 ANALOG AND PULSE OUTPUT .....	- 111 -
GROUP F08 PARAMETERS OF MOTOR 1.....	- 112 -
GROUP F09 V/F CONTROL PARAMETERS OF MOTOR 1 .....	- 114 -


GROUP F10 VECTOR CONTROL PARAMETERS OF MOTOR 1 .....	118 -
GROUP F11 PROTECTION PARAMETERS .....	121 -
GROUP F12 MULTI-REFERENCE AND SIMPLE PLC FUNCTION .....	126 -
GROUP F13 PROCESS PID .....	130 -
GROUP F14 SWING FREQUENCY, FIXED LENGTH, COUNT AND WAKEUP .....	133 -
GROUP F15 COMMUNICATION PARAMETERS .....	137 -
GROUP F16 KEYS AND DISPLAY OF KEYPAD PARAMETERS .....	137 -
GROUP F17 USER-DEFINED DISPLAY PARAMETERS .....	138 -
GROUP F18 PARAMETERS OF MOTOR 2 .....	140 -
GROUP F19 V/F CONTROL PARAMETERS OF MOTOR 2 .....	140 -
GROUP F20 VECTOR CONTROL PARAMETERS OF MOTOR 2 .....	140 -
GROUP F21 POSITION CONTROL .....	140 -
GROUP F22 VIRTUAL IO .....	147 -
GROUP U00 STATUS MONITORING .....	148 -
GROUP U01 FAULT RECORD .....	150 -
<b>CHAPTER 7 MAINTENANCE AND TROUBLESHOOTING .....</b>	<b>- 152 -</b>
<b>CHAPTER 8 MAINTENANCE AND INSPECTION .....</b>	<b>- 156 -</b>
8.1 INSPECTION .....	156 -
8.2 MAINTENANCE .....	157 -
<b>APPENDIX A: MODBUS COMMUNICATION PROTOCOL .....</b>	<b>- 159 -</b>
<b>APPENDIX B: BRAKING RESISTOR .....</b>	<b>- 165 -</b>
<b>APPENDIX C: PG CARD .....</b>	<b>- 167 -</b>
C.1 ABZ ENCODER PG CARD .....	168 -
C.2 ROTARY TRANSFORMER PG CARD .....	171 -
C.3 ECN1313 PG CARD .....	172 -
C.4 SIN-COS ENCODER PG CARD .....	175 -
C.5 UVW ENCODER PG CARD .....	172 -

## Chapter 1 Safety Precautions

### Safety Precautions






Safety signs in this manual:

 **DANGER:** indicates the situation in which the failure to follow operating requirements may result in fire or serious personal injury or even death.









 **CAUTION:** indicates the situation in which the failure to follow operating requirements may cause moderate or slight injury and damage to equipment.

Users are requested to read this chapter carefully when installing, commissioning and repairing this product and perform the operation according to safety precautions as set forth in this chapter without fail. FRECON will bear no responsibility for any injury and loss as a result of any violation operation.

#### 1.1 Safety Considerations

The use phase	Safety class	Considerations
Before Installation	 Danger	<ul style="list-style-type: none"> <li>◆ Do not install the product if the package is with water, or component is missing or broken.</li> <li>◆ Do not install the product if the label on the package is not identical to that on the inverter.</li> </ul>
	 Caution	<ul style="list-style-type: none"> <li>◆ Be careful of carrying or transportation. Risk of devices damage.</li> <li>◆ Do not use damaged product or the inverters missing component .Risk of injury.</li> <li>◆ Do not touch the parts of control system with bare hands. Risk of ESD hazard.</li> </ul>
Installation	 Danger	<ul style="list-style-type: none"> <li>◆ Installation base shall be metal or other non-flammable material. Risk of fire.</li> <li>◆ Do not install inverter in an environment containing explosive gases, otherwise there is danger of explosion.</li> <li>◆ Do not unscrew the fixing bolts, especially the bolts with red mark.</li> </ul>
	 Caution	<ul style="list-style-type: none"> <li>◆ Do not leave cable strips or screws in the inverter. Risk of inverter damage.</li> <li>◆ Install the product at the place with less vibration and no direct sunlight.</li> <li>◆ Consider the installation space for cooling purpose when two or more inverters are placed in the same cabinet.</li> </ul>
Wiring	 Danger	<ul style="list-style-type: none"> <li>◆ Wiring must be performed by authorized and qualified personnel. Risk of danger.</li> <li>◆ Circuit-breaker should be installed between inverter and the mains. Risk of fire.</li> <li>◆ Make sure the input power supply has been completely disconnected before wiring. Failure to comply may result in personnel injury and/or equipment damage.</li> <li>◆ Since overall leakage current of this equipment may be bigger than 3.5mA, for safety's sake, this equipment and its associated motor must be well grounded so as to avoid risk of electric shock.</li> <li>◆ Never connect the power cables to the output terminals (U/T1, V/T2, W/T3) of the AC drive. Pay attention to the marks of the</li> </ul>

FR500A&FR510A Series Vector Control Inverter

		<p>wiring terminals and ensure correct wiring. Failure to comply will result in damage to the AC drive.</p> <ul style="list-style-type: none"> <li>◆ Install braking resistors at terminals (+) and PB only. Failure to comply may result in equipment damage.</li> <li>◆ AC 220V signal is prohibited from connecting to other terminals than control terminals R1A, R1B, R1C and R2A, R2B, R2C. Failure to comply may result in equipment damage.</li> </ul>
	 Caution	<ul style="list-style-type: none"> <li>◆ Since all adjustable frequency AC drives from FRECON have been subjected to hi-pot test before delivery, users are prohibited from implementing such a test on this equipment. Failure to comply may result in equipment damage.</li> <li>◆ Signal wires should to the best of the possibility be away from main power lines. If this cannot be ensured, vertical cross-arrangement shall be implemented, otherwise interference noise to control signal may occur.</li> <li>◆ If motor cables are longer than 50m, it is recommended output AC reactor be used. Failure to comply may result in faults.</li> </ul>
Before Power-on	 Danger	<ul style="list-style-type: none"> <li>◆ Inverter shall be power-on only after the front cover is assembled. Risk of electrical hazard.</li> </ul>
	 Caution	<ul style="list-style-type: none"> <li>◆ Verify that the input voltage is identical to the rated voltage of product, correct wiring of input terminals R/L1, S/L2, and T/L3 and output terminals U/T1, V/T2, and W/T3, wiring of inverter and its peripheral circuits, and all wires should be in good connection. Risk of inverter damage.</li> </ul>
After Power-on	 Danger	<ul style="list-style-type: none"> <li>◆ Do not open the cover after power. Risk of electrical hazard.</li> <li>◆ Do not touch any input/output terminals of inverter with bare hands. Risk of electrical hazard.</li> </ul>
	 Caution	<ul style="list-style-type: none"> <li>◆ If auto tuning is required, be careful of personal injury when motor is running. Risk of accident.</li> <li>◆ Do not change the defaults of parameters. Risk of devices damage.</li> </ul>
During Operation	 Danger	<ul style="list-style-type: none"> <li>◆ Non-professionals shall not detect signals during operation. Risk of personal injury or device damage.</li> <li>◆ Do not touch the fan or the discharging resistor to check the temperature. Failure to comply will result in personal burnt.</li> </ul>
	 Caution	<ul style="list-style-type: none"> <li>◆ Prevent any foreign items from being left in the devices during operation. Risk of device damage.</li> <li>◆ Do not control start/stop of inverter by ON/OFF of contactor. Risk of device damage.</li> </ul>
Maintenance	 Danger	<ul style="list-style-type: none"> <li>◆ Maintenance and inspection can only be performed by professionals. Risk of personal injury.</li> <li>◆ Maintain and inspect devices after power is off. Risk of electric hazard.</li> <li>◆ Repair or maintain the AC drive only ten minutes after the AC drive is powered off. This allows for the residual voltage in the capacitor to discharge to a safe value. Failure to comply will result in personal injury.</li> <li>◆ All pluggable components can be inserted or pulled out only when power has been turned off.</li> <li>◆ Set and check the parameters again after the AC drive is replaced.</li> </ul>

## 1.2 Precautions

### 1.2.1 Motor Insulation Inspection

When the motor is used for the first time or when the motor is reused after being kept, or when periodical inspection is performed, insulation inspection shall be conducted with motor so as to avoid damaging the inverter because of the insulation failure of the motor windings. The motor wires must be disconnected from the inverter during the insulation inspection. It is recommended to use the 500V mega meter, and the insulating resistance measured shall be 5MΩ at least.

### 1.2.2 Motor Thermal Protection

If the motor rating does not match that of the inverter, especially when the rated power of the inverter is higher than that of the motor, adjust motor protection parameters in the inverter or install thermal relay to protect motor.

### 1.2.3 Operating with the Frequency Higher than Grid Power Frequency

Output frequency of FR510A is 0.00Hz~600.00Hz. If FR510A is required to operate above 50.00Hz, please take the endurance of mechanical devices into consideration.

### 1.2.4 Mechanical Vibrations

Inverter may encounter mechanical resonance point of the load device at certain output frequencies which can be avoided by setting the skip frequency parameters of the inverter.

### 1.2.5 Motor Heat and Noise

Since output voltage of inverter is PWM wave and contains a certain amount of harmonics, so that the temperature, noise and vibration of the motor will be higher than those when the inverter runs at grid power frequency.

### 1.2.6 Voltage-sensitive device or capacitor on output side of the AC drive

Do not install the capacitor for improving power factor or lightning protection voltage-sensitive resistor on the output side of the AC drive because the output of the AC drive is PWM wave. Otherwise, the AC drive may suffer transient overcurrent or even be damaged.

### 1.2.7 Contactor at the I/O terminal of the AC drive

When a contactor is installed between the input side of the AC drive and the power supply, the AC drive must not be started or stopped by switching the contactor on or off. If the AC drive has to be operated by the contactor, ensure that the time interval between switching is at least one hour since frequent charge and discharge will shorten the service life of the capacitor inside the AC drive.

When a contactor is installed between the output side of the AC drive and the motor, do not turn off the contactor when the AC drive is active. Otherwise, modules inside the AC drive may be damaged.

### 1.2.8 Applied with the Rated Voltage

Apply FR510A with the rated voltage. Failure to comply will damage inverter. If required, take a transformer to boost or step-down voltage.

### 1.2.9 Do Not Apply a 3-Phase Input Inverter to 2-Phase Input Applications

Do not apply a 3-phase input FR inverter to 2-phase input applications. Otherwise, it will result in faults or damage inverter.

### 1.2.10 Lightning Protection

FR510A has integrated lightning over-current protection device which has certain self-protection capacity against the lightning. Additional protection devices have to be installed between inverter and power supply in the area where lightning occurs frequently.

### 1.2.11 Altitude De-rating

In places where the altitude is above 1000 m and the cooling effect reduces due to thin air, it is necessary to de-rate the AC drive. Contact FRECON for technical support.

### 1.2.12 some special usages

If wiring that is not described in this manual such as common DC bus is applied, contact the agent or FRECON for technical support.

### 1.2.13 Cautions for Inverter Disposal

The electrolytic capacitors on the main circuit and PCBA may explode when they are burnt. Emission of toxic gas may be generated when the plastic parts are burnt. Please dispose inverter as industrial wastes.

### 1.2.14 Adaptable Motor

The standard adaptable motor is adaptable four-pole squirrel-cage asynchronous induction motor or PMSM. For other types of motor, select a proper AC drive according to the rated motor current.

The cooling fan and rotor shaft of non-variable-frequency motor are coaxial, which results in reduced cooling effect when the rotational speed declines. If variable speed is required, add a more powerful fan or replace it with variable-frequency motor in applications where the motor overheats

easily.

The standard parameters of the adaptable motor have been configured inside the AC drive. It is still necessary to perform motor auto-tuning or modify the default values based on actual conditions. Otherwise, the running result and protection performance will be affected.

The AC drive may alarm or even be damaged when short-circuit exists on cables or inside the motor. Therefore, perform insulation short-circuit test when the motor and cables are newly installed or during routine maintenance. During the test, make sure that the AC drive is disconnected from the tested parts.

## Chapter 2 Product Information

### 2.1 Nameplate information

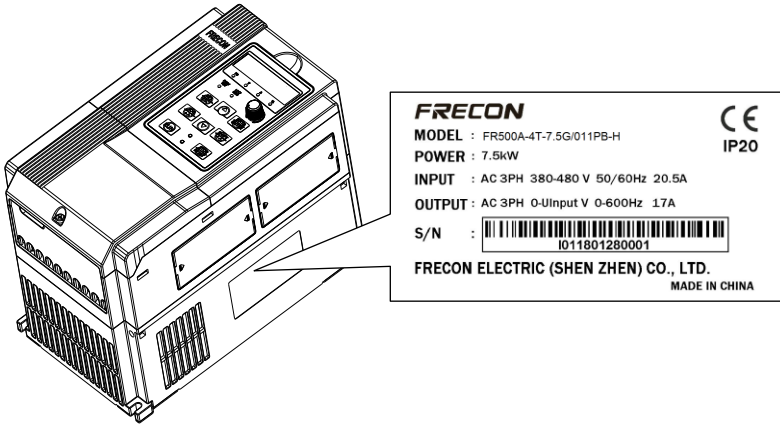


Fig.2-1 Nameplate information

### Model Explanation

Model show on product nameplate contains information below.

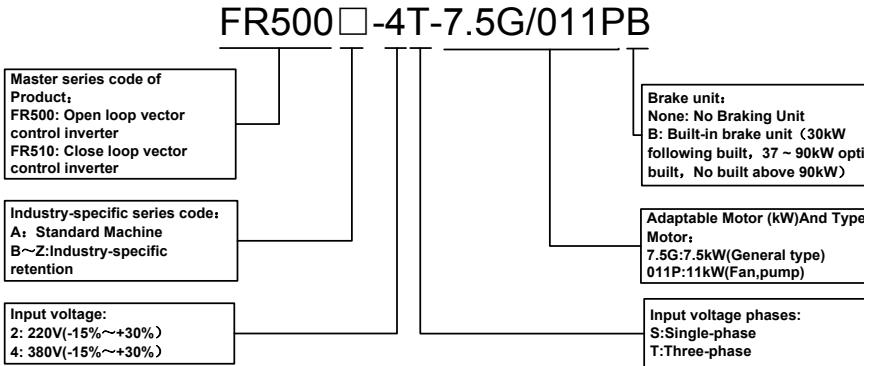


Fig.2-2 Model Explanation

## 2.2 Information of Product Model

Table 2-1 FR500A Product model and technical data

Model No.	Power capacity KVA	Rated Input current A	Rated output current A	Applicable motor	
				kW	HP
3-Phase:220V, 50/60Hz Range:-15%~+30%					
FR500-2T-0.7B	3.5	5.3	4.2	0.75	1
FR500A-2T-1.5B	5.5	8.5	7.5	1.5	2
FR500A-2T-2.2B	7.5	11.6	9.5	2.2	3
FR500A-2T-4.0B	11.7	18	17	4	5
FR500A-2T-5.5B	17.3	26.5	25	5.5	7.5
FR500A-2T-7.5B	22	33.5	32	7.5	10
FR500A-2T-011B	31	47.5	45	11	15
FR500A-2T-015B	41.5	63	60	15	20
FR500A-2T-018B	52	79	75	18.5	25
FR500A-2T-022	63	96	91	22	30
FR500A-2T-030	77.5	118	112	30	40
FR500A-2T-037	104	158	150	37	50
FR500A-2T-045	122	185	176	45	60
FR500A-2T-055	145	221	210	55	70
FR500A-2T-075	173	263	250	75	100
3-Phase:380V, 50/60Hz Range:-15%~+30%					
FR500-4T-0.7G/1.5PB	1.5	3.4	2.5	0.75	1
FR500-4T-1.5G/2.2PB	3	5.0	4.2	1.5	2
FR500-4T-2.2GB	4	5.8	5.5	2.2	3
FR500-4T-2.2G/4.0PB	4	5.8	5.5	2.2	3
FR500-4T-4.0G	6	11	9.5	3.7, 4	5
FR500A-4T-4.0G/5.5PB	6	11	9.5	3.7, 4	5
FR500A-4T-5.5G/7.5PB	8.9	14.6	13	5.5	7.5
FR500A-4T-7.5GB	11	20.5	17	7.5	10
FR500A-4T-7.5G/011PB	11	20.5	17	7.5	10
FR500A-4T-011G/015PB	17	26	25	11	15
FR500A-4T-015G/018PB	21	35	32	15	20
FR500A-4T-018G/022PB	24	38.5	37	18.5	25
FR500A-4T-022G/030PB	30	46.5	45	22	30
FR500A-4T-030G/037PB	40	62	60	30	40
FR500A-4T-037GB	57	76	75	37	50
FR500A-4T-037G/045P					
FR500A-4T-037G/045PB	57	76	75	37	50
FR500A-4T-045G/055P					
FR500A-4T-045G/055PB	69	92	91	45	60
FR500A-4T-055G/075P					
FR500A-4T-055G/075PB	85	113	112	55	70
FR500A-4T-075G/090P					
FR500A-4T-075G/090PB	114	157	150	75	100
FR500A-4T-090G/110P					
FR500A-4T-090G/110PB	134	186	176	90	125
FR500A-4T-110G/132P	160	220	210	110	150
FR500A-4T-132G/160P	192	260	253	132	175
FR500A-4T-160G/185P	231	310	304	160	210
FR500A-4T-185G/200P	240	355	350	185	250
FR500A-4T-200G/220P	250	382	377	200	260
FR500A-4T-220G/250P	280	430	426	220	300

FR500A&FR510A Series Vector Control Inverter

FR500A-4T-250G/280P	355	475	470	250	330
FR500A-4T-280G/315P	396	535	520	280	370
FR500A-4T-315G/355P	445	610	600	315	420
FR500A-4T-355G/400P	500	665	650	355	470
FR500A-4T-400G/450P	565	785	725	400	530
FR500A-4T-450G	623	865	800	450	600

**\*Note: The model of FR510A series inverter only needs to replace FR500A in the above table with FR510A**

## 2.3 Technical Features

Table 2-2 Technical features

Project		Specifications
Power input	Rated input voltage (V)	3-phase 380 V (-15%~+30%)
	Rated input current (A)	See table 2-1
	Rated input frequency (Hz)	50Hz/60Hz, tolerance±5%
Power output	Applicable motor(kW)	See table 2-1
	Rated output current (A)	See table 2-1
	The maximum output voltage (V)	0~rated input voltage, error<±3%
	The maximum output frequency (Hz)	0.00~600.00 Hz,unit0.01Hz
Control characteristics	V/f patterns	V/f control Sensor-less vector control 1 Sensor-less vector control 2 Close loop vector control with PG card(Only FR510A)
	Speed range	1:50 (V/f control) 1:100 (sensor-less vector control 1) 1:200 (sensor-less vector control 2) 1:1000 (VC with PG card) (Only FR510A)
	Speed accuracy	±0.5% (V/F control) ±0.2% (sensor-less vector control 1 & 2)
	Speed fluctuation	±0.3% (sensor-less vector control 1 & 2)
	Torque response	< 10ms (sensor-less vector control 1 & 2)
	Starting torque	0.5Hz: 180% (V/f control, sensor-less vector control 1) 0.25Hz: 180% (sensor-less vector control 2)
Basic functions	Carrier frequency	0.7kHz~16kHz
	Overload capability	G Model:150% Rated Current 60s,180% Rated Current 10s,200% Rated Current 1s. P Model:120% Rated Current 60s,145% Rated Current 10s,160% Rated Current 1s.
	Torque boost	Automatic torque boost: Manual torque boost 0.1%~30.0%
	V/F Curve	Three ways: straight; multi-point type; N Th-type V / F curve (1.2 Th -type, 1.4 Th -type, 1.6 Th -type, 1.8 Th -type, 2 Th -type)
	Acceleration and deceleration Curve	Line or curve acceleration and deceleration mode. Four kinds of acceleration and deceleration time, Ramp Time Range :0.0~6000.0s
	DC brake	DC brake start frequency: 0.00~600.00Hz DC brake time:0.0s~10.0s DC brake current:0.0%~150.0%
Basic functions	Jog brake	Jog frequency range:0.00Hz~50.00Hz. Jog deceleration time: 0.0s~6000.0s.
	Simple PLC, Multi-speed	Through the built-in PLC or control terminal to achieve up to 16 speed running
	Built-in PID	Facilitate the realization of process control loop control

## FR500A&FR510A Series Vector Control Inverter

		system
	Automatic voltage adjustment (AVR)	When the grid voltage changes, can automatically maintain a constant output voltage
	Fast current limit function	Minimize over current fault protection inverter running
	Over voltage Over current	System automatically limits of current and voltage during operation to prevent frequent
Run	Command source	Given the control panel, control terminal, serial communication port given.
	Frequency given	7 kinds of frequency sources: digital setting, keyboard potentiometer setting, analog Voltage, given analog current reference pulse is given, the serial port is given, multi-speed given, PLC is given, the process P I D reference. There are several ways to switch
	Input terminal	7 Switch input terminals, one way to make high-speed pulse input. 3-channel analog inputs, including 2-way 0~10V / 0~20mA voltage and current options, a way to support -10~+10 V input
	output terminal	2-way switch output terminal, which supports a maximum road speed 100kHz pulse output. 2 relay output terminals. 2 analog output terminal, and optional voltage and current.
Featured functions	<p>Parameter copy, parameter backup, flexible parameter displayed &amp; hidden. Common DC bus ( Contains below 30 KW ) . Various master &amp; auxiliary command and switchover. Reliable speed search started. A variety of Accel / Decel curves programmable. Timing control, fixed length control, count function. Three faults recorded. Over excitation brake, overvoltage stall protection programmable, under voltage stall protection programmable, restart upon power loss. Four kinds of Accel/Decel time. Motor thermal protection. Flexible fan control. Process PID control, simple PLC, 16-step speed control programmable. Wobble frequency control. Multi-functional bus key programmable, field-weakening control. High-precision torque control, V/f separated control, torque control at sensor-less vector control.</p>	
Protection function	Provide fault protection dozen: Overcurrent, Overvoltage, Undervoltage, Overtemperature, Overload Etc Protection.	
Display and keyboard	LED Display	Display Parameters
	Key lock and function selection	Realize some or all of the keys locked, scope definition section keys to prevent misuse
	Run and stop monitoring information	In the run or stop can be set to monitor U00 group four objects were.
Environment	Place of operation	Indoors, no direct sunlight, free from dust, corrosive gases, flammable gases, oil mist, water vapor, water drop and salt, etc.
	Altitude	0~2000m De-rate 1% for every 100m when the altitude is above 1000 meters

## FR500A&FR510A Series Vector Control Inverter

	Ambient temperature	-10℃~40℃
	Relative humidity	5~95%, no condensation
	Vibration	Less than 5.9m/s <sup>2</sup> (0.6g)
	Storage temperature	-20℃~+70℃
Others	Efficiency	Rated power≥93%
	Installation	Wall-mounted or Flange mounting
	IP grade	IP20
	Cooling method	Fan cooled

### 2.4 Parts Drawing

#### ◆0.7~4.0kW Outline:

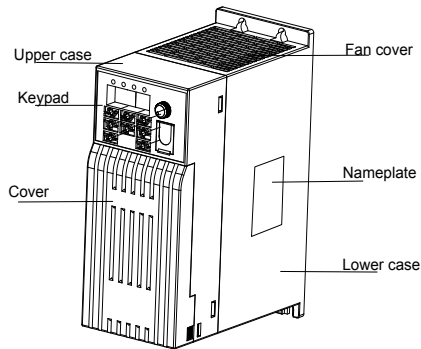


Fig 2-3 0.7~4.0kW Outline

#### ◆4~22kW Outline:

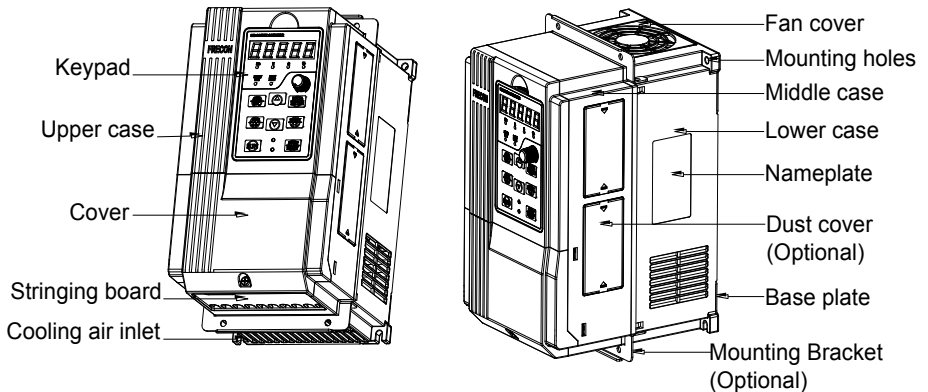


Fig 2-4 4~22kW Outline

◆ 30~450kW Outline:

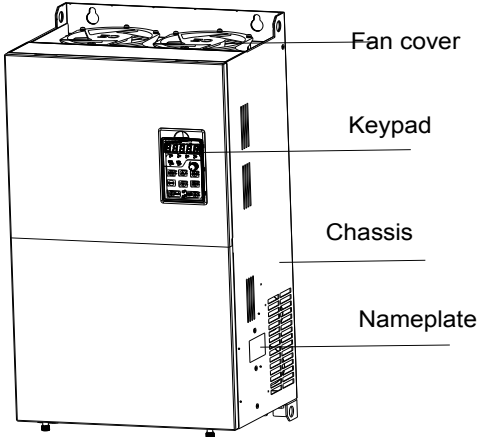


Fig 2-5 30~450Kw Outline

## 2.5 Configuration, Mounting Dimensions and Weight

◆ 0.7~4.0kW Dimensions and wall mounting dimensions (scheme One)

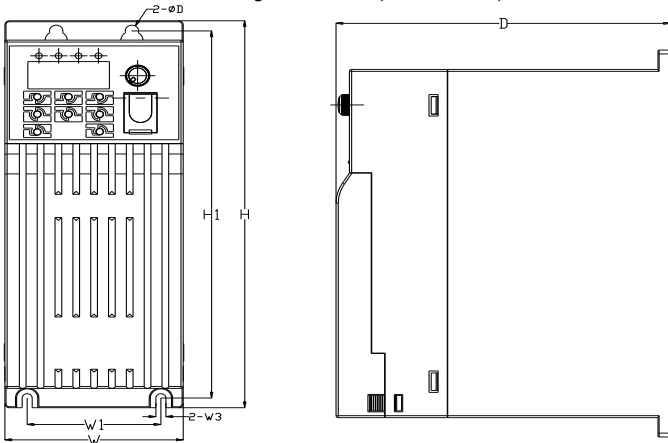


Fig 2-6(a) 0.7~4.0kW Wall installation diagram (scheme One)

◆0.7~4.0KW Dimensions and wall mounting dimensions (scheme Two)

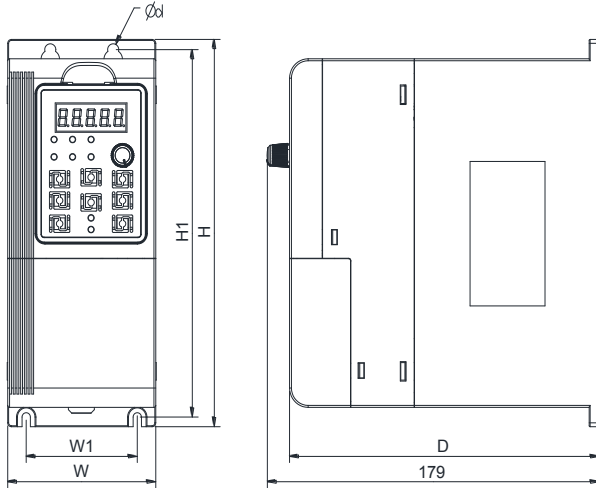


Fig 2-6(b) 0.7~4.0kW Wall installation diagram (scheme Two)

◆4~22KW Dimensions and wall mounting dimensions:

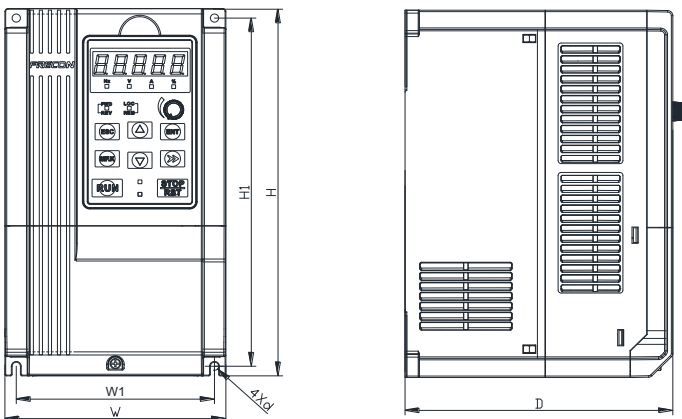


Fig 2-7 4~22kW Wall installation diagram

# FR500A&FR510A Series Vector Control Inverter

◆ 30~450kW Dimensions and wall mounting dimensions:

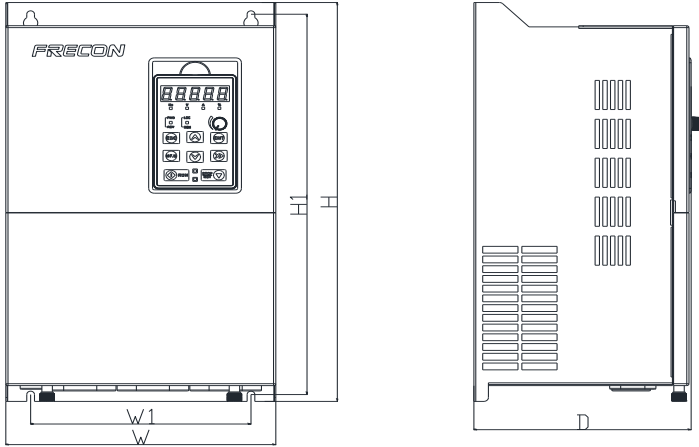


Fig 2-8 30~450KW Wall installation diagram

Table 2-3 Configuration, mounting dimensions and weight

Model NO.	External and installation dimensions (mm)						Weight (Kg)
	W	W1	H	H1	D	Mounting Hole Diameter	
3-Phase:220V, 50/60Hz Range:-15%~+30%							
FR500-2T-0.7B	80	60	200	190	167	6	1.34
FR500A-2T-1.5B	116.6	106.6	186.6	176.6	175	4.5	2.5
FR500A-2T-2.2B							
FR500A-2T-4.0B	146	131	249	236	177	5.5	3.9
FR500A-2T-5.5B							
FR500A-2T-7.5B	198	183	300	287	185	5.5	6.2
FR500A-2T-011B							
FR500A-2T-015B	245	200	410	391	200	7	11.8
FR500A-2T-018B							
FR500A-2T-022	300	200	485	466	226	7	15
FR500A-2T-030							
FR500A-2T-037	310	200	620	601	280	9.5	26
FR500A-2T-045							
FR500A-2T-055	310	200	650	620	350	11.5	45
FR500A-2T-075	400	300	750	724	300	11.5	68
3-Phase:380V, 50/60Hz Range:-15%~+30%							
FR500-4T-0.7G/1.5PB	80 (80)	60 (60)	200 (200)	190 (190)	167 (150)	6	1.34 (1.25)
FR500-4T-1.5G/2.2PB							
FR500-4T-2.2GB							
FR500-4T-2.2G/4.0PB							
FR500-4T-4.0G							
FR500A-4T-4.0G/5.5PB	116.6	106.6	186.6	176.6	175	4.5	2.5
FR500A-4T-5.5G/7.5PB							
FR500A-4T-7.5GB	146	131	249	236	177	5.5	3.9
FR500A-4T-7.5G/011PB							
FR500A-4T-011G/015PB							
FR500A-4T-015G/018PB	198	183	300	287	185	5.5	6.2

## FR500A&FR510A Series Vector Control Inverter

FR500A-4T-018G/022PB							
FR500A-4T-022G/030PB							
FR500A-4T-030G/037PB	245	200	410	391	200	7	11.8
FR500A-4T-037GB							
FR500A-4T-037G/045P	300 (275)	200 (200)	485 (470)	466 (451)	226 (215)	7	15
FR500A-4T-045G/055P							
FR500A-4T-055G/075P							
FR500A-4T-075G/090P	310	200	620	601	280 (262)	9.5	26
FR500A-4T-090G/110P							
FR500A-4T-110G/132P	310 (400)	200 (300)	650 (750)	620 (724)	350 (300)	11.5	45
FR500A-4T-132G/160P							
FR500A-4T-160G/185P							
FR500A-4T-185G/200P	500	300	855	822	370	12	112
FR500A-4T-200G/220P							
FR500A-4T-220G/250P	540	340	924.5	896	380	12	120
FR500A-4T-250G/280P							
FR500A-4T-280G/315P							
FR500A-4T-315G/355P	620	400	996	963	390	12	133
FR500A-4T-355G/400P							
FR500A-4T-400G/450P	700	500	1025. 5	988.5	390	14	195
FR500A-4T-450G							

\*Note:

1. The model of FR510A series inverter only needs to replace FR500A in the above table with FR510A.
2. The data in parentheses in the above table is the size of scheme one.

### 2.6 Flange mounting dimensions

◆ : 4~30kW Flange mounting dimensions

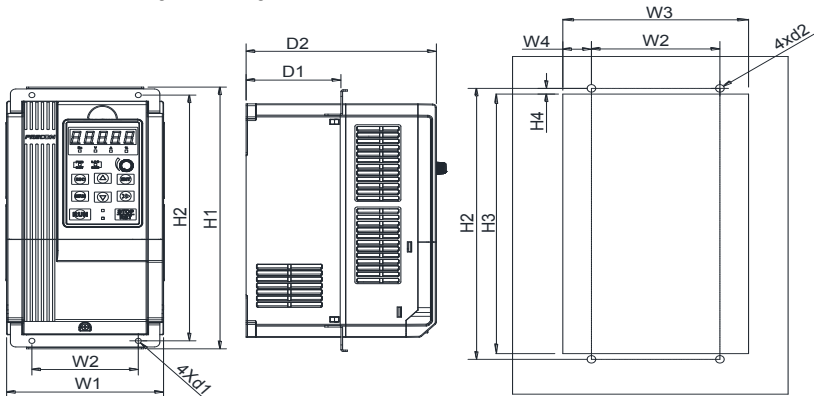


Fig 2-9 4~30kW Flange mounting installation diagram

◆ : 37~55kW, 110~130kW Flange mounting dimensions

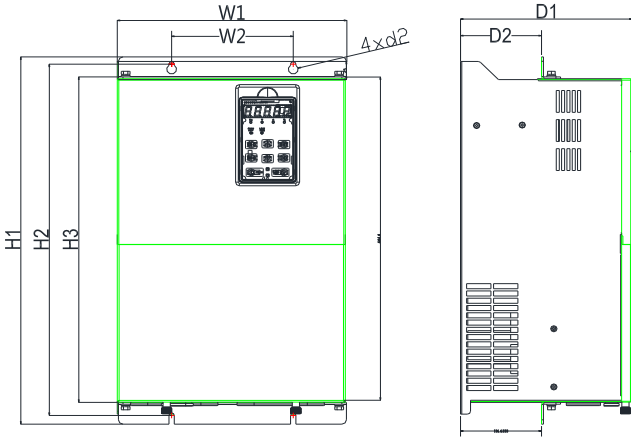


Fig 2-10 37~55kW,110~130kW Flange mounting

◆:75~90kW Flange mounting dimensions

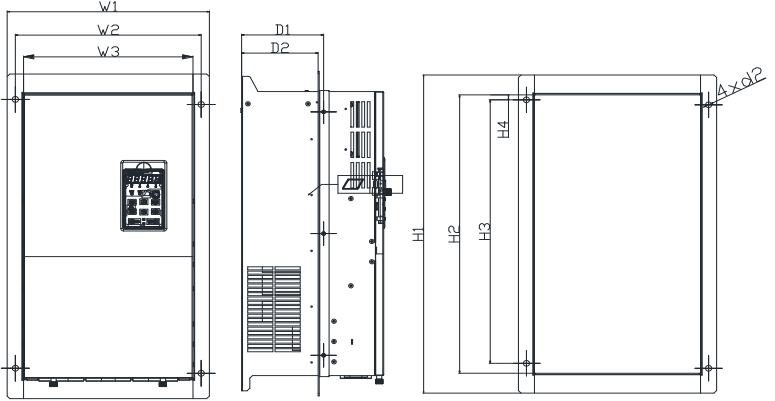


Fig 2-11 75~90kW Flange mounting

Table 2-4 Flange mounting dimensions

Model.NO	External and installation dimensions (mm)											
	W1	W2	W3	W4	H1	H2	H3	H4	D1	D2	d1	d2
3-Phase:380V, 50/60Hz Range:-15%~+30%												
FR500A-4T-4.0G/5.5PB	146	100	147	21	279	262	251	5.5	88	177	5.5	6
FR500A-4T-5.5G/7.5PB												
FR500A-4T-7.5GB												
FR500A-4T-015G/018PB	198	160	199	17	330	313	302	5.5	91	185	5.5	6
FR500A-4T-018G/022PB												
FR500A-4T-022G/030PB												
FR500A-4T-030G/037PB	245	150	245	/	420	370	400	15	113.2	119.2	7.5	/
FR500A-4T-037GB												
FR500A-4T-037G/045PB												
FR500A-4T-045G/055P(B)	303	160	/	/	505	483	448	/	226	107	9.5	/
FR500A-4T-055G/075P(B)												
FR500A-4T-075G/090P(B)												
FR500A-4T-090G/110P(B)	370	340	310	30	640	560	530	30	150	140	/	11.5
FR500A-4T-110G/132P												
FR500A-4T-132G/160P												

\*Note: The model of FR510A series inverter only needs to replace FR500A in the above table with FR510A

2.7 External Dimensions of Keypad

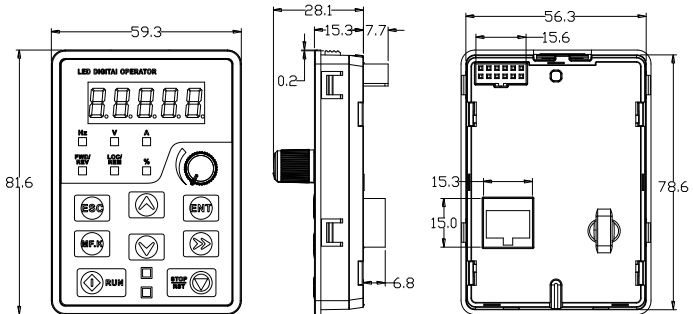


Fig 2-12- 0.7~5.5KW Keyboard size diagram

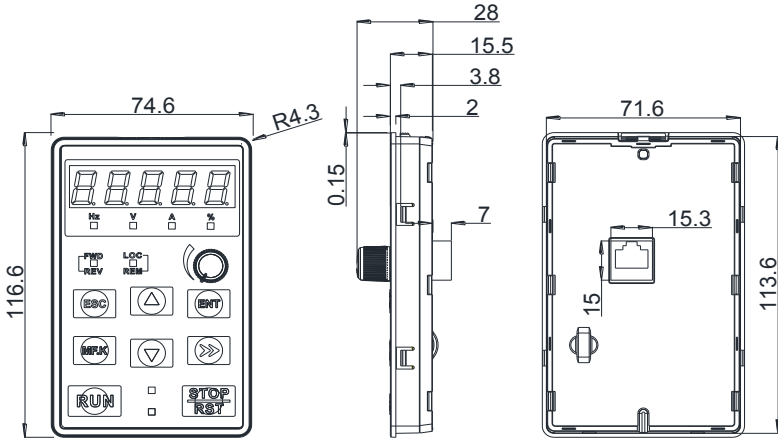


Fig 2-13- 7.5~450KW Keyboard size diagram

External keyboard installation instruction:

1. first install the panel according to inverter's power range corresponding to the size of hole as shown on scheme 2-12,
2. After that insert keyboard pad into the mounting panel and then insert the keyboard module into the keyboard pad. (Before removing the keyboard pad, first remove the keyboard, then remove as shown in the scheme) .

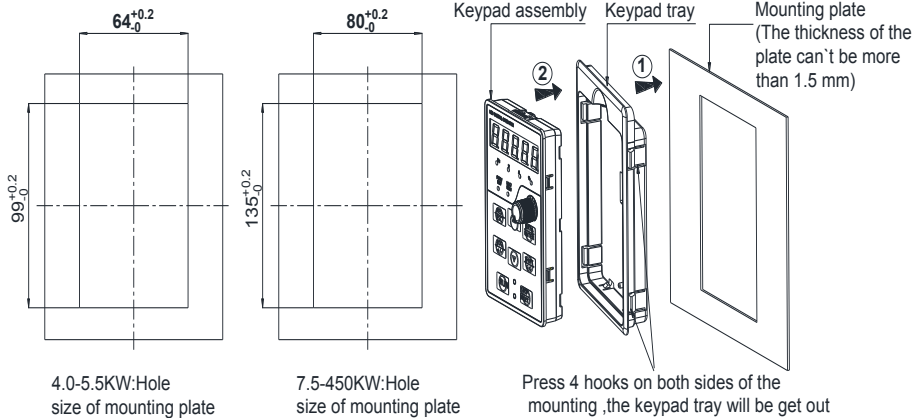


Fig 2-14 4.0~450KW External keyboard installation hole size diagram

## Chapter 3 Installation and Wiring

### 3.1 Installation Environment

- 1) Ambient temperature in the range of  $-10^{\circ}\text{C} \sim 50^{\circ}\text{C}$ .
- 2) Drive should be installed on surface of flame retardant object, with adequate surrounding space for heat dissipation.
- 3) Installation should be performed where vibration is less than  $5.9\text{m/s}^2$  (0.6g).
- 4) Avoid from moisture and direct sunlight.
- 5) Protect the cooling fan by avoiding oil, dust and metal particles;
- 6) Do not expose to an atmosphere with flammable gases, corrosive gases, explosive gases or other harmful gases.
- 7) Prevent drilling residues, wire ends and screws falling into drive.
- 8) Ventilation part of the drive should be installed outside from harsh environment (e.g. Textile facilities with fiber particles and chemical facilities filled with corrosive gases or Loaded dust cover).

### 3.2 Installation Direction, Space and Cooling

A fan is integrated in FR500A&FR510A for forced air cooling. FR500A&FR510A has to be installed vertically for the purpose of good cooling circulation. Sufficient spaces have to be left between FR500A&FR510A and its peripheral objects. Multi- FR500A&FR510A can be installed in parallel horizontally e and vertically. See followings for specific space requirement, heat dissipating capacity and mass airflow.

FR500A&FR510A series inverter installation of the following two:

Wall mounting

Wall-mounted

**Remark:** 4~22kW need to install an optional foot hanging; 18.5~132kW do not need to install an optional foot hanging.

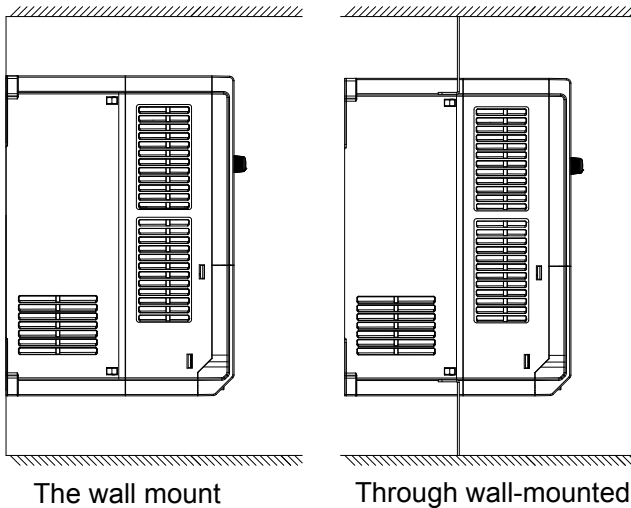


Fig 3-1 Installation methods

3.2.1 Single installation

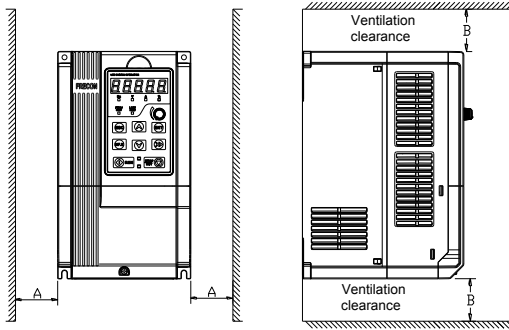


Fig.3-2 Single inverter mounting orientation and space requirements

3.2.2 Multiple installations

a. Multiple parallel installations

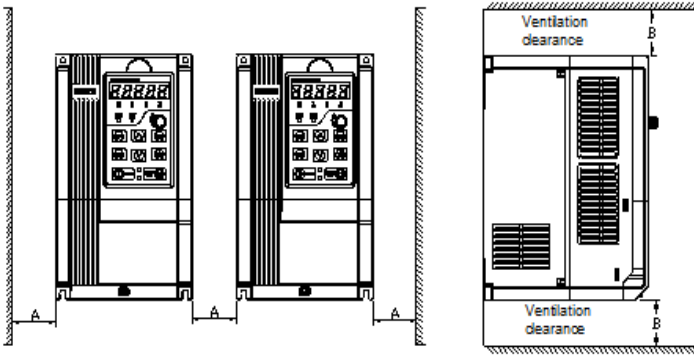


Fig.3-3 multiple inverters installed direction and space requirements

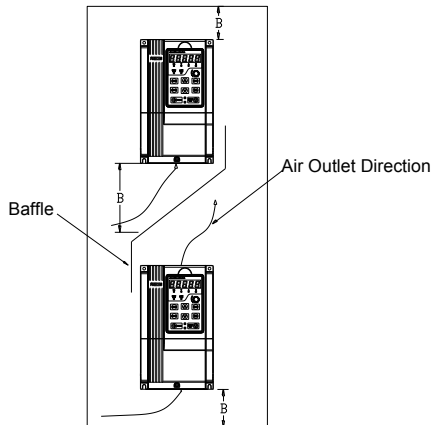


Fig.3-4 Multiple inverters installed Upper and lower mounting direction and space

Table 3-1 Requirement of minimum mounting clearances

Drive model	Mounting clearances (mm)	
	A	B
4~22kW	≥50	≥100

**3.3 Fixed manner**

a. Wall installation

Wall mounting dimensions refer to Chapter II (table 2-3) , As shown in Fig drilling four holes in the mounting surface, Put the inverter against the panel and mate 4 holes, and then tighten screws in the 4 holes tighten any of the 2 screws in diagonal position, tighten 4 holes with screws for strengthened installation.

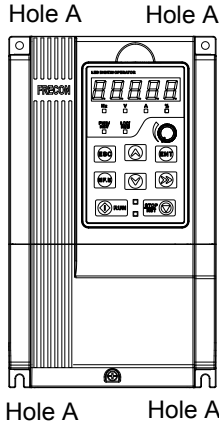


Fig.3-5 Wall mounting

b. Wall mounting

4~22kW Install the drive mounting bracket as shown in FIG 3-6(a). Wall installation dimensions refer to Chapter II (table 2-4) , As shown in Fig drilling four holes in the mounting surface , Put the inverter against the panel and mate 4 holes, and then tighten screws in the 4 holes tighten any of the 2 screws in diagonal position, tighten 4 holes with screws for strengthened installation.

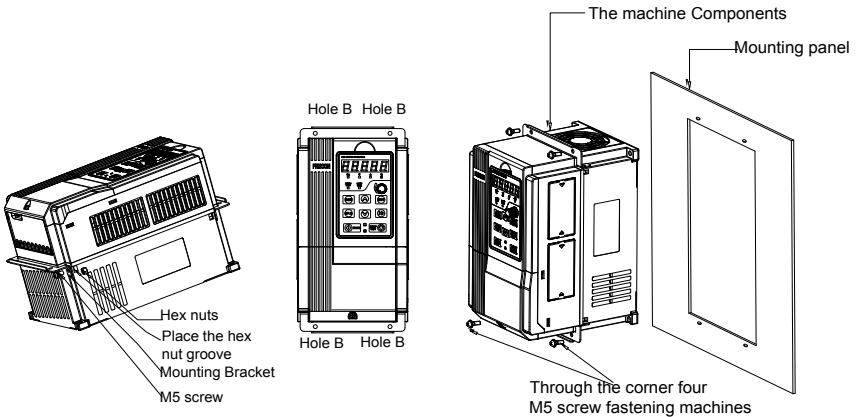


Fig.3-6 4~22kW Wall installation



Do not take the sunken screws as shown in the picture. Otherwise, inverter may be damaged

Take screws combined with springs and plain gaskets to install inverter.

### 3.4 Remove & Mount Keypad and Cover

a. Remove keypad: Disassemble keypad. See following Figure: Push the buckle on the keypad in

Direction 1 first, and then lift up the keypad in Direction 2.

b. Mount keypad: Assemble keypad. See following Figure: Place keypad in the slot in Direction 1, and then press the keypad in Direction 2 until it clicks into right place.

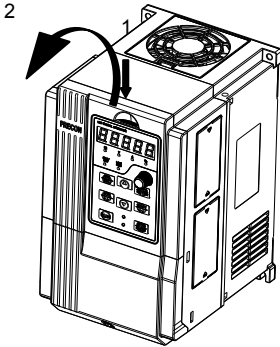


Fig.3-7(a) Remove keypad


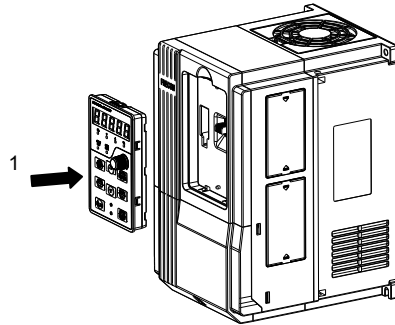



Fig.3-7(b) Mount keypad

c. External remote operation panel operation method: Remove the operation panel as shown in fig 3-7(a), Then connect the crystal head out from the socket, Placed in the side of the graphic fixed card slot, use the wiring operation panel can be used.

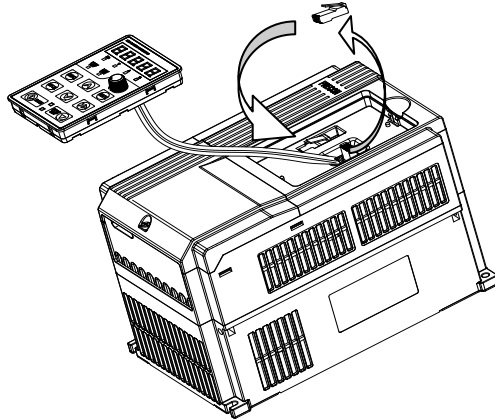

**Fig.3-7(c) External remote operation control panel**

d. Disassembly of Terminal Cover: loosen the captive cover screws as shown in Fig.3-7 (d) , then remove terminal cover in the direction as shown in the Figure below.

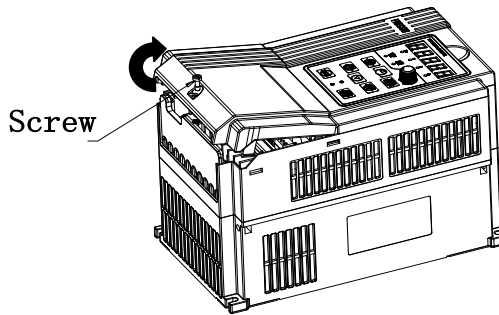

**Fig.3-7(d) Open cover**

e. Assemble keypad: See following Figure: Place the upper buckle of the terminal cover in the slot of upper housing in Direction 1, and then press the two lower buckle of terminal cover in Direction 2 until it clicks into right place of upper housing. , then Tighten the screws as shown in Fig.3-7 (e) .

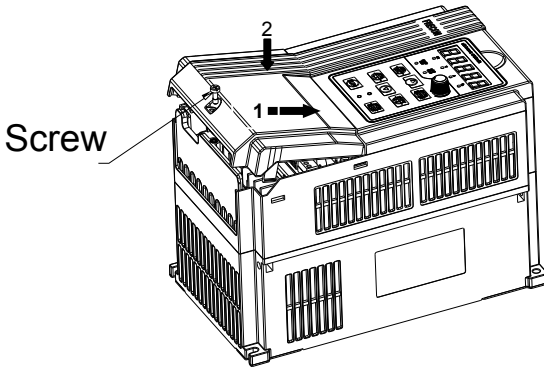


Fig.3-7(e) Mount covers

f. Removing and installing the cover method as shown in fig 3-7(f) :First, loosen the screws Then open the cover up. According to the assembly when the shell shown method to be assembled in place, and then tighten the screws.

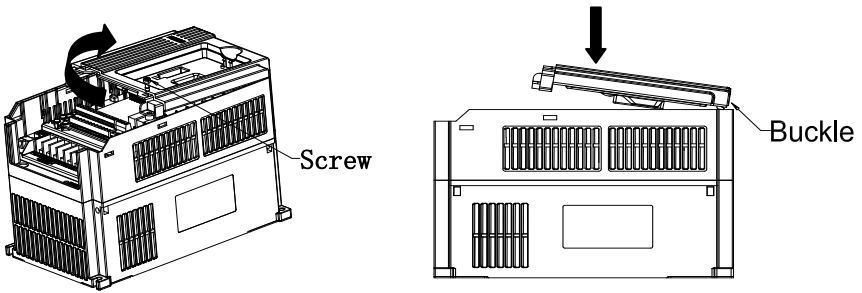


Fig.3-7(f) Disassemble and installation of the cover

g. Stringing board disassembly and installation: Disassemble board first when stringing wire, When connected input and output cables, the Stringing board clicks into place. Referring to fig 3-7(g).

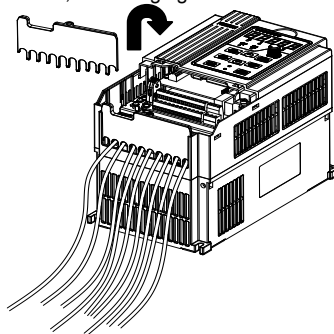


Fig.3-7(g) Stringing board disassembly and installation

### 3.5 Dust cover installation and removal (Optional accessories)

- Install dust cover: The dust cover shown in Fig3-8 parallel to the housing assembly (No cock around is installed) .
- Removing dust cover: cording to the dust cover arrow direction, at one end of the dust cover and hard to lift the dust cover under the desirable.

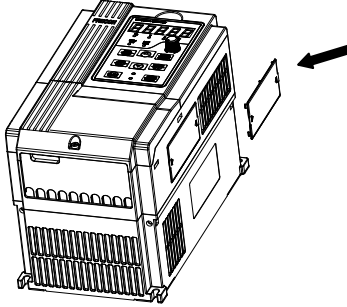


Fig.3-8 Dust cover installation and removal

### 3.6 Configuration of Peripheral Devices

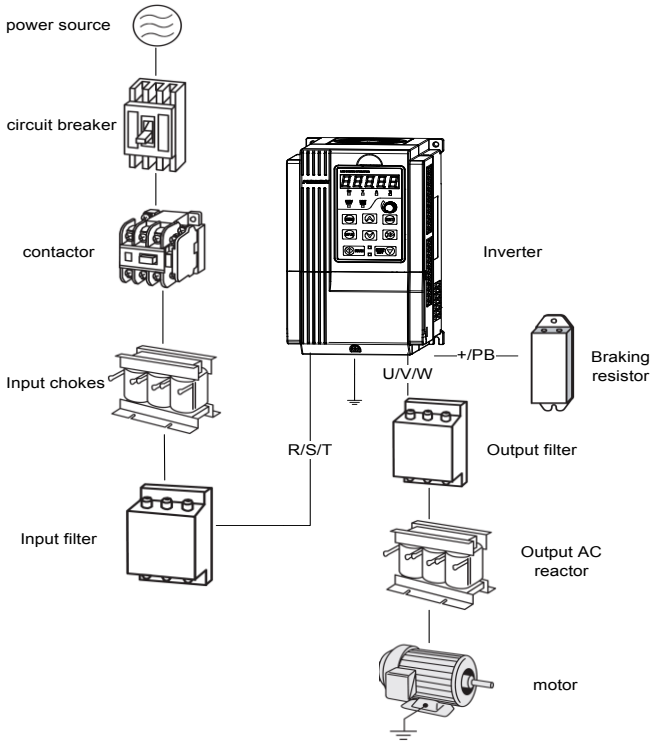









Fig.3-9 Standard configuration of peripheral device

**Table 3-2 Instructions of peripheral devices**

Picture	Device	Instructions
	Cable	Transmitting electrical signals.
	Circuit breaker	Purpose: disconnect power supply and protect the equipments in case of abnormal overcurrent occurs Type selection: breaking current of circuit breaker is defined to be 1.5~2 times the rated current of the drive Breaking time characteristic of circuit breaker should be selected based on <b>overload protection time characteristic of the drive</b>
	Input chokes	Improve power factor Reduce the impact of imbalanced three-phase input AC power supply on the system Suppress higher harmonics and reduce the conducted and radiated interference to peripheral devices Restrict the impact of impulse current on rectifier bridges
	Input filter	Reduce conducted interference from power supply to the drive, improve the immunity of the drive from noise Reduce conducted and radiated interference of the drive to peripheral device
	Braking resistor	Purpose: consume motor feedback energy to attain quick brake
	Output filter	Output filter and radiated interference of the drive to peripheral devices
	Output AC reactor	Avoid the motor insulation damage result from harmonic voltage Reduce frequent protection from the drive caused by leakage current In case the cable connecting drive and motor is over 50 meters, output AC reactor recommended

**3.6.1 Selection of Peripheral Devices**

**Table 3-3 Selection of peripheral devices**

Model.NO	Circuit breaker (A)	Contactors (A)	Power terminals Cable Specifications (mm <sup>2</sup> )	Ground terminal cable (mm <sup>2</sup> )	Terminal screws Specifications
3-Phase:380V, 50/60Hz Range:-15%~+30%					
FR500A-4T-2.2G/4.0PB	25	16	4.0	4.0	M4
FR500A-4T-4.0G/5.5PB	32	25	4.0	4.0	M4
FR500A-4T-5.5G/7.5PB	40	32	4.0	4.0	M4
FR500A-4T-7.5GB	40	32	4.0	4.0	M4
FR500A-4T-7.5G/011PB	63	40	6.0	6.0	M4
FR500A-4T-011G/015PB	63	40	6.0	6.0	M5
FR500A-4T-015G/018PB	100	63	10	10	M5
FR500A-4T-018G/022PB	100	63	10	10	M5
FR500A-4T-022G/030PB	100	63	16	10	M6
FR500A-4T-030G/037PB	160	100	16	16	M6

## FR500A&FR510A Series Vector Control Inverter

FR500A-4T-037GB	160	100	16	16	M6
FR500A-4T-037G/045P(B)	200	125	25	16	M8
FR500A-4T-045G/055P(B)	200	125	35	25	M8
FR500A-4T-055G/075P(B)	250	160	50	25	M10
FR500A-4T-075G/090P(B)	250	160	70	35	M10
FR500A-4T-090G/110P(B)	350	350	120	60	M10
FR500A-4T-110G/132P	400	400	150	75	M12
FR500A-4T-132G/160P	500	400	185	95	M12
FR500A-4T-185G/200P	600	600	185	95	M10
FR500A-4T-200G/220P	600	600	150*2	150	M10
FR500A-4T-220G/250P	600	600	150*2	150	M12
FR500A-4T-250G/280P	800	600	185*2	95*2	M12
FR500A-4T-280G/315P	800	800	185*2	95*2	M12
FR500A-4T-315G/355P	800	800	150*3	75*3	M16
FR500A-4T-355G/400P	800	800	150*4	75*4	M16
FR500A-4T-400G/450P	1000	1000	150*4	75*4	M16
FR500A-4T-450G	1200	1200	180*4	90*4	M16

**\*Note: The model of FR510A series inverter only needs to replace FR500A in the above table with FR510A**

### 3.6.2 Reactor

In order to prevent high grid power to the input power circuit of inverter and damage the rectifier components, need to install AC reactor in input side of inverter, and it can also improve the input power factor

When the motor cable is over 50 meters, because of the higher leakage current due to the capacitance effect of long cable to the grounding, inverter will occur over current protection frequently, meanwhile to avoid motor insulation damage, need to install output reactor for the compensation.

DC reactor can improve power factor, avoid rectifier damage caused by higher input current, and avoid the rectifier circuit damage by the harmonic due to the grid power surge or phase controlled load.

**Fig 3-4 Reactor**

Inverter Power	Input Reactor	DC Reactor	Output Reactor
4.0kw	ACL-4T-4.0	/	OCL-4T-4.0
5.5kw	ACL-4T-5.5	/	OCL-4T-5.5
7.5kw	ACL-4T-7.5	/	OCL-4T-7.5
11kw	ACL-4T-011	/	OCL-4T-011
15kw	ACL-4T-015	/	OCL-4T-015
18.5kw	ACL-4T-018	/	OCL-4T-018
22kw	ACL-4T-022	/	OCL-4T-022
30kw	ACL-4T-030	/	OCL-4T-030
37kw	ACL-4T-037	/	OCL-4T-037
45kw	ACL-4T-045	/	OCL-4T-045
55kw	ACL-4T-055	/	OCL-4T-055
75kw	ACL-4T-075	/	OCL-4T-075
90kw	ACL-4T-090	/	OCL-4T-090
110kw	ACL-4T-110	External optional	OCL-4T-110
132kw	ACL-4T-132	External optional	OCL-4T-132

## FR500A&FR510A Series Vector Control Inverter

160kw	ACL-4T-160	External optional	OCL-4T-160
185kw	ACL-4T-185	External optional	OCL-4T-185
200kw	ACL-4T-200	External optional	OCL-4T-200
220kw	ACL-4T-220	External optional	OCL-4T-220
250kw	ACL-4T-250	External optional	OCL-4T-250
280kw	ACL-4T-280	External optional	OCL-4T-280
315kw	ACL-4T-315	External optional	OCL-4T-315
355kw	ACL-4T-355	External optional	OCL-4T-355
400kw	ACL-4T-400	External optional	OCL-4T-400
450kw	ACL-4T-450	External optional	OCL-4T-450

### Note:

1. Input reactor, input rated voltage drop  $2\% \pm 15\%$ ; Output reactor, input rated voltage drop  $1\% \pm 15\%$ .

2. Input and output reactors are external and optional.

### 3.6.3 Filter

Input filter: Can reduce the wire interference caused from the inverter to other peripheral equipments.

Output filter: Can reduce the radio noise and leakage current caused by the motor cable.

**Fig 3-5 Filter**

Inverter Power	Input Filter	Output Filter
4.0kw	FLT-4T-P010	FLT-4T-L010
5.5kw	FLT-4T-P020	FLT-4T-L020
7.5kw		
11kw	FLT-4T-P036	FLT-4T-L036
15kw		
18.5kw	FLT-4T-P065	FLT-4T-L065
22kw		
30kw		
37kw	FLT-4T-P100	FLT-4T-L100
45kw		
55kw	FLT-4T-P150	FLT-4T-L150
75kw		
90kw	FLT-4T-P250	FLT-4T-L250
110kw		
132kw		
160kw	FLT-4T-P400	FLT-4T-L400
185kw		
200kw		
220kw	FLT-4T-P600	FLT-4T-L600
250kw		
280kw		
315kw		
355kw	FLT-4T-P900	FLT-4T-L900
400kw		
450kw		

**Note:**

1. Can meet EMI C2 after installing input filter.
2. Input and output filter are external and optional.

**3.7 Wiring way**

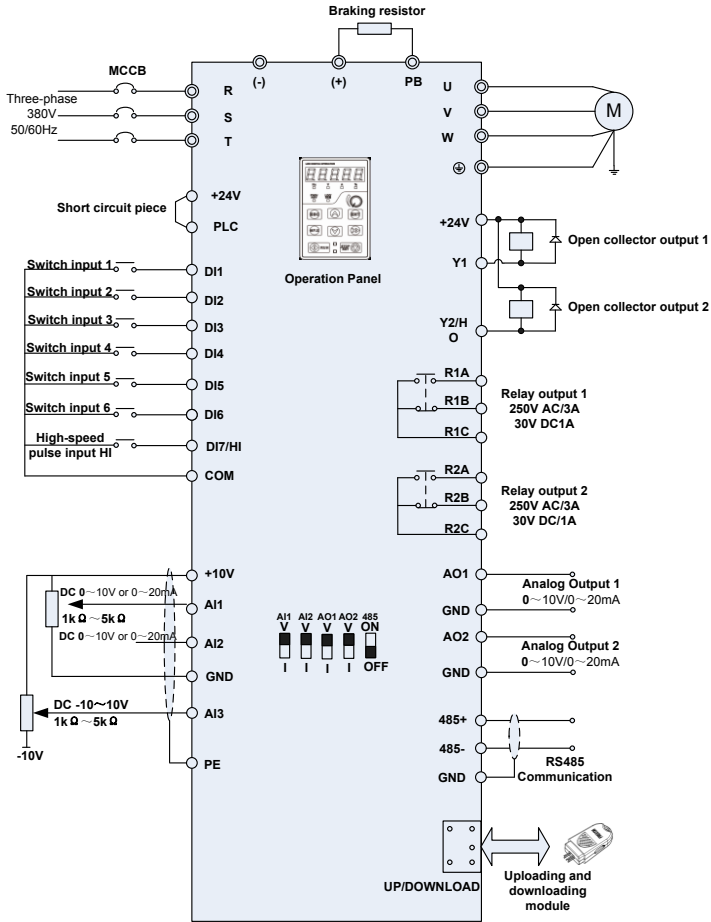


Fig.3-10 FR510A Inverter wiring diagram

**Remarks:**

- 1) ◎ refers to main circuit terminals., ○ refers to control circuit terminals.
- 2) User selects braking resistor based on real needs, Please refer to the braking resistor Selection Guide.
- 3) Signal cable and power cable should be separated. Try to cross control cable and power cable in 90° if needed. The best selection of analog signal lines shielded twisted pair, Power cables use shielded three-core cable(The specifications of the motor cable than ordinary freshman profile)or Comply with manual drive.

### 3.8 Terminal Configuration

#### 3.8.1 Main Circuit Terminals

◆0.7~2.2KW Main Circuit Terminals

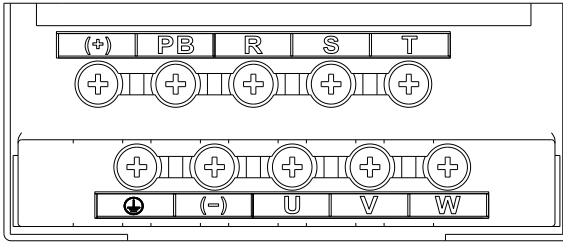


Fig.3-11 0.7~2.2kW Schematic of main circuit terminals

◆4~5.5KW Main Circuit Terminals

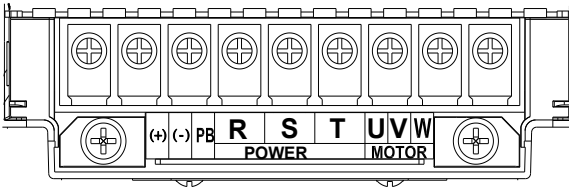


Fig.3-12 4~5.5kW Schematic of main circuit terminals

◆7.5~22KW Main Circuit Terminals

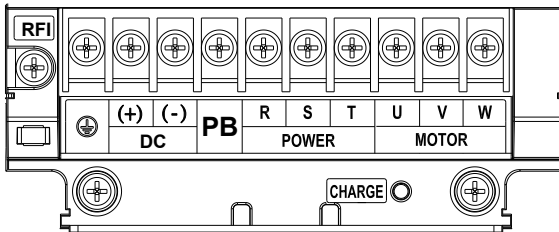


Fig.3-13 7.5~22kW Schematic of main circuit terminals

◆30~37KW Main Circuit Terminals

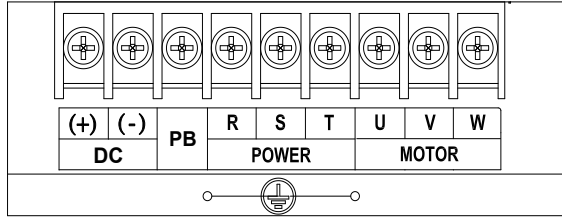


Fig.3-14 30~37kW Schematic of main circuit terminals

◆45~90KW Main Circuit Terminals:

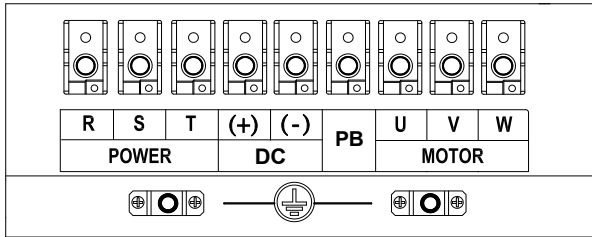


Fig.3-15 45~90kW Schematic of main circuit terminals

◆110~132KW , 250~280KW ,315~450KW Main Circuit Terminals:

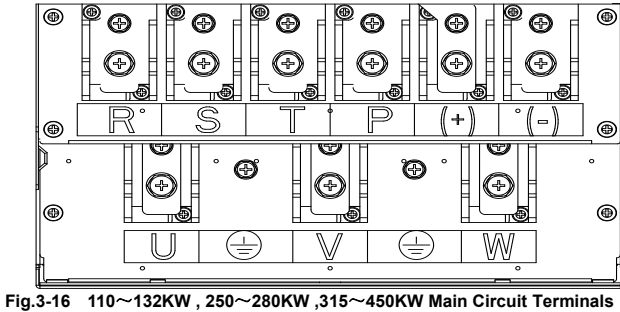


Fig.3-16 110~132KW , 250~280KW ,315~450KW Main Circuit Terminals

# FR500A&FR510A Series Vector Control Inverter

## ◆160~220KW Main Circuit Terminals:

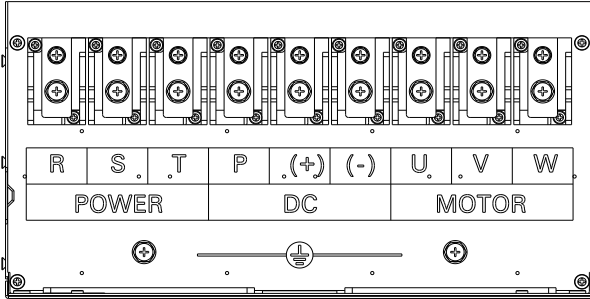


Fig.3-16 160~220KW Main Circuit Terminals

Main circuit terminal functions

Terminal marks	Designation and function of terminals.
R, S, T	AC power input terminals for connecting to 3-phase AC380V power supply.
U, V, W	AC output terminals of inverter for connecting to 3-phase induction motor.
(+), (-)	Positive and negative terminals of internal DC bus.
PB	Positive and negative terminals of internal DC bus. Connecting terminals of braking resistor. One end connected to + and the other to PB.
⊕	Grounding terminal.

**Remarks:** No phase sequence requirements on wiring of the input side of inverter. Wiring

Precautions:

1) Power input terminals R/L1, S/L2, T/L3

◆ The cable connection on the input side of the AC drive has no phase sequence requirement.

2) DC bus (+), (-)

◆ Terminals (+) and (-) of DC bus have residual voltage after the AC drive is switched off. After indicator CHARGE goes off, wait at least 10 minutes before touching the equipment. Otherwise, you may get electric shock.

◆ Do not connect the braking resistor directly to the DC bus. Otherwise, it may damage the AC drive and even cause fire.

3) Braking resistor connection terminals (+), PB

◆ The cable length of the braking resistor shall be less than 5 m. Otherwise, it may damage the AC drive.

4) AC drive output terminals U/T1, V/T2, W/T3

◆ The capacitor or surge absorber cannot be connected to the output side of the AC drive. Otherwise, it may cause frequent AC drive fault or even damage the AC drive.

If the motor cable is too long, electrical resonance will be generated due to the impact of distributed capacitance. This will damage the motor insulation or generate higher leakage current, causing the AC drive to trip in overcurrent protection. If the motor cable is greater than 50m long, an AC output reactor must be installed close to the AC drive.

5) Terminal ⊕ PE

◆ This terminal must be reliably connected to the main earthing conductor. Otherwise, it may cause electric shock, mal-function or even damage to the AC drive.

◆ Do not connect the earthing terminal to the neutral conductor of the power supply.

## 3.8.2 Control circuit terminals

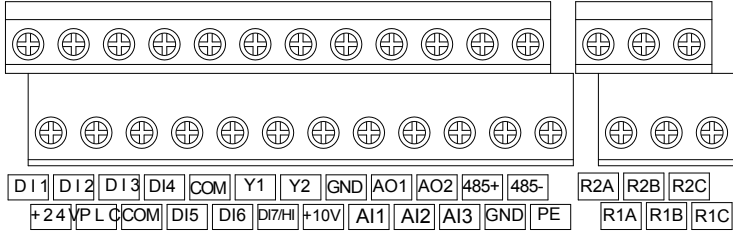



Fig.3-17 Control circuit terminals

Table 3-7 Description of control circuit terminals

Type	Terminal	Name	Function Description
Power supply	+10V-GND	External +10 V power supply	Provide +10 V power supply to external unit. Generally, it provides power supply to external potentiometer with resistance range of 1–5 k $\Omega$ . Maximum output current: 10 mA
	+24V-COM	External +24V power supply Applying to Overvoltage Category II circuit	Provide +24 V power supply to external unit. Generally, it provides power supply to DI/Do terminals and external sensors. Maximum output current: 200 mA
	PLC	Input terminal of external power supply	Connect to +24 V by default. When DI1-DI7 need to be driven by external signal, PLC needs to be connected to external power supply and be disconnected from +24 V.
Analog input	AI1-GND	Analog input 1	Input voltage range: DC 0~10V/0~20mA, decided by toggle switches AI1, AI2 on the control board Impedance: 250 k $\Omega$ (voltage input), 250 $\Omega$ (current input)
	AI2-GND	Analog input 2	
	AI3-GND	Analog input 3	Input Voltage Range: DC -10~+10V Input impedance:250k $\Omega$
Switch input	DI1- COM	Switch input terminals 1	Maximum input frequency:200Hz Impedance:2.4k $\Omega$ Voltage range for level input:9V~30V
	DI2- COM	Switch input terminals 2	
	DI3- COM	Switch input terminals 3	
	DI4- COM	Switch input terminals 4	
	DI5- COM	Switch input terminals 5	
	DI6- COM	Switch input terminals 6	
	DI7/Hi-COM	Switch input terminals 7 OR High-speed pulse input	Besides features of DI1–DI6, it can be used for high-speed pulse input. Maximum input frequency: 100 kHz
Analog output	AO1-GND	Analog output terminal 1	Output voltage range:DC 0~10V/0~20mA, decided by toggle switches

# FR500A&FR510A Series Vector Control Inverter

	AO2-GND	Analog output terminal 2	AO1, AO2 on the control board Impedance requirements $\geq 10k\Omega$
Switch output	Y1-COM	Open collector output 1	Voltage range: 0~24V Current range: 0~50mA
	Y2/HO-COM	Open collector output 2 OR High-speed pulse output	Besides features of Y1, it can be used for High-speed pulse output channels. The maximum output frequency: 100kHz
Relay output	R1A-R1C	Normally open terminal	Contact driving capacity: AC250V, 3A, COS $\phi$ =0.4. DC 30V, 1A
	R1B-R1C	Normally closed terminal	
	R2A-R2C	Normally open terminal	
	R2B-R2C	Normally closed terminal	
485 Communication	485+ -485-	485 Communication Terminals	Rate: 4800/9600/19200/38400/57600/ 115200bps Termination resistor is set by the toggle switch on the control panel RS485
	GND	485 Communication shielded ground	
Shield	PE	Shield Ground	Ground terminal for shield
Auxiliary Interface		External operation panel interface	Use standard network cable Maximum cable distance: 50m

## Description of Wiring of Signal Terminals:

### 1) Description Use the analog input terminal

Weak analog voltage signals are easy to suffer external interference, and therefore the shielded cable must be used and the cable length must be less than 20 m, as shown in following figure. When the analog input signal to an external power supply, AI1 Terminal wiring as shown in Fig 3-12

- (a) .When the input analog voltage signal is potentiometer, AI1 Terminal wiring as shown in Fig 3-12
- (b) AI2/AI3 Similar to AI1.

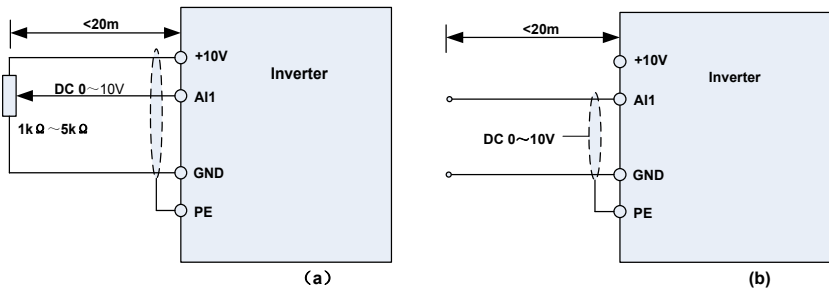


Fig.3-16 Analog input terminal wiring diagram

### 2) Instructions of Digital Input/output Terminals

Digital input & output signals cables should be as short as possible, shielded, and their shielded layers should be properly grounded close to the side of drive. The cables should not exceed 20m.

When active drive is selected, take necessary filtering measures against power crosstalk, for which dry contact control is recommended.

Control cables shall be kept no less than 20cm away from main circuit and strong current lines (e.g. power lines, motor lines, relay lines and contactor lines) and should not be arranged in parallel with strong current lines. In case it is inevitable to intersect strong current line, vertical wiring is

recommended to avoid drive faults as a result of noise. Operating instructions for switching value input terminal

◆A: Dry contact

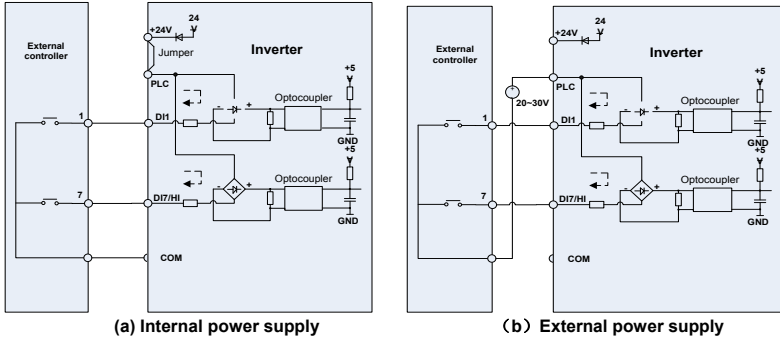


Fig.3-18 Dry contact

**ATTENTION:**

When external power supply is used, the jumper between +24V and PLC must be removed. Otherwise, it may result in equipment damage.

The voltage range of external power supply should be DC20~30V. Otherwise, normal operation could not be assured and/or result in equipment damage.

◆B: Open collector NPN connection


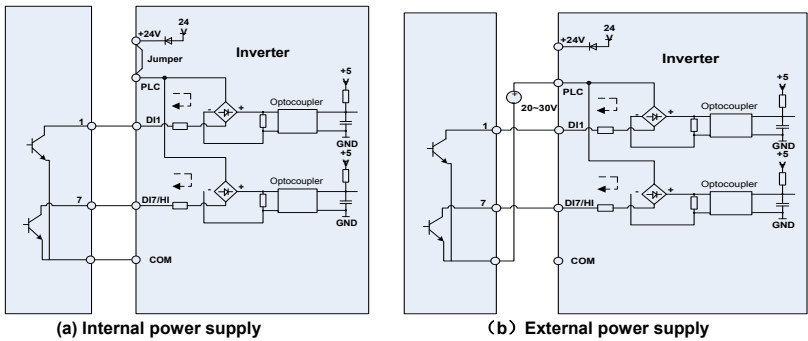


Fig.3-19 External power supply open collector NPN connection

**ATTENTION:**

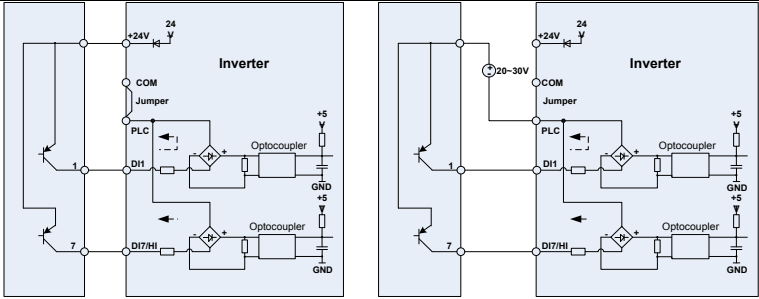When external power supply is utilized, the jumper between +24V and PLC must be removed. The voltage range of external power supply should be DC20~30V, otherwise normal operation could not be assured and/or hazard of equipment damage exists.

◆C: Open collector PNP connection




(a) Internal power supply

(b) External power supply

Fig.3-20 internal power supply open collector PNP connection

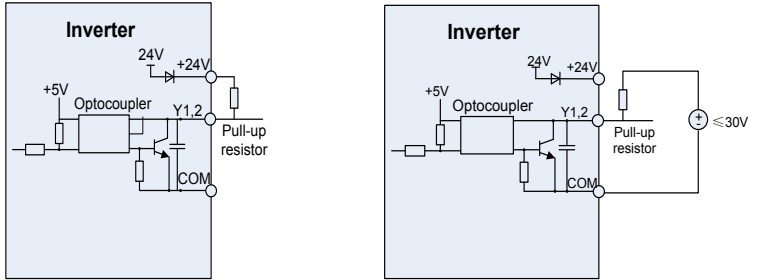3) Instructions of digital output terminal




(a) Internal power supply

(b) External power supply

Fig.3-21 wiring when Y2 and HO output with pull-up resistors

ATTENTION:

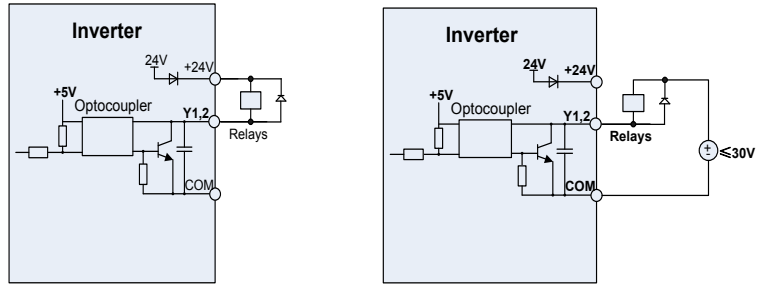When set to be pulse output, Y2/HO terminal shall output 0~100kHz pulse signal.



(a) Internal power supply

(b) External power supply

Fig 3-22 mode of connection when the terminal drives relay

ATTENTION:

When relay coil voltage is lower than 24V, a resistor as voltage divider should be mounted between relay and output terminal, based on coil impedance.

4) Wiring instruction of relay output terminal

Control boards of FR500A&FR510A series drives are provided with two programmable relay dry contact outputs. One relay contacts are R1A/R1B/R1C, whose R1A and R1C are normally open, while R1B and R1C are normally closed. See parameter F05.02 for details.

The others contacts are R2A /R2B/R2C, whose R2A and R2C are normally open, while R2B and R2C are normally closed. See parameter F05.03 for details.

ATTENTION:

In case inductive load (e.g. electromagnetic relay or contactor) is to be driven, a surge voltage

absorbing circuit such as RC absorbing circuit (note that its leakage current shall be less than holding current of controlled contactor or relay), piezoresistor or fly-wheel diode etc. shall be mounted (be sure to pay close attention to polarity in case of DC electromagnetic circuit). Absorbing devices should be mounted close to the ends of relay or contactor.

5) Instruction of Signal Switch



Terminal	Function	Factory default
AI1	I: current input (0~20mA); V: voltage input (0~10V)	0~10V
AI2	I: current input (0~20mA); V: voltage input (0~10V)	0~10V
AO1	I: current output (0~20mA); V: voltage output (0~10V)	0~10V
AO2	I: current output (0~20mA); V: voltage output (0~10V)	0~10V
RS485	Selection of 485 termination resistor; ON :120Ω termination resistor provided; OFF: no termination resistor	No termination resistor

3.8.3 RFI Short wiring instructions

If the AC motor drive is supplied from an isolated power (IT power), the RFI jumper must be cut off. Then the RFI capacities (filter capacitors) will be disconnected from ground to prevent circuit damage (according to IEC 61800-3) and reduce earth leakage current.

4.0~22kW RFI jumper method: Screw matter is jumped state, release is not jumped state


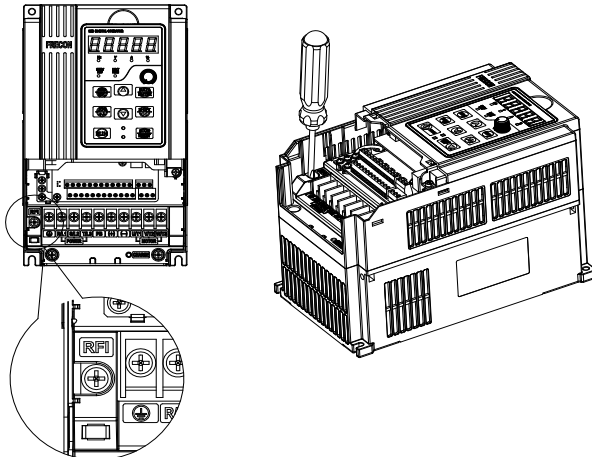


Fig.3-23 4.0~22kW RFI jumper schematic

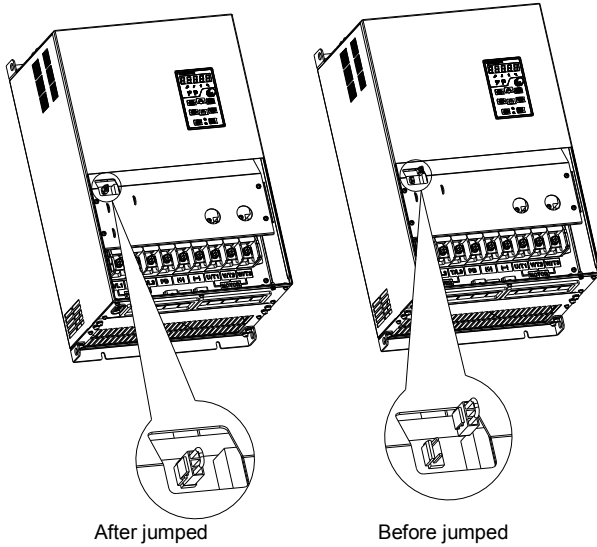

After jumped

Before jumped

Fig.3-24 30kW above RFI jumper schematic

**ATTENTION:**

1. When power is applied to the AC motor drive, do not cut off the RFI jumper.
2. Make sure main power is switched off before cutting the RFI jumper.
3. The gap discharge may occur when the transient voltage is higher than 1,000V. Besides, electro-magnetic compatibility of the AC motor drives will be lower after cutting the RFI jumper.
4. Do NOT cut the RFI jumper when main power is connected to earth.
5. The RFI jumper cannot be cut when Hi-pot tests are performed. The mains power and motor must be separated if high voltage test is performed and the leakage currents are too high.
6. To prevent drive damage, the RFI jumper connected to ground shall be cut off if the AC motor drive is installed on an ungrounded power system or a high resistance-grounded (over 30 ohms) power system or a corner grounded TN system.

**3.9 EMI Solutions**

Due to its working principle, the drive will inevitably produce certain noise that may influence and disturb other equipment. Moreover, since the internal weak electric signal of drive is also susceptible to the interference of drive itself and other equipment, EMI problems shall be inevitable. In order to reduce or avoid the interference of drive to external environment and protect drive against interference from external environment, this section makes a brief description of noise abatement, ground handling, leakage current suppression and the application of power line filters.

**3.9.1 Noise Abatement**

When peripheral equipment and drive share the power supply of one system, noise from drive may be transmitted to other equipment in this system via power lines and result in misoperation and/or faults. In such a case, the following measures could be taken:

- 1) Mount input noise filter at input terminal of the drive;
- 2) Mount power supply filter at power input terminal of affected equipment;
- 3) Use isolation transformer to isolate the noise transmission path between other equipment and the drive.

As the wiring of peripheral equipment and drive constitutes a circuit, the unavoidable earthing leakage current of inverter will cause equipment misoperation and/or faults.

Disconnect the grounding connection of equipment may avoid this misoperation and/or faults

Sensitive equipment and signal lines shall be mounted as far away from drive as possible.

Signal lines should be provided with shielded layer and reliably grounded. Alternatively, signal cable could be put into metallic conduits between which the distance shall be no less than 20cm, and shall be kept as far away from drive and its peripheral devices, cables as possible. Never make signal lines in parallel with power lines or bundle them up.

- Signal lines must orthogonally cross power lines if this cross inevitable.
- Motor cables shall be placed in thick protective screen like more than 2mm thick pipelines or buried cement groove, also, power lines can be put into metallic conduit and grounded well with shielded cables.
- Use 4-core motor cables of which one is grounded at close side of the drive and the other side is connected to motor enclosure.
- Input and output terminals of drive are respectively equipped with radio noise filter and linear noise filter. For example, ferrite common mode choke can restrain radiation noise of power lines.

### 3.9.2 Grounding

Recommended ground electrode is shown in the figure below:

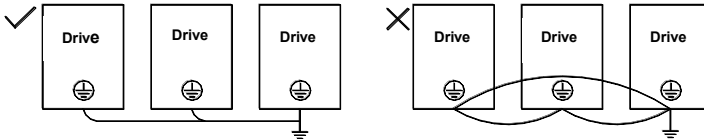


Fig 3-25 Inverter grounding diagram

Use to the fullest extent the maximum standard size of grounding cables to reduce the impedance of grounding system;

Grounding wires should be as short as possible;

Grounding point shall be as close to the drive as possible;

One wire of 4-core motor cables shall be grounded at the drive side and connected to grounding terminal of motor at the other side. Better effect will be achieved if motor and drive are provided with dedicated ground electrodes;

When grounding terminals of various parts of system are linked together, leakages current turns into a noise source that may influence other equipment in the system, thus, grounding terminals of the drive and other vulnerable equipment should be separated.

- Grounding cable shall be kept away from inlet & output of noisesensitive equipment.

### 3.9.3 Leakage Current Suppression

Leakage current passes through the line-to-line and ground distributed capacitors at input & output sides of drive, and its size is associated with the capacitance of distributed capacitor and the carrier frequency. Leakage current is classified into ground leakage current and line-to-line leakage current.

Ground leakage current not only circulates inside drive system, but may also influence other equipment via ground loop. Such a leakage current may result in malfunction of RCD and other equipment. The higher the carrier frequency of drive is, the bigger the ground leakage current would be. The longer the motor cables and the bigger the parasitic capacitances are, the bigger the ground leakage current would be. Therefore, the most immediate and effective method for suppression of ground leakage current is to reduce carrier frequency and minimize the length of motor cables.

The higher harmonics of line-to-line leakage current that pass through between cables at output side of drive will Accel the aging of cables and may bring about malfunction of other equipment. The higher the carrier frequency of drive is, the bigger the line-to-line leakage current would be. The longer the motor cables and the bigger the parasitic capacitances are, the bigger the line-to-line leakage current would be. Therefore, the most immediate and effective method for suppression of ground leakage current is to reduce carrier frequency and minimize the length of motor cable. Line-to-line leakage current can also be effectively suppressed by mounting additional output reactors.

### 3.9.4 Use of Power Supply Filter

Since AC drives may generate strong interference and are also sensitive to outside interference, power supply filters are recommended. Pay close attention to the following instructions during the use:

Enclosure of the filter needs to be reliably grounded;

Input lines of the filter shall be kept as far away from output lines as possible so as to avoid mutual coupling;

Filter shall be as close to the drive side as possible;

Filter and drive must be connected to the same common ground.

## Chapter 4 Operation and display

### 4.1 Introduction of Keypad

As a human-machine interface, you can modify the parameters, monitor the working status and start or stop the inverter by operating the keypad. Its appearance and function area as shown in the following figure:













Fig.4-1 Keypad

#### 4.1.1 Key and potentiometer Functions on keypad

There are 8 keys and a potentiometer on the keypad, whose functions are as shown in Table 4-1.



Table 4-1 Key functions on keypad

Symbol	Name	Function
	Escape	Enter or exit Level I menu
	Enter	Enter the menu interfaces level by level, and confirm the parameter setting
	Increment	Increase data or function code
	Decrement	Decrease data or function code
	Shift	Select the displayed parameters in turn in the stop or running state, and select the digit to be modified when modifying parameters
	Multifunction	Perform function switchover (such as jog run and quick switchover of command source or direction) according to the setting of F16.00
	potentiometer	With the same function as AI1/AI2
	Run	Start the inverter in the keypad control mode
	Stop/Reset	Stop the inverter when it is in the running state and perform the reset operation when it is in the fault state. The functions of this key are restricted in F16.01.
	Key combinations	The inverter will free stop when the run and stop key are pressed simultaneously

### 4.1.2 Keypad Indicators

There are 8 Indicators on the keypad, whose descriptions are as shown in Table 4-2.

**Table 4-2 Description of indicators**

Indicator		Name	Meaning
Unit	Hz	Frequency	ON: currently displayed parameter is frequency
	V	Voltage	ON: currently displayed parameter is voltage
	A	Current	ON: currently displayed parameter is current
	%	Percentage	ON: currently displayed parameter is percentage
	All off	Other unit	Other unit or no unit
State	FWD/REV	Forward or reverse	ON: the drive is running reverse OFF: the drive is running forward Flash: dormant state
	LOC/REM	Keypad, terminals or communication	ON: Terminal control OFF: Keypad control Flash: Communication control
	 (Green border)	Running state	ON: Running state OFF: Stopped state Flash: In process of stop
	 (Red border)	Fault state	ON: Fault state OFF: Normal state Flash: Warning state

### 4.1.3 Keypad digital display

The keypad has five LED (digital) display, it can display a given frequency, output frequency and other parameters, monitoring data and alarm code. Table 4-3 shows meanings of the characters displayed on Keypad.

**Table 4-3 Meanings of displayed characters**

Displayed character	Character Meaning	Displayed character	Character Meaning	Displayed character	Character Meaning	Displayed character	Character Meaning
0	0	A	A	I	I	S	S
1	1	b	b	J	J	T	T
2	2	C	C	K	K	t	t
3	3	c	c	L	L	U	U
4	4	d	d	N	N	u	u
5	5	E	E	n	n	y	y
6	6	F	F	o	o	-	-
7	7	G	G	P	p	8.	8.
8	8	H	H	q	q	.	.
9	9	h	h	r	r		

### 4.1.4 Message status

A message appears when the state of completion of certain operations. Prompt message characters and their meanings are specified in Table 4-4.

Table 4-4 Prompt characters

Prompt symbol	Meaning	Prompt symbol	Meaning
Err00~Err99	Fault type	TUNE	Motor parameter identification in process
A00~A99	Alarm type	-END-	Write parameter

**4.2 Viewing and Modifying Function Codes**

The keypad of the FR500A&FR510A adopts three-level menu.

The three-level menu consists of function code group (Level I), function code (Level II), and function code setting value (level III), as shown in the figure 4-2.

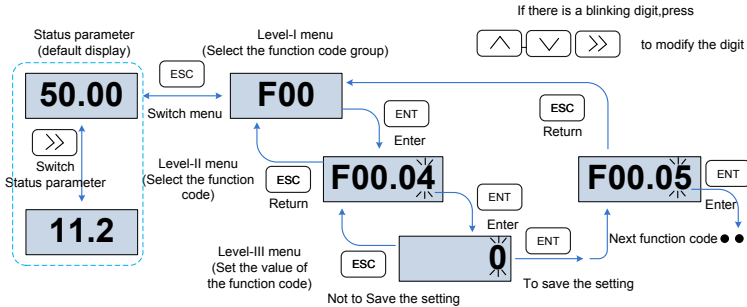


Fig.4-3 Operation procedure on the keypad

Explanation: In the level III menu, you can press the ESC key or ENT key to return to the level II menu. The difference is: If you do not have to modify the function code setting, press ENT will be automatically transferred to the next function code; if the function code settings are modified, it will display menu "-END-" 1 second when press ENT key, and redisplay the current function code settings, and it will be automatically transferred to the next function code when press the ENT key again. Press the ESC key to abandon the current parameter changes directly returns the current function code in level II.

Here is an example of changing the value of F01.02 to 15.00 Hz.

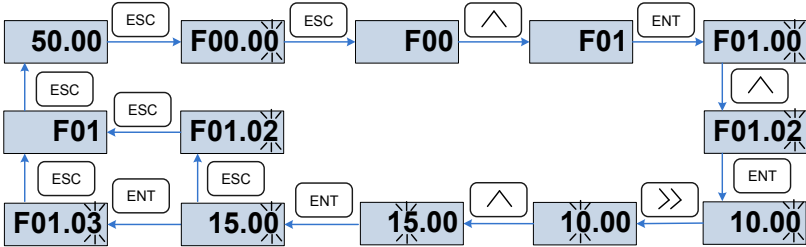


Fig.4-4 Example of changing the parameter value

In Level III menu, if the parameter has no blinking digit, it means that the parameter cannot be modified. This may be because:

- (1) Such a function code is only readable, such as, AC drive model, actually detected parameter and running record parameter.
- (2) Such a function code cannot be modified in the running state and can only be changed at stop.

**4.3 Viewing Status Parameters**

There are stop state parameters and running state parameters.

It has 4 status parameters in the stop or running state. You can press ">>" on the keypad to display status parameters. Which parameters are displayed is determined by the values of F16.03~F16.06 (Running state parameters 1~4), F16.07~F16.10 (stop state parameters 1~4), it can select the U00 group.

## 4.4 Motor Auto-tuning

Tuning is valid only when the keyboard command mode. Set tuning mode (stationary or rotating), press the ENT key to confirm, the keyboard will display TUNE, then press the RUN key, the inverter will drive motor acceleration and deceleration, positive inversion operation, and the run indicator lights. Tuning duration of about two minutes, when the display TUNE message disappears, returning to normal parameter display status, which means that the tuning is completed.

## 4.5 Password Setting

The inverter provides password protection function, it is set a user's password when F00.00 set to nonzero. If five minutes without operating the keypad, the password protection is effective, and the keypad will show "-----", then the user must enter the correct password to enter the regular menu, otherwise inaccessible.

There are three ways a user password into force:

Method 1: Set F00.00 parameter to nonzero, then press the ESC + ENT key.

Method 2: Set F00.00 parameter to nonzero, then do not use the keypad within five minutes.

Method 3: Set F00.00 parameter to nonzero, then completely power down and then power.

If you want to cancel the password protection functions, only through a password to enter, and set F00.00 to 0.

## 4.6 Keypad lock

### 4.6.1 Keypad lock

The following three methods to any one immediately lock all or part of the keypad buttons; see the definition of the function code F16.02.

Method 1: Set F16.02 parameter to nonzero, then press the ESC + ENT key.

Method 2: Set F16.02 parameter to nonzero, and then do not use the keypad within five minutes.

Method 3: Set F16.02 parameter to nonzero, then completely power down and then power.









### 4.6.2 Keypad unlock

Press the ESC + >> keys to unlock. Unlocking operation does not change the value of F16.02. That means when Meet the keypad locking conditions, the keypad will be locked again. If you want the control panel no longer be locked, after unlocking the F16.02 must change the value to 0.

## 4.7 Shortcut menu function code description

Factory setting mode is changed to be shortcut menu mode (F00.01=1) in the software version above V1.07, group 17 is for the parameters of shortcut menu.

The difference of display between shortcut manual and basic menu is in the second level menu, please refer to below the details of difference and the switching method.

Menu mode	Shortcut menu	Basic menu
Display difference	<b>F01.01.</b> The last digit of F01.01. function code is with radix point, no flashing	<b>F01.01</b> F01.01 function code is without radix point, and flashing
Function difference	1. Press  or  for up-down switch in F17 function code 2.  can't return back to first level menu	1. Press  or  up-down switch in sequency. 2. Press  return back to first level menu
Switch	Method 1. Setting F00.01=0 to basic menu Method 2. Long Press  when display second level menu, switch to basic menu automatically	Method 1. Setting F00.01 to shortcut menu Method 2. Long press  when display second level menu, switch to shortcut menu automatically

If the shortcut menu is not enough, user can reset the shortcut menu, refer to group F17 for details.

## Chapter 5 List of Parameter

Group F00~F17 are standard function parameters. Group U00 is status monitoring parameters. Group U01 is fault record parameters.

The symbols in the function code table are described as follows:

"Δ" means the value of this parameter can be modified in stop and running status of drive;

"×" means the value of this parameter cannot be modified when drive is running;

"⊙" means this parameter is a measured value that cannot be modified;

Default: The value when restored to factory default. Neither measured parameter value nor recorded value will be restored.

Setting Range: the scope of setting and display of parameters

FR500A&FR510A parameter groups are listed below:

Category	Parameter Group
System Parameters	F00: System Parameters
Basic Parameters	F01: Frequency Command
	F02: Start/Stop Control Start/Stop Control
	F03: Accelerate/Decelerate Parameters
Input & Output Terminals	F04: Digital Input
	F05: Digital Output
	F06: Analog and Pulse Input
	F07: Analog and Pulse Output
	F22: Virtual IO
Motor and Control Parameters	F08: Parameters of Motor 1
	F09: V/f Control Parameters of Motor 1
	F10: Vector Control Parameters of Motor 1
	F18: Parameters of Motor 2 (FR510A only)
	F19: V/f Control Parameters of Motor 2 (FR510A only)
	F20: Vector Control Parameters of Motor 2 (FR510A only)
Protection Parameters	F11: Protection Parameters
Application Parameters	F12: Multi-Reference and Simple PLC Function
	F13: Process PID
	F14: Swing Frequency, Fixed Length , Count and Wakeup
	F21: Position control. (FR510A only)
Communication Parameters	F15: Communication Parameters
Keys and Display of Keypad Parameters	F16: Keys and Display of Keypad Parameters
User-defined Display Parameters	F17: User-defined Display Parameters
Monitoring Parameters	U00: Status monitoring
	U01: Fault record

## 5.1 Five LED (digital) display indicators

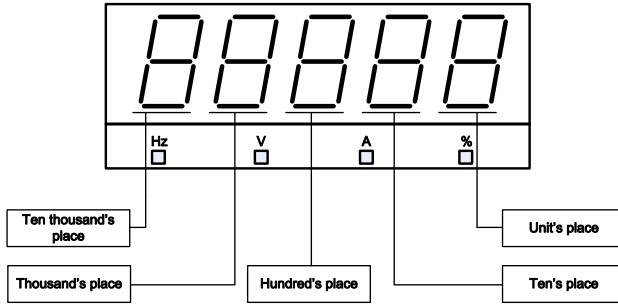


Fig.5-1 LED indicators

## 5.2 Standard Function Parameters

Table 5-1 Standard Function Parameters

Param.	Parameter Name	Setting Range	Default	Attr
<b>Group F00: System Parameters</b>				
F00.00	Setting of User Password	0~65535	0	×
F00.01	Display of Parameters	0: Display all parameters 1: Only display F00.00, F00.01 and user-defined parameters F17.00~F17.29	0	×
		2: Only display A0-00, A0-01, and the parameters different with factory default		
F00.02	Parameter Protection	0: All parameter programmable 1: Only F00.02 and this parameter programmable	0	×
F00.03	G/P type display	0: G type (constant torque load) 1: P type (variable torque load e.g. fan and pump)	0	×
F00.04	Parameter Initialization	0: No operation	0	×
		1: Restore all parameters to factory default (excluding motor parameters)		
		2: Clear fault record		
		3: Back up current user parameters		
		4: Restore user backup parameters		
		5: Restore factory default. (include motor parameter)		
F00.06	Parameter editing mode	0: Editable via keypad and RS485.	0	×
		1: Editable via keypad		
		2: Editable via RS485		
F00.07	Motor selection	0: Motor 1 1: Motor 2	0	×
F00.08	Motor 1 control mode	Unit's place: Motor 1 control mode	1	×
		0: V/F control		
		1: Sensor-less vector control 1		
		2: Sensor-less vector control 2		
		3: Vector control with PG card		
		Ten's place: Motor 2 control mode		

FR500A&FR510A Series Vector Control Inverter

		0: V/F control 1: Sensor-less vector control 1 2: Sensor-less vector control 2 3: Vector control with PG card		
F00.09	DI7/HI input mode	0: Digital input terminal 7 1: Pulse input	0	×
F00.10	AI1\AI2\AI3 input mode	Unit's place: AI1 0: Analog input 1: Digital input Ten's place: AI2 (same as AI1) Hundred's place: AI3 (same as AI1)	000	×
F00.11	Y2/HO input mode	0: Digital Output terminal 2 1: Pulse output	0	×
F00.12	PWM optimization	Unit's place: PWM modulation mode 0: Fixed carrier 1: Random carrier 2: Derating of fixed carrier 3: Derating of random carrier Ten's place: PWM modulation mode 0: Seven-segment mode 1: Five-segment mode 2: Five-segment and seven-segment automatic switchover Hundred's place: over-modulation coefficient 0: Invalid 1~9: 1.01~1.09 times of over-modulation	500	×
F00.13	Carrier frequency	0.700~16.000kHz	Model defined	△
F00.14	Upper carrier frequency	0.700~16.000kHz	8.000kHz	×
F00.15	Lower carrier frequency	0.700~16.000kHz	2.000kHz	×
F00.16	Output voltage	5.0~150.0%	100.0%	×
F00.17	AVR	0: Disabled 1: Enabled 2: AVR is disabled if the DC bus voltage > the rated voltage of DC bus, and it will be enabled if the DC bus voltage ≤ the rated voltage of DC bus.	1	×
F00.18	Fan control	0: Run at power-on 1: Fan working during running	1	×
F00.19	Factory password	0~65535	0	×
F00.20	Inverter rated power	0.2~1000.0kW	Model defined	⊙
F00.21	Inverter rated voltage	60~660V	Model defined	⊙
F00.22	Inverter rated current	0.1~1500.0A	Model defined	⊙
F00.23	Software version	0.00~655.35	Model defined	⊙
F00.24	Dealer password	0~65535	0	×
F00.25	Run time setting	0~65535h(0: Invalid)	0h	×

<b>Group F01: Frequency Command</b>				
F01.00	Frequency source selection	0: Master frequency source	0	×
		1: Auxiliary frequency source		
		2: Master +Auxiliary		
		3: Master - Auxiliary		
		4: MAX{Master, Auxiliary }		
		5: MIN {Master, Auxiliary }		
		6: AI1 ( Master + Auxiliary )		
F01.01	Master Frequency Command Source	0:Master digital setting (F01.02)	1	×
		1: keypad potentiometer		
		2: Analog input AI1		
		3: Communication		
		4: Multi-reference		
		5: PLC		
		6: Process PID output		
		7: X7/HI pulse input		
		8: AI2		
9: AI3				
F01.02	Master Frequency Digital setting	0.00~Fmax	50.00Hz	△
F01.03	Auxiliary Frequency Command Source	0: Auxiliary digital setting (F01.04)	0	×
		1: keypad potentiometer		
		2: Analog input AI1		
		3: Communication		
		4: Multi-reference		
		5: PLC		
		6: Process PID output		
		7: X7/HI pulse input		
		8: Analog input AI2		
9: Analog input AI3				
F01.04	Auxiliary frequency digital setting	0.00~Fmax	50.00Hz	△
F01.05	Auxiliary frequency range	0: Relative to maximum frequency	0	×
		1: Relative to master frequency		
F01.06	Auxiliary frequency coeff	0.0~150.0%	100.0%	△
F01.07	Jog frequency	0.00~Fmax	5.00Hz	△
F01.08	Maximum frequency	20.00~600.00Hz	50.00Hz	×
F01.09	Upper limit frequency	Fdown~Fmax Lower limit frequency~maximum frequency	50.00Hz	×
F01.10	Lower limit frequency	0.00~Fup	0.00Hz	×
F01.11	Operation when command frequency lower than lower limit frequency	0: Run at lower limit frequency	0	×
		1: Run at 0 Hz would be activated after the time delay set by F01.12		
F01.12	Lower limit frequency running time	0.0~6000.0s	60.0s	×
F01.13	Up to this frequency, start frequency compensation	0.00~600.00Hz	50.00Hz	△
F01.14	Frequency compensation per 50Hz	0.00~50.00Hz	0.00Hz	△
<b>Group F02: Start/Stop Control</b>				
F02.00	Run command	0: Keypad control (LED off)	0	×

FR500A&FR510A Series Vector Control Inverter

		1: Terminal control (LED on)		
		2: Communication control (LED blinking)		
F02.01	Running direction	0: Forward 1: Reverse	0	Δ
F02.02	Reverse-proof action	0: Reverse enabled 1: Reverse disabled	0	×
F02.03	Dead time between forward and reverse	0.0~6000.0s	0.0s	×
F02.04	Start mode	Unit's place: Start Mode 0:Start directly 1:Rotational speed track and restart	00000	×
		Ten's place: short-circuit detection function 0:Ungrounded short-circuit detection 1:Grounding short-circuit detection before the first starts 2:Grounding short-circuit detection before each starts		
		Hundred's place: Speed tracking 0:Track from zero speed 1:Track from max frequency		
		Thousand's place: Select if Jog function takes the priority 0:Disable 1:Enable		
		Ten thousand's place: Tracking direction 0: Last direction when stop 1: Positive direction 2: Negative direction 3: Starting direction		
F02.05	Start frequency	0.00~10.00Hz	0.00Hz	×
F02.06	Startup frequency holding time	0.0~100.0s	0.0s	×
F02.07	Startup DC braking current	0.0~150.0%	0.0%	×
F02.08	DC braking time at start	0.0~100.0s	0.0s	×
F02.09	Speed search current	0.0~180.0%	130.0%	Δ
F02.10	Speed search decel time	0.0~10.0s	1.0s	×
F02.11	Speed search coefficient	0.01~5.00	0.30	Δ
F02.12	Stop mode	0: Ramp to stop	0	×
		1: Coast to stop		
F02.13	Initial frequency of stop DC braking	0.01~50.00Hz	2.00Hz	×
F02.14	Stop DC braking current	0.0~150.0%	0.0%	×
F02.15	Waiting time of stop DC braking	0.0~30.0s	0.0s	×
F02.16	Stop DC braking time	0.0~30.0s	0.0s	×
F02.17	Dynamic brake	0: Disabled	0	×
		1: Enabled		
		2: Enabled at running		
		3: Enabled at deceleration		
F02.18	Voltage of dynamic	480~800V	700V	×

FR500A&FR510A Series Vector Control Inverter

	braking			
F02.19	Brake use ratio	5.0~100.0%	100.0%	×
F02.20	0Hz output selection	0: No voltage output	0	×
		1: Voltage output		
F02.21	Auto-start of power-on again	0: Invalid	0	△
		1: Valid		
F02.22	Waiting time between auto-start and power-on again	0.0~10.0s	0.5s	△
<b>Group F03: Accel/Decel Parameters</b>				
F03.00	Accel time 1	0.0~6000.0s	15.0s	△
F03.01	Decel time 1	0.0~6000.0s	15.0s	△
F03.02	Accel time 2	0.0~6000.0s	15.0s	△
F03.03	Decel time 2	0.0~6000.0s	15.0s	△
F03.04	Accel time 3	0.0~6000.0s	15.0s	△
F03.05	Decel time 3	0.0~6000.0s	15.0s	△
F03.06	Accel time 4	0.0~6000.0s	15.0s	△
F03.07	Decel time 4	0.0~6000.0s	15.0s	△
F03.08	Jog accel time	0.0~6000.0s	15.0s	△
F03.09	Jog decel time	0.0~6000.0s	15.0s	△
F03.10	Accel/Decel curve	0: Linear Accel/Decel	0	×
		1: S-curve Accel/Decel		
F03.11	Initial segment time of acceleration of S curve	0.0~6000.0s	0.0s	×
F03.12	Time unit of acceleration and deceleration	0: 0.1s	0	×
		1: 0.01s		
F03.13	Frequency switchover point between acceleration time 1 and acceleration time 2	0.00~Fmax	0.00Hz	×
F03.14	Frequency switchover point between deceleration time 1 and deceleration time 2	0.00~Fmax	0.00Hz	×
F03.15	End segment time of acceleration of S curve	0.0~6000.0s	0.0s	×
F03.16	Initial segment time of deceleration of S curve	0.0~6000.0s	0.0s	×
F03.17	End segment time of deceleration of S curve	0.0~6000.0s	0.0s	×
<b>Group F04 Digital Input</b>				
F04.00	Function of terminal DI1	00: No function 01: Running forward (FWD) 02: Running reverse (REV) 03: Three-wire control 04: JOG forward 05: JOG reverse 06: Coast to stop 07: Fault reset (RESET) 08: Running suspended 09: External fault input 10: Terminal UP 11: Terminal DOWN 12: UP/DOWN (including $\wedge/\vee$ key) adjustment clear	1	×
F04.01	Function of terminal DI2		2	×
F04.02	Function of terminal DI3		7	×
F04.03	Function of terminal DI4		13	×
F04.04	Function of terminal DI5		0	×
F04.05	Function of terminal DI6		0	×
F04.06	Function of terminal DI7		0	×
F04.07	Function of terminal AI1		0	×
F04.08	Function of terminal AI2		0	×
F04.09	Function of terminal AI3		0	×

FR500A&FR510A Series Vector Control Inverter

		<p>13: Multi-step frequency terminal 1  14: Multi-step frequency terminal 2  15: Multi-step frequency terminal 3  16: Multi-step frequency terminal 4  17: Accel/Decel time determinant 1  18: Accel/Decel time determinant 2  19: Accel/Decel disabled(ramp stop not inclusive)  20: Switch to auxiliary speed setting  21: PLC status reset  22: Simple PLC paused  23: Simple PLC paused  24: PID adjustment direction  25: PID integration paused  26: PID parameter switch  27: Swing frequency pause(output the current frequency)  28: Swing frequency reset(output the central frequency)  29: Run command switched to keypad control  30: Run command switched to terminal control  31: Run command switched to communication control  32: Count input  33: Count clear  34: Length count  35: Length clear  36: DC brake input command at Stop  37: Speed/torque control switch  38: No reverse  39: No forward  40: zero-serve (FR510A only)  41: Enable spindle orientation (FR510A only)  42: Orientation position selection 1 (FR510A only)  43: Orientation position selection 2 (FR510A only)  44: Simple carry origin signal input (FR510A only)  45: FWD carry (FR510A only)  46: REV carry (FR510A only)  47: Carry amount selection terminal 1 (FR510A only)  48: Carry amount selection terminal 2 (FR510A only)  49: Carry amount selection terminal 3 (FR510A only)  70: Position given X7 direction input (FR510A only)  71: Position Pulse Zero Clearing (FR510A only)  72: Forward position offset enable (FR510A only)  73: Reverse position offset enable (FR510A only)  74: Pulse proportion selection of Ho</p>		
--	--	---	--	--

FR500A&FR510A Series Vector Control Inverter

		output encoder (FR510A only) 75: Current overrun switching(FR510A only) 76: Carry enable(FR510A only)		
F04.10	Filtering time of digital input terminal	0.000~1.000s	0.010s	△
F04.11	Delay time before terminal DI1 is valid	0.0~300.0s	0.0s	△
F04.12	Delay time before terminal DI2 is valid	0.0~300.0s	0.0s	△
F04.13	Terminal DI1~DI5 positive/negative logic	DI5, DI4, DI3, DI2, DI1	00000	×
		0: Positive logic(Terminals are on at 0V/off at 24V)		
		1: Negative Logic (Terminals are off at 0V/on at 24V)		
F04.14	Terminal DI6~AI3 positive/negative logic	AI3, AI2, AI1, DI7, DI6	00000	×
		0: Positive logic		
		1: Negative Logic		
F04.15	FWD/REV terminal control mode	0: Two-wire mode 1	0	×
		1: Two-wire mode 2		
		2: Three-wire mode 1		
		3: Three-wire mode 2		
F04.16	Terminal UP/DOWN frequency adjustment control	Unit's place: action when stop 0: Clear 1: Holding	00001	×
		Ten's place: action on power loss 0: Clear 1: Holding		
		Hundreds place: integral function 0: No integral function 1: Integral function enabled		
		Thousand's place: Select if it can be reduced to negative frequency 0: Disable 1: Enable		
		Ten thousand's place: Jog action to clear UP/DOWN 0: Not Clear 1: Clear		
F04.17	Terminal UP/DOWN frequency change step size	0.00~50.00Hz 0.00:Disabled	1.00Hz/ 200ms	△
F04.18	Terminal action selection when power on	0: Level effective	0	×
		1: Edge trigger +Level effective(When power on)		
		2: Edge trigger +Level effective(Every start)		
F04.19	Delay time before terminal DI1 is invalid	0.0~300.0s	0.0s	△
F04.20	Delay time before terminal DI2 is invalid	0.0~300.0s	0.0s	△
<b>Group F05 Digital Output</b>				

FR500A&FR510A Series Vector Control Inverter

F05.00	Y1 output function	00: No output	1	×
F05.01	Y2 output function	01: Drive is running	3	
F05.02	Relay 1 output function	02: Fault output	2	×
F05.03	Relay 2 output function	03: Frequency-level detection FDT1 output 04: Frequency-level detection FDT2 output 05: Drive in 0Hz running 1(no output at stop) 06: Drive in 0Hz running 2(output at stop) 07: Upper limit frequency attained 08: Lower limit frequency attained 09: Frequency attained 10: Inverter is ready to work 11: Drive (motor) overloaded alarm 12: Inverter overheat warning 13: Current running time attained 14: Accumulative power-on time attained 15: Consecutive running time attained 16: PLC cycle completed 17: Set count value attained 18: Designated count value attained 19: Length attained 20: Under load alarm 21: Brake output 22: DI1 23: DI2 24: When reach the range of set frequency(FDT1) 25: Spindle orientation completion (FR510A only) 26: PID feedback loss 27: operation status (inching without output) 28: communication setting (address 2007h) 40: The current exceeds the limit	11	×
F05.04	Y1 output delay time	0.0~6000.0s	0.0s	△
F05.05	Y2 output delay time	0.0~6000.0s	0.0s	△
F05.06	R1 output delay time	0.0~6000.0s	0.0s	△
F05.07	R2 output delay time	0.0~6000.0s	0.0s	△
F05.08	Enabled state of digital output	Unit's place: Y1 0: Positive logic 1: Negative logic Ten's place: Y2 (same as unit's place) Hundreds place: Relay 1 output (same as unit's place) Thousands place: Relay 2 output (same as unit's place)	0000	×
F05.09	Detection width of frequency attained	0.00~20.00Hz	5.00Hz	×
F05.10	FDT1 upper bound	0.00~Fmax	30.00Hz	×
F05.11	FDT1 lower bound	0.00~Fmax	30.00Hz	×

## FR500A&amp;FR510A Series Vector Control Inverter

F05.12	FDT2 upper bound	0.00~Fmax	30.00Hz	×
F05.13	FDT2 lower bound	0.00~Fmax	30.00Hz	×
F05.14	Consecutive running time	0.0~6000.0Min 0.0:Disabled	0.0Min	×
F05.15	Accumulative power-on time setting	0~65535h 0:Disabled	0h	×
F05.16	Accumulative running time setting	0~65535h 0:Disabled	0h	×
F05.17	Brake control selection	0: Disabled	0	×
		1: Enabled		
F05.18	Brake opened frequency	Closed frequency ~30.00Hz	2.50Hz	×
F05.19	Brake opened current	0.0~200.0%	0.0%	△
F05.20	Brake open waiting time	0.00~10.00s	0.00s	×
F05.21	Brake open operating time	0.00~10.00s	0.50s	×
F05.22	Brake closed frequency	0.00Hz~opened frequency	2.00Hz	×
F05.23	Brake close waiting time	0.00~10.00s	0.00s	×
F05.24	Brake close operating time	0.00~10.00s	0.50s	×
F05.25	Current overrun 1	0.1~1500.0A	0.0A	△
F05.26	Current overrun 2	0.1~1500.0A	0.0A	△
<b>Group F06 Analog and Pulse Input</b>				
F06.00	Minimum input of curve AI1	0.0%~input of inflection point 1 of curve AI1	1.0%	△
F06.01	Set value corresponding to minimum input of curve AI1	-100.0~100.0%	0.0%	△
F06.02	Input of inflection point 1 of curve AI1	Minimum input of curve AI1~Input of inflection point 2 of curve AI1	100.0%	△
F06.03	Set value corresponding to input of inflection point 1 of curve AI1	-100.0~100.0%	100.0%	△
F06.04	Input of inflection point 2 of curve AI1	Input of inflection point 1 of curve AI1~Maximum input of curve AI1	100.0%	△
F06.05	Set value corresponding to input of inflection point 2 of curve AI1	-100.0~100.0%	100.0%	△
F06.06	Maximum input of curve AI1	Input of inflection point 2 of curve AI1~100.0%	100.0%	△
F06.07	Set value corresponding to maximum input of curve AI1	-100.0~100.0%	100.0%	△
F06.08	Minimum input of curve AI2	0.0%~input of inflection point1 of curve AI2	1.0%	△
F06.09	Set value corresponding to minimum input of curve AI2	-100.0~100.0%	0.0%	△
F06.10	Input of inflection point 1 of curve AI2	Minimum input of curve AI1~Input of inflection point 2 of curve AI2	100.0%	△
F06.11	Set value corresponding to input of inflection point 1 of curve AI2	-100.0~100.0%	100.0%	△
F06.12	Input of inflection point 2 of curve AI2	Input of inflection point 1 of curve AI2~Maximum input of curve AI2	100.0%	△
F06.13	Set value corresponding	-100.0~100.0%	100.0%	△

FR500A&FR510A Series Vector Control Inverter

	to input of inflection point 2 of curve AI2			
F06.14	Maximum input of curve AI2	Input of inflection point A of curve AI2~100.0%	100.0%	△
F06.15	Set value corresponding to maximum input of curve AI2	-100.0~100.0%	100.0%	△
F06.16	Minimum input of curve AI3	0.0%~input of inflection point1 of curve AI3	0.0%	△
F06.17	Set value corresponding to minimum input of curve AI3	-100.0~100.0%	-100.0%	△
F06.18	Input of inflection point 1 of curve AI3	Minimum input of curve AI1~Input of inflection point 2 of curve AI3	25.0%	△
F06.19	Set value corresponding to input of inflection point 1 of curve AI3	-100.0~100.0%	-50.0%	△
F06.20	Input of inflection point 2 of curve AI3	Input of inflection point 1 of curve AI3~Maximum input of curve AI3	75.0%	△
F06.21	Set value corresponding to input of inflection point 2 of curve AI3	-100.0~100.0%	25.0%	△
F06.22	Maximum input of curve AI3	Input of inflection point A of curve AI3~100.0%	100.0%	△
F06.23	Set value corresponding to maximum input of curve AI3	-100.0~100.0%	100.0%	△
F06.24	Minimum input of curve keypad potentiometer	0.0~Maximum input of curve keypad potentiometer	0.5%	△
F06.25	Set value corresponding to minimum input of curve keypad potentiometer	-100.0~100.0%	0.0%	△
F06.26	Maximum input of curve keypad potentiometer	Minimum input of curve keypad potentiometer~100.0	99.9%	△
F06.27	Set value corresponding to maximum input of curve keypad potentiometer	-100.0~100.0%	100.0%	△
F06.28	AI1 terminal filtering time	0.000~10.000s	0.100s	△
F06.29	AI2 terminal filtering time	0.000~10.000s	0.100s	△
F06.30	AI3 terminal filtering time	0.000~10.000s	0.100s	△
F06.31	Keypad potentiometer filtering time	0.000~10.000s	0.100s	△
F06.32	Minimum input of curve HI	0.00 kHz~Maximum input of curve HI	0.00kHz	△
F06.33	Set value corresponding to minimum input of curve HI	-100.0~100.0%	0.0%	△
F06.34	Maximum input of curve HI	Minimum input of curve HI~100.00kHz	50.00kHz	△
F06.35	Set value corresponding to maximum input of curve HI	-100.0~100.0%	100.0%	△
F06.36	HI terminal filtering time	0.000~10.000s	0.100s	△
<b>Group F07 Analog and Pulse Output</b>				

FR500A&FR510A Series Vector Control Inverter

F07.00	AO1 output function	00: No output	1	×
F07.01	AO2 output function	01: Output frequency	2	×
F07.02	Y2/HO output function (when used as HO)	02: Command frequency	3	×
		03: Output current		
		04: Output voltage		
		05: Output power		
		06: Bus voltage		
		07: +10V		
		08: keypad potentiometer		
		09: AI1		
		10: AI2		
		11: AI3		
		12: HI		
		13: Output torque		
		14: Ao communication given 1		
		15: Ao communication given 2		
		16: Encoder input (FR510A only)		
		F07.03		
F07.04	AO1 gain	-2.000~2.000	1.000	△
F07.05	AO1 filtering time	0.000~10.000s	0.000s	△
F07.06	AO2 offset	-100.0~100.0%	0.00%	△
F07.07	AO2 gain	-2.000~2.000	1.000	△
F07.08	AO2 filtering time	0.000~10.000s	0.000s	△
F07.09	HO maximum output pulse frequency	0.01~100.00kHz	50.00kHz	△
F07.10	HO output filtering time	0.000~10.000s	0.010s	△
F07.11	Ho output encoder pulse proportion 1 (FR510A only)	0.00~10.00	1.00	△
F07.12	Ho output encoder pulse proportion 2 (FR510A only)	0.00~10.00	1.00	△
<b>Group F08 Parameters of Motor 1</b>				
F08.00	Motor 1 type selection	0: Three phase asynchronous motors	0	×
		1: PMSM (FR510A only)		
		2: Single phase asynchronous motors (Remove capacity)		
		3: Single phase asynchronous motors (No need to remove capacity)		
F08.01	Power rating of motor 1	0.1~1000.0kW	Model defined	×
F08.02	Rated voltage of motor 1	60~660V	Model defined	×
F08.03	Rated current of motor 1	0.1~1500.0A	Model defined	×
F08.04	Rated frequency of motor 1	20.00~Fmax	Model defined	×
F08.05	Rated speed of motor 1	1~30000	Model defined	×
F08.08	Stator resistance R1 of async motor 1	0.001~65.535Ω	Model defined	×
F08.09	Rotor resistance R2 of async motor 1	0.001~65.535Ω	Model defined	×
F08.10	Leakage inductance L1 of async motor 1	0.01~655.35mH	Model defined	×
F08.11	Mutual inductance L2 of	0.1~6553.5mH	Model	×

FR500A&FR510A Series Vector Control Inverter

	asynchronous motor 1		defined	
F08.12	No-load current of async motor 1	0.1~1500.0A	Model defined	×
F08.13	Field weakening coeff 1 of async motor 1	0.0~100.0	87%	×
F08.14	Field weakening coeff 2 of async motor 1	0.0~100.0	75%	×
F08.15	Field weakening coeff 3 of async motor 1	0.0~100.0	70%	×
F08.16	PMSM stator resistance (FR510A only)	0.001~65.535Ω	Model defined	×
F08.17	PMSM d-axis inductance (FR510A only)	0.01~655.35mH	Model defined	×
F08.18	PMSM d-axis inductance (FR510A only)	0.01~655.35mH	Model defined	×
F08.19	PMSM back EMF (FR510A only)	0~65535V	Model defined	×
F08.20	Installation angle of encoder (FR510A only)	0.0~359.9°	0.0°	×
F08.21	Pole number of motor	0~1000	4	×
F08.22	Find encoder origin at beginning (FR510A only)	0: Not find 1: Find	1	×
F08.23	Encoder line number (FR510A only)	0~10000	1024	×
F08.24	Encoder type (FR510A only)	0: ABZ encoder 1: UVW encoder 2: Rotary encoder 3: ECN1313 4: Sine-cosine encoder	0	×
F08.25	AB Phase Sequence of ABZ Incremental Encoder (FR510A only)	0: Positive 1: Negative	0	×
F08.26	Speed feedback PG disconnection detection time (FR510A only)	0.0: Invalid 0.1~10.0s	0.0s	×
F08.27	Speed Ratio of Motor to Encoder (FR510A only)	0.001~60.000	1.000	×
F08.28	Pole pairs of rotary encoder (FR510A only)	1~100	1	×
F08.30	Autotuning of motor 1	0: No autotuning 1: Static autotuning of motor 2: Rotary autotuning of motor	0	×
<b>Group F09 V/f Control Parameters of Motor 1</b>				
F09.00	V/f curve setting	00: Linear V/F	0	×
		01: Multi-stage V/F		
		02: 1.2nd power V/F		
		03: 1.4nd power V/F		
		04: 1.6nd power V/F		
		05: 1.8nd power V/F		
		06: 2.0nd power V/F		
		07: V/F complete separation		
		08: V/F half separation		
		09: 1.2 power inverse curve V/F		
		10: 1.4 power inverse curve V/F		
		11: 1.6 power inverse curve V/F		
12: 1.8 power inverse curve V/F				

FR500A&FR510A Series Vector Control Inverter

		13: 2.0 power inverse curve V/F		
F09.01	Torque boost	0.1%~30.0% 0.0% (fixed torque boost)	0.0%	△
F09.02	Cut-off frequency of torque boost	0.00~Fmax	50.00Hz	△
F09.03	Multi-point V/F frequency 1(F1)	0.00~F09.05	0.00Hz	△
F09.04	Multi-point V/F voltage 1 (V1)	0.0~100.0	5.0%	△
F09.05	Multi-point V/F frequency 2(F2)	F09.03~F09.05	5.00Hz	△
F09.06	Multi-point V/F voltage 2 (V2)	0.0~100.0	14.0%	△
F09.07	Multi-point V/F frequency 3(F3)	F09.05~F09.09	25.00Hz	△
F09.08	Multi-point V/F voltage 3 (V3)	0.0~100.0	50.0%	△
F09.09	Multi-point V/F frequency 4(F4)	F09.07~rated motor frequency	50.00Hz	△
F09.10	Multi-point V/F voltage 4 (V4)	0.0~100.0 Ue=100.0%	100.0%	△
F09.11	V/F slip compensation gain	0.0~300.0%	80.0%	△
F09.12	Stator voltage drop compensation gain	0.0~200.0%	100.0%	△
F09.13	Excitation boost gain	0.0~200.0%	100.0%	△
F09.14	Oscillation Suppression	0.0~300.0%	100.0%	△
F09.15	Voltage source for V/F separation	0: Digital setting (F09.16)	0	×
		1: keypad potentiometer		
		2: AI1		
		3: Multi-reference		
		4: Pulse setting ( DI7/HI )		
		5: PID		
		6: AI2		
7: AI3				
F09.16	Voltage digital setting for V/F separation	0 V to rated motor voltage	0.0%	△
F09.17	Voltage rise time of V/F separation	0.0~6000.0s It indicates the time for the voltage rising from 0 V to rated Motor voltage.	0.1s	△
F09.18	Set the IQ filter time below 0.5Hz in VVF mode	F09.19~3000ms	500ms	×
F09.19	Set the IQ filter time above 2Hz in VVF mode	1ms~F09.18	100ms	×
F09.20	Torque revision when run forward	0.0~5.0%	0.0%	△
F09.21	Torque revision when run reverse	0.0~5.0%	1.0%	△
F09.22	PMSM acceleration current compensation setting (FR510A only)	0.0~200.0%	0.0%	△
F09.23	PMSM compensation time decreased after acceleration	0.0~100.0s	2.0s	△

FR500A&FR510A Series Vector Control Inverter

	(FR510A only)			
F09.24	PMSM ID current value will be maintained after accelerating. (FR510A only)	0.0~200.0%	0.0%	△
<b>Group F10 Vector Control Parameters of Motor 1</b>				
F10.00	Speed/torque control	0: speed control 1: torque control	0	×
F10.01	ASR low-speed proportional gain Kp1	0.0~100.0	15.0	△
F10.02	ASR low-speed integration time Ti1	0.001~30.000s	0.100s	△
F10.03	ASR switching frequency 1	0.00~F10.06	5.00Hz	△
F10.04	ASR high-speed proportional gain Kp2	1~100.0	10.0	△
F10.05	ASR high-speed integration time Ti2	0.001~30.000s	0.500s	△
F10.06	ASR switching frequency 2	F10.03~Fmax	10.00Hz	△
F10.07	ASR input filtering time	0.0~500.0ms	3.0ms	△
F10.08	ASR output filtering time	0.0~500.0ms	0.0ms	△
F10.09	Vector control slip gain	50~200%	100%	△
F10.10	Digital setting of torque upper limit in speed control mode	80.0~200.0%	165.0%	×
F10.11	Excitation adjustment proportional gain Kp1	0.00~10.00	0.50	△
F10.12	Excitation adjustment integral gain Ti1	0.0~3000.0ms	10.0ms	△
F10.13	Torque adjustment proportional gain Kp2	0.00~10.00	0.50	△
F10.14	Torque adjustment integral gain Ti2	0.0~3000.0ms	10.0ms	△
F10.15	Excitation gain coefficient	50.0~200%	100%	△
F10.16	Torque setting source under torque control	0: Set by F10.17 1: Keypad potentiometer 2: AI1 3: AI2 4: AI3 5: Pulse setting ( DI7/HI ) 6: Communication setting	0	×
F10.17	Digital setting of torque	-200.0~200.0%	50.0%	△
F10.18	Forward speed limited value under torque control	0.00~Fmax	50.00Hz	△
F10.19	Reverse speed limited value under torque control	0.00~ Fmax	50.00Hz	△
F10.20	Set torque accel time	0.0~6000.0s	0.0s	△
F10.21	Set torque decel time	0.0~6000.0s	0.0s	△
F10.22	Static friction torque compensation	0.0~100.0%	5.00%	△
F10.23	Static friction frequency	0.00~20.00Hz	1.00Hz	△

FR500A&FR510A Series Vector Control Inverter

	range			
F10.24	Static Frequency of Open-Loop Torque	1.00~10.00Hz	1.00Hz	△
F10.25	SVC optimization method	0: Optimization method 1 1: Optimization method 2 2: Optimization method 3	1	×
F10.26	Max Frequency source under torque control	0: Set by F10.18 & F10.19	0	×
		1: Keypad potentiometer		
		2: AI1		
		3: AI2		
		4: AI3		
	5: Pulse setting ( DI7/HI )			
F10.27	PMSM Start Excitation Current (FR510A only)	0.0~150.0%	50.0%	×
F10.28	PMSM Flux weakening control (FR510A only)	0: Invalid 1: Valid	1	×
F10.29	PMSM Flux weakening Voltage (FR510A only)	70.0~100.0%	95.0%	△
F10.30	PMSM Flux weakening gain(Kp) (FR510A only)	0.0~500.0%	50.0%	△
F10.31	PMSM Flux weakening integral(Ti) (FR510A only)	0.00~60.00s	0.5s	△
F10.32	PMSM Flux weakening limit (FR510A only)	0.0~200.0%	100.0%	△
F10.33	PMSM excitation current frequency high point (FR510A only)	F10.34~600.00Hz	15.00Hz	△
F10.34	PMSM excitation current frequency low point (FR510A only)	0.0~F10.33	10.00Hz	△
F10.35	PMSM excitation current conversion delay (FR510A only)	0.0~10.0s	1.0s	△
F10.36	PMSM speed estimation Kp (FR510A only)	0.00~10.00	2.00	△
F10.37	PMSM speed estimation Ti (FR510A only)	0.1~1000.0ms	20.0ms	△
<b>Group F11 Protection Parameters</b>				
F11.00	Current limit control	0: Current limit disabled	2	×
		1: Current limit mode 1		
		2: Current limit mode 2		
F11.01	Current limit	100.0~200.0%	150.0%	×
F11.02	Frequency decreasing time(limit current in constant speed operation)	0.0~6000.0s	5.0s	△
F11.03	Current limit mode 2 proportion gain	0.1~100.0%	3.0%	△
F11.04	Current limit mode 2 integral time	0.00~10.00s	10.00s	△
F11.05	Overvoltage Stall Control	0: Overvoltage stall disabled	2	×
		1: Overvoltage stall mode 1		
		2: Overvoltage stall mode 2		
F11.06	Overvoltage stall voltage	600~800V	730V	×
F11.07	Overvoltage Stall Mode 2 Proportion Gain	0.0~100.0%	50.0%	△

FR500A&FR510A Series Vector Control Inverter

F11.08	Overvoltage stall mode 2 frequency limit	0.00~50.00Hz	5.00Hz	×
F11.10	Protection action 1	Unit's place: Bus undervoltage 0: Fault reported and coast to stop 1: Stop according to the stop mode 2: Fault reported but continue to run 3: Fault protection disabled	03330	×
		Ten's place: Power input phase Loss (Err09) (Same as unit's place )		
		Hundred's place: Power output phase loss(Err10) (Same as unit's place )		
		Thousand's place: Motor overload (Err11)(Same as unit's place )		
F11.11	Protection action 2	External equipment fault ( Err13) 0: Fault reported and coast to stop 1: Stop according to the stop mode 2: Fault reported but continue to run	00000	×
		Ten's place: EEPROM read/write fault (Err15) (Same as unit's place)		
		Hundred's place: Communication overtime error (Err18) (Same as unit's place)		
		Thousand's place: PID feedback loss (Err19) (Same as unit's place)		
F11.12	Protection action 3	Unit's place: Module temperature detection disconnection ( Err24) 0: Fault reported and coast to stop 1: Stop according to the stop mode 2: Fault reported but continue to run	00030	×
		Ten's place: Load becoming 0 (Err25) (Same as unit's place)		
F11.14	Frequency selection for continuing to run upon fault	0: Current running frequency	1	×
		1: Set frequency		
		2: Frequency upper limit		
		3: Frequency lower limit		
F11.15	Backup frequency upon abnormality	0.00~Fmax	0.00Hz	×
		4: Backup frequency upon abnormality		
F11.17	Motor overload protection time	30.0~300.0s	60.0s	×

FR500A&FR510A Series Vector Control Inverter

F11.18	Overload alarm	Unit's place: detection option: 0: Always detect 1: Detect at constant speed only	00010	×
		Ten's place: compared object 0: Rated current of motor 1: Rated current of drive		
		Hundred's place: Fault reported 0: No fault reported 1: Fault reported		
		Thousand's place: whether to decelerate or not when overload alarm 0: No deceleration 1: Deceleration		
		Ten thousand's place: given mode for overload threshold 0: F11.19 set 1: F11.19*VP 2: F11.19*AI1 3: F11.19*AI2 4: F11.19*AI3		
F11.19	Overload alarm threshold	20.0~200.0%	130.0%	×
F11.20	Overload alarm activated time that exceeding threshold	0.1~60.0s	5.0s	×
F11.21	Inverter overheat warning threshold	50~overheat Temperature	Model defined	×
F11.22	Detection level of load loss	5.0~100.0%	20.0%	×
F11.23	Detection time of load loss	0.1~60.0s	5.0s	×
F11.24	Action selection at instantaneous power failure	0: Disabled	0	×
		1: Deceleration		
		2: Bus voltage constant control		
F11.25	Decel time at instantaneous power failure	0.0~6000.0s	5.0s	△
F11.26	Rapid current limit	0: Disabled	2	×
		1: Rapid current limiting mode 1		
		1: Rapid current limiting mode 2		
F11.27	Times of automatic trip(fault) reset	0~20	0	×
F11.28	Interval of automatic trip(fault) reset	0.1~100.0s	1.0s	×
F11.29	DO action during fault auto reset	0: Not act	0	×
		1: Act		
F11.30	Instantaneous power off bus voltage	60.0%~Recovery voltage	80.0%	△
F11.31	Instantaneous power off recovery voltage	Power off voltage~100.0%	85.0%	△
F11.32	Instantaneous power off voltage detection time	0.01~10.00s	0.10s	△
F11.33	Instantaneous power off Kp	0.1~100.0%	40.0%	△
F11.34	Instantaneous power off integration time Ti	0.00~10.00s (0.00: Integration invalid)	0.10s	△

FR500A&FR510A Series Vector Control Inverter

F11.35	Motor temperature sensor type	0:None 1:PT100 2:PT1000 3:KTY84	0	×
F11.36	Zero drift value of motor temperature sensor	-100~100℃	0	△
F11.37	Reserved			
F11.38	Motor temperature warning action threshold	0~200℃	90℃	△
F11.39	Motor temperature protection action threshold	0~200℃	110℃	△
F11.40	Action selection of Excessive Speed and Excessive Speed Deviation (FR510A only)	Unit's place: Overspeed Action Selection 0:Report error and coast to stop 1:Warning and ramp to stop 2: Alarm and continue run with failure frequency 3:No protection	00	×
		Ten's place: Selection of Excessive Speed Deviation 0:Report error and coast to stop 1:Warning and ramp to stop 2: Alarm and continue run with failure frequency 3:No protection		
F11.41	Overspeed detection value (FR510A only)	0.0~150.0%	120.0%	×
F11.42	Overspeed detection time (FR510A only)	0.0~60.0s	1.0s	×
F11.43	Detection value of excessive velocity deviation (FR510A only)	0.0~50.0%	20.0%	×
F11.44	Detection time of excessive velocity deviation (FR510A only)	0.0~60.0s	5.0s	×
<b>Group F12: Multi-Reference and Simple PLC Function</b>				
F12.00	Reference 0	-100.0~100.0%	0.0%	△
F12.01	Reference 1	-100.0~100.0%	0.0%	△
F12.02	Reference 2	-100.0~100.0%	0.0%	△
F12.03	Reference 3	-100.0~100.0%	0.0%	△
F12.04	Reference 4	-100.0~100.0%	0.0%	△
F12.05	Reference 5	-100.0~100.0%	0.0%	△
F12.06	Reference 6	-100.0~100.0%	0.0%	△
F12.07	Reference 7	-100.0~100.0%	0.0%	△
F12.08	Reference 8	-100.0~100.0%	0.0%	△
F12.09	Reference 9	-100.0~100.0%	0.0%	△
F12.10	Reference 10	-100.0~100.0%	0.0%	△
F12.11	Reference 11	-100.0~100.0%	0.0%	△
F12.12	Reference 12	-100.0~100.0%	0.0%	△
F12.13	Reference 13	-100.0~100.0%	0.0%	△
F12.14	Reference 14	-100.0~100.0%	0.0%	△
F12.15	Reference 15	-100.0~100.0%	0.0%	△
F12.16	Reference 0 source	0: Digital setting (F12.00)	0	×

FR500A&FR510A Series Vector Control Inverter

		1: keypad potentiometer		
		2: AI1		
		3: Process PID output		
		4: X7/HI pulse input		
		5: AI2		
		6: AI3		
F12.17	Running mode of simple PLC	<p>Unit's place: PLC running mode                      0: Stop after a single cycle                      1: Continue to run with the last frequency after a single cycle                      2: Repeat cycles</p> <p>Ten's place: started mode                      0: Continue to run from the step of stop (or fault)                      1: Run from the first step                      "multi-step frequency 0"                      2: Run from the eighth step                      "multi-step frequency 8"                      3: Run from the fifteenth step                      "multi-step frequency 15"</p> <p>Hundreds place: power loss memory                      0: Memory disabled on power loss                      1: Memory enabled on power loss</p> <p>Thousands place: unit of simple PLC running time                      0: Second (s)                      1: Minute (min)</p>	00000	×
F12.18	Running time of step 0	0.0~6000.0s(h)	0.0s(h)	△
F12.19	Running time of step 1	0.0~6000.0s(h)	0.0s(h)	△
F12.20	Running time of step 2	0.0~6000.0s(h)	0.0s(h)	△
F12.21	Running time of step 3	0.0~6000.0s(h)	0.0s(h)	△
F12.22	Running time of step 4	0.0~6000.0s(h)	0.0s(h)	△
F12.23	Running time of step 5	0.0~6000.0s(h)	0.0s(h)	△
F12.24	Running time of step 6	0.0~6000.0s(h)	0.0s(h)	△
F12.25	Running time of step 7	0.0~6000.0s(h)	0.0s(h)	△
F12.26	Running time of step 8	0.0~6000.0s(h)	0.0s(h)	△
F12.27	Running time of step 9	0.0~6000.0s(h)	0.0s(h)	△
F12.28	Running time of step 10	0.0~6000.0s(h)	0.0s(h)	△
F12.29	Running time of step 11	0.0~6000.0s(h)	0.0s(h)	△
F12.30	Running time of step 12	0.0~6000.0s(h)	0.0s(h)	△
F12.31	Running time of step 13	0.0~6000.0s(h)	0.0s(h)	△
F12.32	Running time of step 14	0.0~6000.0s(h)	0.0s(h)	△
F12.33	Running time of step 15	0.0~6000.0s(h)	0.0s(h)	△
F12.34	Acceleration/deceleration time of simple PLC reference 0	0~3	0	△
F12.35	Acceleration/deceleration time of simple PLC reference 1	0~3	0	△
F12.36	Acceleration/deceleration time of simple PLC reference 2	0~3	0	△
F12.37	Acceleration/deceleration time of simple PLC	0~3	0	△

FR500A&FR510A Series Vector Control Inverter

	reference 3			
F12.38	Acceleration/deceleration time of simple PLC reference 4	0~3	0	Δ
F12.39	Acceleration/deceleration time of simple PLC reference 5	0~3	0	Δ
F12.40	Acceleration/deceleration time of simple PLC reference 6	0~3	0	Δ
F12.41	Acceleration/deceleration time of simple PLC reference 7	0~3	0	Δ
F12.42	Acceleration/deceleration time of simple PLC reference 8	0~3	0	Δ
F12.43	Acceleration/deceleration time of simple PLC reference 9	0~3	0	Δ
F12.44	Acceleration/deceleration time of simple PLC reference 10	0~3	0	Δ
F12.45	Acceleration/deceleration time of simple PLC reference 11	0~3	0	Δ
F12.46	Acceleration/deceleration time of simple PLC reference 12	0~3	0	Δ
F12.47	Acceleration/deceleration time of simple PLC reference 13	0~3	0	Δ
F12.48	Acceleration/deceleration time of simple PLC reference 14	0~3	0	Δ
F12.49	Acceleration/deceleration time of simple PLC reference 15	0~3	0	Δ
F12.50	UP/DOWN function selection of Multi-reference	Unit's place: Action selection when power off 0:Zero clearing when power off 1:Hold when power off Ten's place: select if it can be reduced to negative 0:Disable 1:Enable	00	×
F12.51	UP/DOWN speed of Multi-reference	0.0~100.0% (0.0%Invalid)	0.0%	Δ
<b>Group F13 Process PID</b>				
F13.00	PID setting	0: F13.01 digital setting 1:keypad potentiometer 2: AI1 3: Communication 4: Multi-Reference 5: DI7/HI pulse input 6: AI2 7: AI3	0	×
F13.01	PID digital setting	0.0~100.0%	50.0%	Δ

FR500A&FR510A Series Vector Control Inverter

F13.02	PID feedback	0: AI1	0	×
		1: AI2		
		2: Communication		
		3: AI1+AI2		
		4: AI1-AI2		
		5: Max{AI1, AI2}		
		6: Min{AI1, AI2}		
		7: DI7/HI pulse input		
		8: AI3		
F13.03	PID setting feedback range	0.0~6000.0	100.0	△
F13.04	PID action direction	0: Forward action	0	×
		1: Reverse action		
F13.05	Filtering time of PID setting	0.000~10.000s	0.000s	△
F13.06	Filtering time of PID feedback	0.000~10.000s	0.000s	△
F13.07	Filtering time of PID output	0.000~10.000s	0.000s	△
F13.08	Proportional gain Kp1	0.0~100.0	1.0	△
F13.09	Integration time Ti1	0.01~10.00s	0.10s	△
F13.10	Differential time Td1	0.000~10.000s	0.000s	△
F13.11	Proportional gain Kp2	0.0~100.0	1.0	△
F13.12	Integration time Ti2	0.01~10.00s	0.10s	△
F13.13	Differential time Td2	0.000~10.000s	0.000s	△
F13.14	PID parameter switch	0: No switch, determined by parameters Kp1, Ti1 and Td1	0	×
		1: Auto switch on the basis of input offset		
		2: Switched by terminal		
F13.15	PID parameter switchover deviation 1	0.0~100.0%	20.0%	×
F13.16	PID parameter switchover deviation 2	0.0~100.0%	80.0%	×
F13.17	PID offset limit	0.0~100.0%	0.0%	×
F13.18	PID integral property	Unit's place (Whether to stop integral operation when the output reaches the limit) 0: Continue integral operation 1: Stop integral operation	00	×
		Ten's place (Integral separated) 0: Invalid 1: Valid		
F13.19	PID differential limit	0.0~100.0%	0.5%	×
F13.20	PID initial value	0.0~100.0%	0.0%	×
F13.21	Holding time of PID initial value	0.0~6000.0s	0.0s	×
F13.22	PID output frequency upper limit	PID output frequency lower limit~100.0% (100.0% corresponds to maximum frequency)	100.0%	×
F13.23	PID output frequency lower limit	-100.0%~PID output frequency lower limit	0.0%	×

FR500A&FR510A Series Vector Control Inverter

F13.24	Low value of PID feedback loss	0.1~100.0% 0.0%: Not judging feedback loss	0.0%	×
F13.25	Detection time for low value of PID feedback loss	0.0~30.0s	1.0s	×
F13.26	PID operation selection	Unit's place: PID operation selection when stop 0:Do not operate when stop 1:Operate when stop	00000	×
		Ten's place: output is limited by output frequency 0:No limited 1:limited		
		Hundred's place: UP/DOWN digital given of PID 0:Zero clearing when power off 1:Hold when power off		
		Thousand's place: PID feedback loss detection when stop 0:Not detect when stop 1:detect when stop		
		Then thousand's place: action for PID feedback loss 0:Report fault 1:Ramp to stop		
F13.27	UP/DWON speed of PID digital given	0.0~100.0% (0.0% Invalid)	0.0%	△
F13.28	High value of PID feedback loss	0.1~100.0% 0.0%: Not judging feedback loss	100.0%	×
F13.29	Detection time for high value of PID feedback loss	0.0~30.0s	1.0s	×
F13.30	PID upper limit source	0:F13.22 1:F13.22*VP 2:F13.22*AI1 3:F13.22*AI2 4:F13.22*HI 5:F13.22*AI3	0	×
F13.31	PID lower limit source	0:F13.23 1:F13.23*VP 2:F13.23*AI1 3:F13.23*AI2 4:F13.23*HI 5:F13.23*AI3	0	×
<b>Group F14: Swing Frequency, Fixed Length , Wakeup and Count</b>				
F14.00	Swing frequency setting mode	0: Relative to the setting frequency	0	×
		1: Relative to the maximum frequency		
F14.01	Swing frequency amplitude	0.0~100.0%	0.0%	△
F14.02	Jump frequency amplitude	0.0~50.0%	0.0%	△
F14.03	Rising Time of Swing frequency	0.0~6000.0s	5.0s	△
F14.04	Dropping Time of Swing frequency	0.0~6000.0s	5.0s	△

FR500A&FR510A Series Vector Control Inverter

F14.05	Set length	0m~65535m	1000m	×
F14.06	Number of pulses per meter	0.1~6553.5	100.0	×
F14.07	Command when the length attained	Unit's place: stop when the length reaches 0: Not stop 1: Stop	00	×
		Ten's place: length calculation method 0: pulse by pulse 1: Reference maximum frequency 2: Refer to AI1 channel 3: Refer to AI2 channel 4: Refer to AI3 channel		
F14.08	Set count value	1~65535	1000	×
F14.09	Designated count value	1~65535	1000	×
F14.10	Wakeup frequency	Dormant frequency (F14.12)~Fmax	0.00Hz	△
F14.11	Wakeup delay time	0.0~6000.0s	0.0s	△
F14.12	Dormant frequency	0.00~Wakeup frequency	0.00Hz	△
F14.13	Dormant delay time	0.0~6000.0s	0.0s	△
F14.14	Wake up mode selection	0: Frequency	0	×
		1: Pressure		
F14.15	Dormancy mode selection	0: Frequency	0	×
		1: Pressure		
F14.16	Voltage feedback source	Unit's place: pressure feedback 0: AI1 1: AI2 2: DI7/HI pulse input 3: AI3	0	×
		Ten's place: pressure dormancy mode 0:Positive direction, dormancy on big pressure and wakeup on small pressure 1:Negative direction, dormancy on small pressure and wakeup on big pressure		
F14.17	Wake up pressure	0.0%~Dormancy pressure	10.0%	△
F14.18	Dormancy pressure	Wake up pressure~100.0%	50.0%	△
<b>Group F15: Communication Parameters</b>				
F15.00	Baud rate	0: 4800bps	1	×
		1: 9600bps		
		2: 19200bps		
		3: 38400bps		
		4: 57600bps		
5: 115200bps				
F15.01	Data format	No check, data format (1-8-N-2) for RTU	0	×
		1: Even parity check, data format (1-8-E-1) for RTU		
		2: Odd Parity check, data format (1-8-O-1) for RTU		
		3: No check, data format(1-8-N-1) for RTU		
F15.02	Local address	1~247 0: Broadcast address	1	×

FR500A&FR510A Series Vector Control Inverter

F15.03	Communication timeout	0.0~60.0s	0.0s	×
F15.04	Response time delay	0~200ms	1ms	×
F15.05	Master-slave Communication Mode	0:The inverter is the slave 1:The inverter is the master	0	×
F15.06	The Master Communication Sending Data	0: Set frequency 1: Current running frequency	0	×
F15.07	Message return when communication error	0: No return 1: Return	1	
F15.08	U group return value	0: Positive and negative 1: Absolute value	0	△
<b>Group F16 Keys and Display of Keypad Parameters</b>				
F16.00	MF.K key setting	0: No function 1: Jog 2: Forward/reverse switchover 3: Run command sources shifted 4: Jog reverse	1	×
F16.01	Keyboard operation display	Unit's digit: Function selection of STOP/RESET key 0: stop function of STOP/RESET key is valid only in keyboard operation mode 1: Stop function of STOP/RES key is valid in any operation mode Ten's digit: Speed display (U00.05) 0: According to the actual speed 1: Multiply frequency by speed coefficient(F16.11) Hundred's digit: Decimal places 0: No decimal places 1: One decimal places 2: Two decimal places 3: Three decimal places	001	×
F16.02	Keys locked option	0: Not locked 1: Full locked 2: Keys locked other than RUN, STOP/RST 3: Keys locked other than STOP/RST 4: Keys locked other than >>	0	×
F16.03	LED displayed parameters setting 1 on running status	0~99(correspond U00.00~U00.99)	0	△
F16.04	LED displayed parameters setting 2 on running status	0~99(correspond U00.00~U00.99)	6	△
F16.05	LED displayed parameters setting 3 on running status	0~99(correspond U00.00~U00.99)	3	△
F16.06	LED displayed parameters setting 4 on running status	0~99(correspond U00.00~U00.99)	2	△
F16.07	LED displayed parameters setting 1 on stop status	0~99(correspond U00.00~U00.99)	1	△
F16.08	LED displayed	0~99(correspond U00.00~U00.99)	6	△

## FR500A&amp;FR510A Series Vector Control Inverter

	parameters setting 2 on stop status			
F16.09	LED displayed parameters setting 3 on stop status	0~99(correspond U00.00~U00.99)	15	△
F16.10	LED displayed parameters setting 4 on stop status	0~99(correspond U00.00~U00.99)	16	△
F16.11	Speed display coefficient	0.00~100.00	1.00	△
F16.12	Power display coefficient	0.0~300.0%	100.0%	△
F16.13	The enable difference range of U00.00 and U00.01	0.00Hz~5.00Hz	0.10Hz	△
<b>Group F17 User-defined Display Parameters</b>				
F17.00	User-defined Display Parameter 0	00.00~49.99	00.03	△
F17.01	User-defined Display Parameter 1	00.00~49.99	01.01	△
F17.02	User-defined Display Parameter 2	00.00~49.99	01.02	△
F17.03	User-defined Display Parameter 3	00.00~49.99	01.08	△
F17.04	User-defined Display Parameter 4	00.00~49.99	01.09	△
F17.05	User-defined Display Parameter 5	00.00~49.99	02.00	△
F17.06	User-defined Display Parameter 6	00.00~49.99	02.01	△
F17.07	User-defined Display Parameter 7	00.00~49.99	02.12	△
F17.08	User-defined Display Parameter 8	00.00~49.99	03.00	△
F17.09	User-defined Display Parameter 9	00.00~49.99	03.01	△
F17.10	User-defined Display Parameter 10	00.00~49.99	04.00	△
F17.11	User-defined Display Parameter 11	00.00~49.99	04.01	△
F17.12	User-defined Display Parameter 12	00.00~49.99	04.02	△
F17.13	User-defined Display Parameter 13	00.00~49.99	04.03	△
F17.14	User-defined Display Parameter 14	00.00~49.99	05.02	△
F17.15	User-defined Display Parameter 15	00.00~49.99	08.01	△
F17.16	User-defined Display Parameter 16	00.00~49.99	08.02	△
F17.17	User-defined Display Parameter 17	00.00~49.99	08.03	△
F17.18	User-defined Display Parameter 18	00.00~49.99	08.04	△
F17.19	User-defined Display Parameter 19	00.00~49.99	08.05	△
F17.20	User-defined Display Parameter 20	00.00~49.99	08.30	△
F17.21	User-defined Display	00.00~49.99	11.10	△

FR500A&FR510A Series Vector Control Inverter

	Parameter 21			
F17.22	User-defined Display Parameter 22	00.00~49.99	13.00	△
F17.23	User-defined Display Parameter 23	00.00~49.99	13.01	△
F17.24	User-defined Display Parameter 24	00.00~49.99	13.02	△
F17.25	User-defined Display Parameter 25	00.00~49.99	13.08	△
F17.26	User-defined Display Parameter 26	00.00~49.99	13.09	△
F17.27	User-defined Display Parameter 27	00.00~49.99	00.00	△
F17.28	User-defined Display Parameter 28	00.00~49.99	00.00	△
F17.29	User-defined Display Parameter 29	00.00~49.99	00.00	△
<b>Group F18 Parameters of Motor 2</b>				
F18.00	Motor 2 type selection	0: Three phase asynchronous motors	0	×
		1: Sync motor(PMSM)		
		2: Single phase asynchronous motors (Remove capacity)		
		3: Single phase asynchronous motors (No need to remove capacity)		
F18.01	Power rating of motor 2	0.1~1000.0kW	Model defined	×
F18.02	Rated voltage of motor 2	60~660V	Model defined	×
F18.03	Rated current of motor 2	0.1~1500.0A	Model defined	×
F18.04	Rated frequency of motor 2	20.00~Fmax	Model defined	×
F18.05	Rated speed of motor 2	1~30000	Model defined	×
F18.08	Stator resistance R1 of async motor 2	0.001~65.535Ω	Model defined	×
F18.09	Rotor resistance R2 of async motor 2	0.001~65.535Ω	Model defined	×
F18.10	Leakage inductance L1 of async motor 2	0.01~655.35mH	Model defined	×
F18.11	Mutual inductance L2 of asynchronous motor 2	0.1~6553.5mH	Model defined	×
F18.12	No-load current of async motor 2	0.1~1500.0A	Model defined	×
F18.13	Field weakening coeff 1 of async motor 2	0.0~100.0	87%	×
F18.14	Field weakening coeff 2 of async motor 2	0.0~100.0	75%	×
F18.15	Field weakening coeff 3 of async motor 2	0.0~100.0	70%	×
F18.16	PMSM Stator resistance (FR510A only)	0.001~65.535Ω	Model defined	×
F18.17	PMSM D-axis inductance (FR510A only)	0.01~655.35mH	Model defined	×
F18.18	PMSM Q-axis inductance (FR510A only)	0.01~655.35mH	Model defined	×

FR500A&FR510A Series Vector Control Inverter

F18.19	PMSM back EMF (FR510A only)	0~65535V	Model defined	×
F18.20	Installation angle of encoder (FR510A only)	0.0~359.9°	0.0°	×
F18.21	Pole number of motor	0~1000	4	×
F18.22	Find encoder origin at beginning (FR510A only)	0: Not find 1: Find	1	×
F18.23	Encoder line number (FR510A only)	0~10000	1024	×
F18.24	Encoder type (FR510A only)	0: ABZ encoder 1: UVW encoder 2: Rotary encoder 3: ECN1313 4: Sine-cosine encoder	0	×
F18.25	AB Phase Sequence of ABZ Incremental Encoder (FR510A only)	0: Positive 1: Negative	0	×
F18.26	Speed feedback PG disconnection detection time (FR510A only)	0.0: Invalid 0.1~10.0s	0.0s	×
F18.27	Speed Ratio of Motor to Encoder (FR510A only)	0.001~60.000	1.000	×
F18.28	Pole pairs of rotary encoder (FR510A only)	1~100	1	×
F18.30	Autotuning of motor 2	0: No autotuning	0	×
		1: Static autotuning of motor		
		2: Rotary autotuning of motor		
<b>Group F19 V/f Control Parameters of Motor 2</b>				
F19.00	V/f curve setting	00: Linear V/F	0	×
		01: Multi-stage V/F		
		02: 1.2nd power V/F		
		03: 1.4nd power V/F		
		04: 1.6nd power V/F		
		05: 1.8nd power V/F		
		06: 2.0nd power V/F		
		07: V/F complete separation		
		08: V/F half separation		
		09: 1.2 power inverse curve V/F		
		10: 1.4 power inverse curve V/F		
		11: 1.6 power inverse curve V/F		
		12: 1.8 power inverse curve V/F		
13: 2.0 power inverse curve V/F				
F19.01	Torque boost	0.1%~30.0% 0.0% (fixed torque boost)	0.0%	△
F19.02	Cut-off frequency of torque boost	0.00~Fmax	50.00Hz	△
F19.03	Multi-point V/F frequency 1(F1)	0.00~F19.05	0.00Hz	△
F19.04	Multi-point V/F voltage 1 (V1)	0.0~100.0	5.0%	△
F19.05	Multi-point V/F frequency 2(F2)	F19.03~F19.05	5.00Hz	△
F19.06	Multi-point V/F voltage 2 (V2)	0.0~100.0	14.0%	△
F19.07	Multi-point V/F frequency 3(F3)	F19.05~F19.09	25.00Hz	△

FR500A&FR510A Series Vector Control Inverter

F19.08	Multi-point V/F voltage 3 (V3)	0.0~100.0	50.0%	△
F19.09	Multi-point V/F frequency 4(F4)	F19.07~rated motor frequency	50.00Hz	△
F19.10	Multi-point V/F voltage 4 (V4)	0.0~100.0 Ue=100.0%	100.0%	△
F19.11	V/F slip compensation gain	0.0~300.0%	80.0%	△
F19.12	Stator voltage drop compensation gain	0.0~200.0%	100.0%	△
F19.13	Excitation boost gain	0.0~200.0%	100.0%	△
F19.14	Oscillation Suppression	0.0~300.0%	100.0%	△
F19.15	Voltage source for V/F separation	0: Digital setting (F19.16)	0	×
		1: keypad potentiometer		
		2: AI1		
		3: Multi-reference		
		4: Pulse setting ( DI7/HI )		
		5: PID		
		6: AI2		
7: AI3				
F19.16	Voltage digital setting for V/F separation	0 V to rated motor voltage	0.0%	△
F19.17	Voltage rise time of V/F separation	0.0~6000.0s It indicates the time for the voltage rising from 0 V to rated Motor voltage.	0.1s	△
F19.18	Set the IQ filter time below 0.5Hz in VVF mode	F19.19~3000ms	500ms	×
F19.19	Set the IQ filter time above 2Hz in VVF mode	1ms~F19.18	100ms	×
F19.20	Torque revision when run forward	0.0~5.0%	0.0%	△
F19.21	Torque revision when run reverse	0.0~5.0%	1.0%	△
F19.22	PMSM acceleration current compensation setting (FR510A only)	0.0~200.0%	0.0%	△
F19.23	PMSM compensation time decreased after acceleration (FR510A only)	0.0~100.0s	2.0s	△
F19.24	PMSM ID current value will be maintained after accelerating. (FR510A only)	0.0~200.0%	0.0%	△
<b>Group F20 Vector Control Parameters of Motor 2</b>				
F20.00	Speed/torque control	0: speed control	0	×
		1: torque control		
F20.01	ASR low-speed proportional gain Kp1	0.0~100.0	15.0	△
F20.02	ASR low-speed integration time Ti1	0.001~30.000s	0.100s	△
F20.03	ASR switching frequency 1	0.00~F20.06	5.00Hz	△
F20.04	ASR high-speed	1~100.0	10.0	△

FR500A&FR510A Series Vector Control Inverter

	proportional gain Kp2			
F20.05	ASR high-speed integration time Ti2	0.001~30.000s	0.500s	△
F20.06	ASR switching frequency 2	F20.03~Fmax	10.00Hz	△
F20.07	ASR input filtering time	0.0~500.0ms	3.0ms	△
F20.08	ASR output filtering time	0.0~500.0ms	0.0ms	△
F20.09	Vector control slip gain	50~200%	100%	△
F20.10	Digital setting of torque upper limit in speed control mode	80.0~200.0%	165.0%	×
F20.11	Excitation adjustment proportional gain Kp1	0.00~10.00	0.50	△
F20.12	Excitation adjustment integral gain Ti1	0.0~3000.0ms	10.0ms	△
F20.13	Torque adjustment proportional gain Kp2	0.00~10.00	0.50	△
F20.14	Torque adjustment integral gain Ti2	0.0~3000.0ms	10.0ms	△
F20.15	Excitation gain coefficient	50.0~200%	100%	△
F20.16	Torque setting source under torque control	0: Set by F20.17	0	×
		1: Keypad potentiometer		
		2: AI1		
		3: AI2		
		4: AI3		
		5: Pulse setting ( DI7/HI )		
F20.16	6: Communication setting			
F20.17	Digital setting of torque	-200.0~200.0%	50.0%	△
F20.18	Forward speed limited value under torque control	0.00~Fmax	50.00Hz	△
F20.19	Reverse speed limited value under torque control	0.00~ Fmax	50.00Hz	△
F20.20	Set torque accel time	0.0~6000.0s	0.0s	△
F20.21	Set torque decel time	0.0~6000.0s	0.0s	△
F20.22	Static friction torque compensation	0.0~100.0%	5.00%	△
F20.23	Static friction frequency range	0.00~20.00Hz	1.00Hz	△
F20.24	Static Frequency of Open-Loop Torque	1.00~10.00Hz	1.00Hz	△
F20.25	SVC optimization method	0: Optimization method 1	1	×
		1: Optimization method 2		
		2: Optimization method 3		
F20.26	Max Frequency source under torque control	0: Set by F20.18 & F20.19	0	×
		1: Keypad potentiometer		
		2: AI1		
		3: AI2		
		4: AI3		
F20.26	5: Pulse setting ( DI7/HI )			
F20.27	PMSM Start Excitation Current (FR510A only)	0.0~150.0%	50.0%	×
F20.28	PMSM Flux weakening control (FR510A only)	0: Invalid	1	×
		1: Valid		

FR500A&FR510A Series Vector Control Inverter

F20.29	PMSM Flux weakening Voltage (FR510A only)	70.0~100.0%	95.0%	Δ
F20.30	PMSM Flux weakening gain(Kp) (FR510A only)	0.0~500.0%	50.0%	Δ
F20.31	PMSM Flux weakening integral(Ti) (FR510A only)	0.00~60.00s	0.5s	Δ
F20.32	PMSM Flux weakening limit (FR510A only)	0.0~200.0%	100.0%	Δ
F20.33	PMSM excitation current frequency high point (FR510A only)	F10.34~600.00Hz	15.00Hz	Δ
F20.34	PMSM excitation current frequency low point (FR510A only)	0.0~F10.33	10.00Hz	Δ
F20.35	PMSM excitation current conversion delay (FR510A only)	0.0~10.0s	1.0s	Δ
F20.36	PMSM speed estimation Kp (FR510A only)	0.00~10.00	2.00	Δ
F20.37	PMSM speed estimation Ti (FR510A only)	0.1~1000.0ms	20.0ms	Δ
<b>Group F21 Position Control (FR510A only)</b>				
F21.00	Selection of Position Control Mode	0: Non-position control	0	×
		1: Zero Servo (Frequency Achievement Effective)		
		2: Zero Servo (Terminal Effective)		
		3: Spindle orientation		
		4: Simple carry		
5: Pulse train				
F21.01	Position loop gain	0.000~40.000	1.000	Δ
F21.02	Zero Servo Initiation Frequency	0.00Hz~Fmax	1.00Hz	×
F21.03	Location completion width	0~3000	10	×
F21.04	Location completion time	0.000~40.000s	0.200s	×
F21.05	Spindle orientation position 1	0~40000	0	Δ
F21.06	Spindle orientation position 2	0~40000	0	Δ
F21.07	Spindle orientation position 3	0~40000	0	Δ
F21.08	Spindle orientation position 4	0~40000	0	Δ
F21.09	Spindle orientation	Unit's place: spindle orientation direction 0: Orient from current direction of rotation 1: Direction from positive direction 2: Orient from reverse direction	00	×
		Ten's place: positioning when parking 0: Do not locate when parking 1: Positioning when parking		
F21.10	Spindle orientation speed	0.00Hz~Fmax	10.00Hz	×
F21.11	Spindle orientation deceleration time	0.0~60.0s	2.0s	×

FR500A&FR510A Series Vector Control Inverter

F21.12	Orientation position confirmation time	0.000~6.000s	0.010s	×
F21.13	Regression Origin Selection	Unit's place: back to origin selection 0: Invalid 1: Valid	00	×
		Ten's place: whether carry requires terminal enable signal 0: no need 1: Need		
F21.14	Regression Origin Direction	0:Forward	0	×
		1:Reverse		
F21.15	Regression Origin Frequency 1	0.00Hz~600.00Hz	10.00Hz	×
F21.16	Regression Origin Frequency 2	0.00Hz~60.00Hz	1.00Hz	×
F21.17	Carry amount 0 high	0~9999	0	△
F21.18	Carry amount 0 low	0~9999	0	△
F21.19	Carry amount 1 high	0~9999	0	△
F21.20	Carry amount 1 low	0~9999	0	△
F21.21	Carry amount 2 high	0~9999	0	△
F21.22	Carry amount 2 low	0~9999	0	△
F21.23	Carry amount 3 high	0~9999	0	△
F21.24	Carry amount 3 low	0~9999	0	△
F21.25	Carry amount 4 high	0~9999	0	△
F21.26	Carry amount 4 low	0~9999	0	△
F21.27	Carry amount 5 high	0~9999	0	△
F21.28	Carry amount 5 low	0~9999	0	△
F21.29	Carry amount 6 high	0~9999	0	△
F21.30	Carry amount 6 low	0~9999	0	△
F21.31	Carry amount 7 high	0~9999	0	△
F21.32	Carry amount 7 low	0~9999	0	△
F21.33	Selection of Position-Given Mode	0:X7 pulse input 1: Encoder gives A/B phase pulse, A phase ahead B phase 90 reads forward 2: Encoder gives A/B phase pulse, B phase ahead A phase 90 reads forward	0	×
F21.34	Electronic Gear Ratio Molecule	1~9999	1000	×
F21.35	Electronic gear denominator	1~9999	1000	×
F21.36	feed forward gain	0.000~7.000	1.000	△
F21.27	Feedforward filtering time	0.000~7.000s	0.001s	△
F21.38	Position offset change rate	0~9999	800	×
<b>F22Group:Virtual IO</b>				
F22.00	Function selection of virtual VDI1 terminal	The same as function code F04.00	0	×
F22.01	Function selection of virtual VDI2 terminal	The same as function code F04.00	0	×
F22.02	Function selection of virtual VDI3 terminal	The same as function code F04.00	0	×

FR500A&FR510A Series Vector Control Inverter

F22.03	Function selection of virtual VDI4 terminal	The same as function code F04.00	0	×
F22.04	Function selection of virtual VDI5 terminal	The same as function code F04.00	0	×
F22.05	Valid status setting mode of virtual VDI terminals	VDI5, VDI4, VDI3, VDI2, VDI1	00000	×
		0: Validity of VDI depends on virtual VDOx's status		
		1: Validity of VDI set by function code F22.06		
F22.06	Settings of virtual VDI terminal status	VDI5, VDI4, VDI3, VDI2, VDI1	00000	△
		0: Invalid		
		1: Valid		
F22.07	Function selection of virtual VDO1 terminals output	0 : Internal short circuited to physics Dlx Other: The same as function code F05.00	0	△
F22.08	Function selection of virtual VDO2 terminals output	0 : Internal short circuited to physics Dlx Other: The same as function code F05.00	0	△
F22.09	Function selection of virtual VDO3 terminals output	0 : Internal short circuited to physics Dlx Other: The same as function code F05.00	0	△
F22.10	Function selection of virtual VDO4 terminals output	0 : Internal short circuited to physics Dlx Other: The same as function code F05.00	0	△
F22.11	Function selection of virtual VDO5 terminals output	0 : Internal short circuited to physics Dlx Other: The same as function code F05.00	0	△
F22.12	Virtual VDO1 output delay time	0.0s~6000.0s	0.0s	△
F22.13	Virtual VDO2 output delay time	0.0s~6000.0s	0.0s	△
F22.14	Virtual VDO3 output delay time	0.0s~6000.0s	0.0s	△
F22.15	Virtual VDO4 output delay time	0.0s~6000.0s	0.0s	△
F22.16	Virtual VDO5 output delay time	0.0s~6000.0s	0.0s	△
F22.17	VDO output terminal positive and negative logic	VDO5, VDO4, VDO3, VDO2, VDO1	00000	△
		0: Positive logic		
		1: Negative logic		
<b>Group U00 Status Monitoring</b>				
U00.00	Running frequency	0.00~Fup	0.00Hz	⊙
U00.01	Set frequency	0.00~Fmax	0.00Hz	⊙
U00.02	Output voltage	0~660V	0.0V	⊙
U00.03	Output current	0.0~3000.0A	0.0A	⊙
U00.04	Output power	-3000.0~3000.0kW	0.0kW	⊙
U00.05	Estimated Motor Speed	0~60000rpm	0rpm	⊙
U00.06	Bus voltage	0~1200V	0V	⊙

## FR500A&amp;FR510A Series Vector Control Inverter

U00.07	Synchronous Frequency	0.00~Fup	0.00Hz	⊙
U00.08	PLC step	1~15	1	⊙
U00.09	Program Operation Time	0.0~6000.0s(h)	0.0s(h)	⊙
U00.10	PID set	0~60000	0	⊙
U00.11	PID feedback	0~60000	0	⊙
U00.12	Status of DI1~DI5 digital input terminal	DI5 DI4 DI3 DI2 DI1	00000	⊙
U00.13	Status of DI6~DI7 digital input terminal	DI7 DI6	00	⊙
U00.14	Status of digital output terminal	R2 R1 Y2 Y1	0000	⊙
U00.15	AI1 input	0.0~100.0%	0.0%	⊙
U00.16	AI2 input	0.0~100.0%	0.0%	⊙
U00.17	AI3 input	-100.0~100.0%	0.0%	⊙
U00.18	Keypad potentiometer input	0.0~100.0%	0.0%	⊙
U00.19	HI input	0.00~100.00kHz	0.00kHz	⊙
U00.20	AO1 output	0.0~100.0%	0.0%	⊙
U00.21	AO2 output	0.0~100.0%	0.0%	⊙
U00.22	HO output	0.00~100.00kHz	0.00kHz	⊙
U00.23	Temperature of inverter	-40.0℃~120.0℃	0.0℃	⊙
U00.24	Accumulative power-on time	0~65535min	0min	⊙
U00.25	Accumulative running time	0~6553.5min	0.0min	⊙
U00.26	Cumulative power-on time	0~65535h	0h	⊙
U00.27	Cumulative running time	0~65535h	0h	⊙
U00.28	Count value	0~65535	0	⊙
U00.29	Length value	0~65535m	0m	⊙
U00.30	Linear speed	0~65535m/min	0m/Min	
U00.31	Output torque	0.0~300.0%	0.0%	⊙
U00.32	PTC motor temperature detection	-40℃~200℃	0℃	⊙
U00.33	Speed that detected by encoder	0~60000rpm	0rpm	⊙
U00.34	Monitoring of encoder line number	0~65535	0	⊙
U00.35	Power consumption	0~65535kWh	0kWh	⊙
U00.36	VDI1~VDI5 input status	VDI5 VDI4 VDI3 VDI2 VDI1	00000	⊙
U00.37	VDO1~VDO5output status	VDO5 VDO4 VDO3 VDO2 VDO1	00000	⊙
U00.38	High speed pulse X7 or the line number of extension card monitoring	0~65535	0	⊙
U00.39	Sine cosine encoder C signal (FR510A only)	0~4096	0	⊙
U00.40	Sine cosine encoder D signal (FR510A only)	0~4096	0	⊙
U00.41	UVW encoder U V W signal (FR510A only)	U V W	000	⊙
<b>Group U01 Fault Record</b>				
U01.00	Code of the latest fault	Err00: No fault	0	⊙

FR500A&FR510A Series Vector Control Inverter

		Err01: Accel overcurrent		
		Err02: Decel overcurrent		
		Err03: Constant-speed overcurrent		
		Err04: Accel overvoltage		
		Err05: Decel overvoltage		
		Err06: Constant-speed overvoltage		
		Err07: Bus undervoltage		
		Err08: Short circuit		
		Err09: Power input phase loss		
		Err10: Power output phase loss		
		Err11: Motor overload		
		Err12: Inverter overload		
		Err13: External equipment fault		
		Err14: Module overheat		
		Err15: EEPROM read/write fault		
		Err16: Motor auto-tuning cancelled		
		Err17: Motor auto-tuning fault		
		Err18: Communication overtime		
		Error		
		Err19: PID feedback loss		
		Err20: Continuous running time Reached		
		Err21: Parameter upload fault		
		Err22: Parameter download fault		
		Err23: Braking unit fault		
		Err24: Module temperature detection disconnection		
		Err25: Load becoming 0		
		Err26: With-wave current limit fault		
		Err27: Inverter soft-start relay is off		
		Err28: EEPROM version is not compatible		
		Err29: Instantaneous overcurrent		
		Err30: Instantaneous overvoltage		
		Err39: PTC motor temperature too high		
		Err40: Setting operation time ends		
		Err41: Overload warning		
U01.01	Running frequency when the latest fault occurred	0.00~Fup	0.00Hz	⊙
U01.02	Output current when the latest fault occurred	0.0~3000.0A	0.0A	⊙
U01.03	Bus voltage when the latest fault occurred	0~1200V	0V	⊙
U01.04	Cumulative running time when the latest fault occurred	0~65535h	0h	⊙
U01.05	Code of previous fault	Same as U01.00	0	⊙
U01.06	Running frequency when previous fault occurred	0.00~Fup	0.00Hz	⊙
U01.07	Output current when previous fault occurred	0.0~3000.0A	0.0A	⊙
U01.08	Bus voltage when previous fault occurred	0~1200V	0V	⊙

## FR500A&amp;FR510A Series Vector Control Inverter

U01.09	Cumulative running time when previous fault occurred	0~65535h	0h	⊙
U01.10	Before-previous fault code	Same as U01.00	0	⊙
U01.11	Running frequency when before-previous fault occurred	0.00~Fup	0.00Hz	⊙
U01.12	Output current when before-previous fault occurred	0.0~3000.0A	0.0A	⊙
U01.13	Bus voltage when before-previous fault occurred	0~1200V	0V	⊙
U01.14	Cumulative running time when before-previous fault occurred	0~65535h	0h	⊙
U01.15	Previous 3 categories of faults	The same with U01.00	Err00	⊙
U01.16	Previous 4 categories of faults	The same with U01.00	Err00	⊙
U01.17	Previous 5 categories of faults	The same with U01.00	Err00	⊙
U01.18	Previous 6 categories of faults	The same with U01.00	Err00	⊙
U01.19	Previous 7 categories of faults	The same with U01.00	Err00	⊙
U01.20	Previous 8 categories of faults	The same with U01.00	Err00	⊙
U01.21	Previous 9 categories of faults	The same with U01.00	Err00	⊙
U01.22	Previous 10 categories of faults	The same with U01.00	Err00	⊙
U01.23	Previous 11 categories of faults	The same with U01.00	Err00	⊙
U01.24	Previous 12 categories of faults	The same with U01.00	Err00	⊙
U01.25	Previous 13 categories of faults	The same with U01.00	Err00	⊙

## Chapter 6 Specification of Parameters

### Group F00 System Parameters

F00.00	Setting of user password	Range: 0~65535	Default: 0
--------	--------------------------	----------------	------------

Setting of password:

A number greater than 100 could be set as a user password by entering this password into F00.00 and pressing ENT key to confirm once, the password setting will take effect as long as there is no operation on keypad within 2 minutes, or cutting the power off and power up again. After a password has been set and taken effect, you must enter the correct password in order to enter the menu. If the entered password is incorrect you cannot view or modify parameters.

Change password:

Access F00.00 after entering the original password (at this point, F00.00 displays setting of user password) and set the new password following the above-noted procedure.

Password clearance:

Access F00.00 after entering the original password (at this point, F00.00 displays setting of user password); F00.00 is set to 0 and press ENT key to make confirmation. In this way, password is successfully cleared and the password protection function is disabled.

F00.01	Display of parameters	Range: 0~2	Default: 0
--------	-----------------------	------------	------------

0: Display all parameters

1: Only display F00.00, F00.01 and user-defined parameters

2: Only display F00.00, F00.01 and the parameters different with factory default

F00.02	Parameter protection	Range: 0~1	Default: 0
--------	----------------------	------------	------------

0: All parameter programming allowed

1: Only this parameter programming allowed

F00.03	G/P type display	Range: 0~1	Default: 0
--------	------------------	------------	------------

0: G type (constant torque load)

1: P type (variable torque load e.g. fan and pump)

F00.04	Parameter initialization	Range: 0~6	Default: 0
--------	--------------------------	------------	------------

0: No operation

1: Restore all parameters to factory default (excluding motor parameters)

If F00.04 is set to 1, most function codes are restored to the default settings except motor parameters, fault records, accumulative running time, and accumulative power-on time.

2: Clear fault record

If F00.04 is set to 2, all fault record of Group U01 will be cleared.

3: Back up current user parameters

If F00.04 is set to 3, the current parameter settings are backed up, helping you to restore the setting if incorrect parameter setting is performed.

4: Restore all parameters to backup parameters

If F00.04 is set to 4, the previous backup user parameters are restored.

5: Restore factory default (include motor parameters)

The same as function 1, but this include motor parameters

6: Power consumption zero clearing

After setting F00.04 as 6, U00.35 parameter cleared to zero

F00.06	Parameter editing mode	Range: 0~2	Default: 0
--------	------------------------	------------	------------

0: Editable via keypad and RS485

1: Editable via keypad

2: Editable via RS485

F00.07	Motor selection	Range: 0~1	Default: 0
--------	-----------------	------------	------------

0: Motor 1

The first set of motors and motor control parameters are adopted.

1: Motor 2

Using the second set of motors and motor control parameters

F00.08	Motor 1 control mode	Range:0~2	Default:1
--------	----------------------	-----------	-----------

**Unit's place: Motor 1 control mode**

0: V/f control

Constant voltage&frequency ratio control. Applicable to such cases in which the performance Requirement to the drive is not rigorous, or using one drive to drive several motors, or it is difficult to identify motor parameters correctly, etc. When motor 1 under V/f control is selected, need to set related parameters Group F09 well.

1: Sensor-less vector control 1

This helps achieve high-performance control without encoder and provides strong adaptability of load. Under this selection, please correctly set parameters Group F08 and F09.

2: Sensor-less vector control 2

This helps achieve high-performance control without encoder. This control technique is superior to sensor-less vector control 1. Under this selection, please correctly set motor parameters of Group F08 and vector control parameters of Group F10.

3: Vector control with PG card

**Ten's place: Motor control with PG card (Same as Units)**

F00.09	DI7/HI input mode	Range:0~1	Default: 0
--------	-------------------	-----------	------------

0: Digital input terminal 7

1: Pulse input

F00.10	AI1/AI2/AI3 input mode	Range:000~111	Default: 0
--------	------------------------	---------------	------------

**Unit's place: AI1**

0: Analog input

1: Digital input

**Ten's place: AI2 (same as AI1)****Hundred's place: AI3 (same as AI1)**

F00.11	Y2/HO input mode	Range:0~1	Default: 0
--------	------------------	-----------	------------

0: Digital Output terminal 2

1: Pulse output

F00.12	PWM optimization	Range:000~923	Default:500
--------	------------------	---------------	-------------

**Unit's place: PWM modulation mode**

0: Fixed carrier

Carrier of inverter is a fixed value set by F00.13.

1: Random carrier

Inverter carrier will vary with output frequency in linear variation. Upper/Lower carrier frequencies are under control of F00.14 and F00.15.

2: Derating of fixed carrier

Inverter can adjust carrier value based on F00.12, carrier temperature and carrier current, protecting itself against overtemperature.

3: Derating of random carrier

Inverter can adjust carrier value based on random carrier, carrier temperature and carrier current, protecting itself against overtemperature.

**Ten's place: PWM modulation mode**

0: Seven-segment mode

1: Five-segment mode

2: Five-segment and seven-segment automatic switchover

This selection is valid only for V/f control. When five-segment mode is selected, the drive has low temperature rise but relatively higher output current harmonic. Under seven-segment mode, it has relatively higher temperature rise but lower output current harmonic. Under SVC pattern, PWM is seven-segment mode.

**Hundred's place: over-modulation adjustment**

0: invalid

1-9: 1.01-1.09 times overmodulation

At low grid voltage or long-term heavy-duty operation, over-modulation can improve the voltage utilization and enhance the maximum voltage output capacity of the drive. This parameter takes effect only for V/f control, while over-modulation is enabled all the time under SVC pattern.

F00.13	Carrier frequency	Range:0.700~16.000kHz	Default: Model
--------	-------------------	-----------------------	----------------

## FR500A&FR510A Series Vector Control Inverter

			defined
--	--	--	---------

At lower carrier frequency, output current of the drive produces higher harmonics, motor loss increases, and temperature and motor noise rise, but drive temperature, drive leakage current, and drive interference to external devices are lower or less.

With higher carrier frequency, drive temperature will rise, drive leakage current is bigger, and drive interference to external devices is bigger. However, motor loss and noise will be lower, and motor temperature will drop.

The table below specifies the setting range and factory default of PWM carrier frequency of the drives at different power ratings:

Power rating of the inverter	Range	Default
≤15kW	0.700k~16.000k	4.000k
18.5kW~45kW	0.700k~8.000k	4.000k
55kW~75kW	0.700k~6.000k	3.000k
≥90kW	0.700k~3.000k	2.000k

PWM carrier frequency setting method:

- 1) When the motor line is too long, reduce carrier frequency.
- 2) When torque at low speed is unstable, reduce carrier frequency.
- 3) If the drive produces severe interference to surrounding equipment, reduce carrier frequency.
- 4) Leakage current of the drive is big, reduce carrier frequency.
- 5) Drive temperature rise is relatively high, reduce carrier frequency.
- 6) Motor temperature rise is relatively high, increase carrier frequency.
- 7) Motor noise is relatively big, increase carrier frequency.

### ATTENTION:

Increasing carrier frequency can reduce motor noise and heat, but it will increase temperature of inverter. When the carrier frequency is higher than the default, inverter rated power shall be decreased by 5% for every additional 1 kHz carrier frequency.

F00.14	Upper carrier frequency	Range:0.700~16.000kHz	Default:8.000 kHz
F00.15	Lower carrier frequency	Range:0.700~16.000kHz	Default:2.000 kHz

Inverter carrier will vary with output frequency in linear variation. Upper/Lower carrier frequencies are under control of F00.14 and F00.15.

F00.16	Output voltage	Range:5.0~150.0%	Default:150.0%
--------	----------------	------------------	----------------

Adjust the percentage of output voltage to input voltage.

F00.17	AVR	Range:0~2	Default: 1
--------	-----	-----------	------------

0: Disabled

1: Always be valid

Output voltage of inverter adjust automatically according to fluctuation of the bus voltage, to keep output voltage constant.

2: Invalid when deceleration

AVR is invalid in the process of deceleration.

F00.18	Fan control	Range:0~1	Default:1
--------	-------------	-----------	-----------

After power is on, the fan runs per the control mode after running for 2 minutes regardless of the working status of inverter.

0: The fan runs directly after inverter is power-on.

1: the fan works when the AC drive is in running state. When the AC drive stops, the cooling fan works if the heat sink temperature is higher than 42°C, and stops working if the heat sink temperature is lower than 38°C.

F00.19	Factory password	Range:0~65535	Default: 0
--------	------------------	---------------	------------

Factory parameter

F00.20	Inverter rated power	Range:0.2~1000.0kW	Default: Model defined
F00.21	Inverter rated voltage	Range:220~380V	Default: Model defined
F00.22	Inverter rated current	Range:0.1~1500.0A	Default: Model defined
F00.23	Software version	Range:0.01~99.99	Default: Model

			defined
--	--	--	---------

The parameters are only for reference and cannot be edited.

F00.24	Dealer password	Range: 0~65535	Default: 0
F00.25	Setting operation time	Range: 0~65535h(0: Invalid)	Default: 0

When total running time  $\geq$ F00.25, inverter will not work. When setting F00.24, need to unlock F00.24 dealer passport, after time setting, need to input dealer passport to lock.

★: Setting this parameter may cause that the inverter can't work normally, please set carefully.

**Group F01 Frequency command**

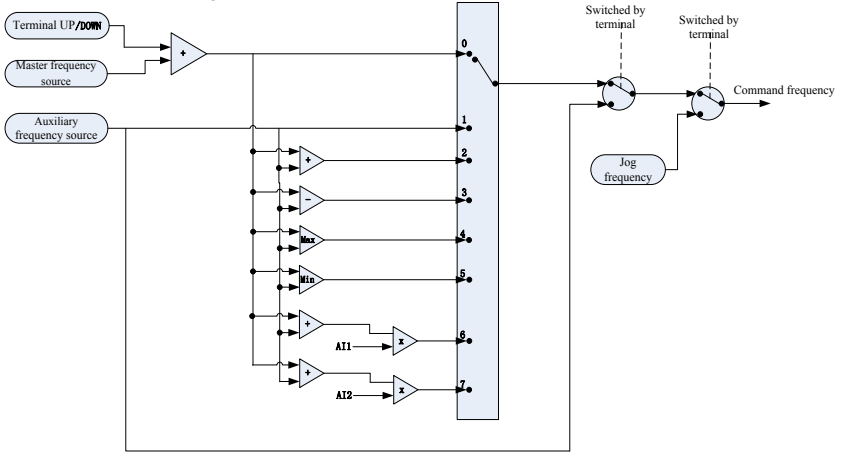


Fig. 6-1

F01.00	Frequency source selection	Range:0~7	Default: 0
--------	----------------------------	-----------	------------

- 0: Master frequency source  
The frequency source is determined by master frequency source F01.01.
- 1: Auxiliary frequency source  
The frequency source is determined by auxiliary frequency source F01.03.
- 2: Master + Auxiliary  
The frequency source is determined by Master + Auxiliary.
- 3: Master - Auxiliary  
The frequency source is determined by Master - Auxiliary.
- 4: MAX {Master, Auxiliary}  
The frequency source is determined by MAX {Master, Auxiliary}.
- 5: MIN {Master, Auxiliary}  
The frequency source is determined by MIN {Master, Auxiliary}.
- 6: AI1 □ (Master + Auxiliary)  
The frequency source is determined by AI1\*(Master + Auxiliary).
- 7: AI2 □ (Master + Auxiliary)  
The frequency source is determined by AI2\*(Master + Auxiliary).

F01.01	Master frequency source selection	Range:0~9	Default: 1
--------	-----------------------------------	-----------	------------

- 0: Digital setting (F01.02)  
When the inverter is powered on, the value of F01.02 is taken as the master frequency source.
- 1: Keypad potentiometer
- 2: Analog input AI1  
AI1 and AI2 are (0~10V) voltage input and (0~20mA) current input programmable. Voltage or current input can be selected through toggle switches AI1 and AI2 on control board.  
When using external voltage/current analog input to the drive, the connection diagram is shown

as Fig. 6-2:

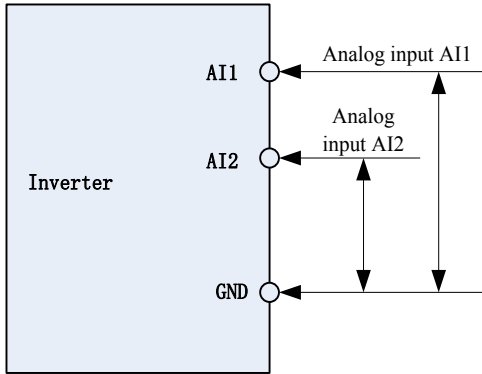


Fig. 6-2

If 10V power supply inside the drive is used with potentiometer, the connection diagram is shown as Fig. 6-3. Note that the toggle switch should be switched to voltage input side.

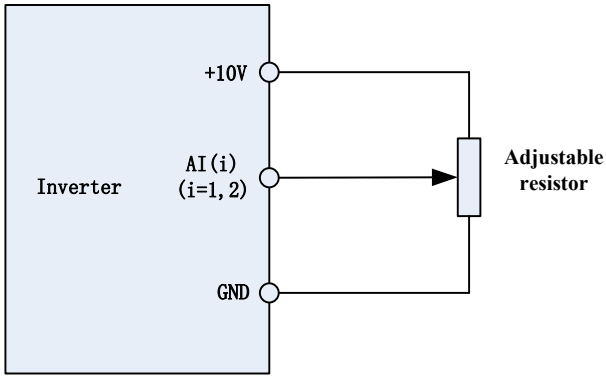


Fig. 6-3

3: Communication

Upper computer is the master frequency command source of the drive through standard RS485 communication interface on the drive. Refer to Group F15 and appendix on this manual for further information about communication protocol, and programming, etc.

4: Multi-reference

In multi-reference mode, combinations of different DI terminal states correspond to different set frequencies. The FR500A&FR510A supports a maximum of 16 speeds implemented by 16 state combinations of four DI terminals (allocated with functions 13 to 16) in Group F04. The multiple references indicate percentages of the value of F01.08 (Maximum frequency).

If a DI terminal is used for the multi-reference function, you need to perform related setting in group F04.

5: PLC

Master frequency command is determined by simple PLC. See parameter Group F12 for details.

6: Process PID output

Master frequency command is determined by process closed-loop PID computation result. See parameter Group F13 for details.

7: DI7/HI pulse input

If this parameter value selected, command frequency will be determined by pulse frequency input via terminal DI7/HI only. In such a case, F00.09 should be set to 1. Corresponding relation between pulse frequency and command frequency is specified in F06.32~F06.35.

8: AI2

Master frequency command is determined by analog input AI2.

9: AI3

Master frequency command is determined by analog input AI3.

F01.02	Digital setting of master frequency	Range:0.00~FmaxHz	Default:50.00Hz
--------	-------------------------------------	-------------------	-----------------

When master frequency source selection F01.01 is set to 1, this parameter value will be the initial value of master frequency command.

F01.03	Auxiliary frequency command source	Range:0~9	Default: 0
--------	------------------------------------	-----------	------------

0: Digital setting (F01.04)

When the inverter is powered on, the value of F01.02 is taken as the master frequency source.

1: Keypad potentiometer

Auxiliary frequency command is determined by keypad potentiometer.

2: Analog input AI1

Auxiliary frequency command is determined by analog input AI1.

3: Communication

Upper computer is the auxiliary frequency command source of the drive through standard RS485 communication interface on the drive.

4: Multi-reference

Auxiliary frequency command is determined by multi-reference. See parameter Group F04 for details.

5: PLC

Auxiliary frequency command is determined by simple PLC. See parameter Group F12 for details.

6: Process PID output

Auxiliary frequency command is determined by process PID computation result. See parameter Group F13 for details.

7: DI7/HI pulse input

Auxiliary frequency command is determined by DI7/HI pulse input.

8: AI2

Auxiliary frequency command is determined by analog input AI2.

9: AI3

Auxiliary frequency command is determined by analog input AI3.

F01.04	Digital setting of auxiliary frequency	Range:0.00~Fmax	Default:50.00Hz
--------	--	-----------------	-----------------

When auxiliary frequency command F01.03 is set to 0, this parameter value should be the initial value of auxiliary frequency command.

F01.05	Range of auxiliary frequency	Range:0~1	Default: 0
--------	------------------------------	-----------	------------

0: Relative to maximum frequency

1: Relative to master frequency

See F01.06 specification for details.

F01.06	Coeff of auxiliary frequency	Range:0.0~150.0%	Default:100.0%
--------	------------------------------	------------------	----------------

F01.05 and F01.06 will determine the final output value of auxiliary frequency command.

When F01.05 is set to 0 (relative to maximum frequency):

The auxiliary frequency= the auxiliary frequency  $\square$  F01.06.

When F01.05 is set to 1 (relative to master frequency):

The setting range of the auxiliary frequency varies according to the master frequency.

The auxiliary frequency= the auxiliary frequency  $\square$  F01.06  $\square$  abs (the master frequency)/F01.08.

F01.07	Jog frequency	Range:0.00~Fmax	Default:5.00Hz
--------	---------------	-----------------	----------------

This parameter sets the running frequency during jog.

F01.08	Maximum frequency	Range:20.00~600.00	Default:50.00Hz
--------	-------------------	--------------------	-----------------

Maximum frequency of F01.08 is the maximum allowable output frequency of drive.

F01.09	Upper limit frequency	Range:Fdown~Fmax	Default:50.00Hz
--------	-----------------------	------------------	-----------------

F01.10	Lower limit frequency	Range:0.00~Fup	Default:0.00Hz
--------	-----------------------	----------------	----------------

F01.09upper limit frequency is the user-defined maximum allowable running frequency; F01.10 lower limit frequency is user-defined minimum allowable running frequency.

**ATTENTION:**

1. Fup and Fdown shall be set as per motor nameplate parameters and working conditions. Motor

## FR500A&FR510A Series Vector Control Inverter

shall not work in low frequency for a long time. Otherwise, motor service lifespan will be shortened due to overheating.

### 2. Correlation of Fmax, Fup and Fdown: $0.00\text{Hz} \leq F_{\text{down}} \leq F_{\text{up}} \leq F_{\text{max}} \leq 600.00\text{Hz}$

F01.11	Operation when command frequency lower than lower limit frequency	Range:0~1	Default: 0
F01.12	Lower limit frequency running time	Range:0.0~6000.0s	Default:0.0s

0: Run at lower limit frequency

In case command frequency is lower than lower limit frequency, the running should be at lower limit frequency.

1: Run at 0 Hz would be activated after the time delay

If frequency command is lower than lower limit frequency, run at 0 Hz would be activated after the time delay set by F01.12. When lower limit frequency is 0, this limitation is invalid.

F01.13	Up to this frequency, start frequency compensation	Range: 0.00~600.00Hz	Default: 50.00Hz
F01.14	Frequency compensation per 50Hz	Range: 0.00~50.00Hz	Default: 0.00Hz

When frequency exceeded the value set by function code F01.13, output frequency will scale up the values that set by F01.14 for each exceeding 50Hz

## Group F02 Start/Stop Control Start/Stop Control

F02.00	Run command	Range:0~2	Default: 0
--------	-------------	-----------	------------

This parameter sets run command source. Run commands include "start, stop, forward , reverse, jog", etc.

0: Keypad control (LED off)

Control run command through RUN, STOP/RESET and MF.K keys on keypad (set multifunction key MF.K to JOG by F16.00). Refer to Chapter 4 about the operation of keypad.

1: Terminal control (LED on)

Controls run command via DI terminals. Perform FORWARD and REVERSE by DI terminals. The control modes are two-wire mode and three-wire mode selectable. See Group F04 for details of designation and wiring regulation of DI terminals.

2: Communication control (LED blinking)

Master device is able to control run command through built-in RS485 serial communication interface of drive. Refer to parameters Group F15 and appendix for further information about programming.

Run command from keypad, terminals and communication can be switched by terminals "run command switched to keypad control", "run command switched to terminal control" and "run command switched to communication control".

Multifunction key MF.K can be set to "run command sources shifted" key through parameter F16.00. When MF key is pressed under this setting; run command will be shifted during keypad control, terminal control and communication control circularly.

F02.01	Running direction	Range:0~1	Default: 0
--------	-------------------	-----------	------------

0: Forward

1: Reverse

You can change the rotation direction of the motor just by modifying this parameter without changing the motor wiring. Modifying this parameter is equivalent to exchanging any two of the motor's U, V, W wires.

### Note:

The motor will resume running in the original direction after parameter initialization. Do not use this function in applications where changing the rotating direction of the motor is prohibited after system commissioning is complete.

F02.02	Reverse-proof action	Range:0~1	Default: 0
--------	----------------------	-----------	------------

0: Reverse enabled

1: Reverse disabled

In some applications, reverse is likely to result in equipment damage. This parameter is used to prevent reverse running.

F02.03	Dead time of forward and reverse	Range:0.0~6000.0s	Default:0.0s
--------	----------------------------------	-------------------	--------------

The dead time with 0Hz output during the transition from forward to reverse, or from reverse to forward. As shown in Fig. 6-4.

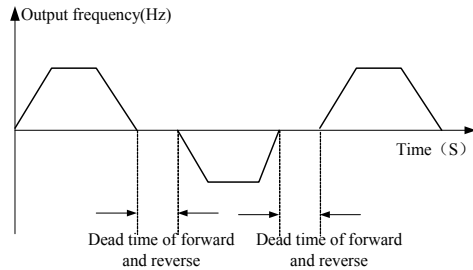


Fig. 6-4

F02.04	Start mode	Range:00000~31111	Default: 000
--------	------------	-------------------	--------------

#### Unit's place: Start mode

0: From start frequency

If the DC braking time (F02.08) is set to 0, the AC drive starts to run at the startup frequency(F02.05) and keeps this frequency for a period of time set by F02.06, and then accelerated to command frequency in accordance with the accel method and time..

If the DC braking time (F02.08) is not 0, the AC drive performs DC braking first and then starts to run at the startup frequency. It is applicable to small-inertia load application where the motor is likely to rotate at startup.

1: Rotational speed tracking restart

The AC drive judges the rotational speed and direction of the motor first and then starts at the tracked frequency. Such smooth start has no impact on the rotating motor. It is applicable to the restart upon instantaneous power failure of large-inertia load. To ensure the performance of rotational speed tracking restart, set the motor parameters correctly.

#### Ten's place: Grounding short circuit detection

0: No grounding short circuit detection

No grounding short circuit detection

1: Grounding short-circuit detection before the first start

After inverter power on, when first time received running command, before running, inverter automatically starts grounding short-circuit detection on output terminal, if there are short circuit faults between inverter's output terminal and ground, inverter will alarm Err44 fault.

2: Grounding short-circuit detection before each start

Inverter automatically starts grounding short circuit detection on output terminal before each start, if there are short circuit faults between output terminal of inverter and ground, inverter will alarm Err44 fault.

#### Hundred's place: Track direction

0: Track from zero speed

Under the speed tracking restart mode, when start, inverter track the current speed of motor slowly from zero to max frequency

1: Track from max frequency

Under the speed tracking restart mode, when start, inverter track current speed of motor slowly from max frequency to zero

#### Thousand's place: Jog command firstly act

0:When normal start and Jog start command comes simultaneously, normal start act firstly;

1:When normal start and Jog start command comes simultaneously, Jog start act firstly;

#### Ten thousand's place: Tracking direction

0: Last direction when stop

Tracking direction is the direction which inverter stop with.

1: Positive direction

Tracking direction is positive direction

2: Negative direction

## FR500A&FR510A Series Vector Control Inverter

Tracking direction is negative direction

3: Starting direction

Track from start direction

F02.05	Start frequency	Range:0.00~10.00Hz	Default:0.00Hz
F02.06	Startup frequency holding time	Range:0.0~100.0s	Default:0.0s

To ensure the motor torque at AC drive startup, set a proper startup frequency. In addition, to build excitation when the motor starts up, the startup frequency must be held for a certain period.

The startup frequency (F02.05) is not restricted by the frequency lower limit. If the set target frequency is lower than the startup frequency, the AC drive will not start and stays in the standby state.

During switchover between forward rotation and reverse rotation, the startup frequency holding time is disabled. The holding time is not included in the acceleration time but in the running time of simple PLC.

F02.07	Startup DC braking current	Range:0.0~150.0%	Default:0.0
F02.08	Startup DC braking time	Range:0.0~100.0s	Default:0.0

Startup DC braking is generally used during restart of the AC drive after the rotating motor stops. Pre-excitation is used to make the AC drive build magnetic field for the asynchronous motor before startup to improve the responsiveness.

Startup DC braking is valid only for direct start (f02.05 = 0). In this case, the AC drive performs DC braking at the set startup DC braking current. After the startup DC braking time, the AC drives starts to run. If the startup DC braking time is 0, the AC drives starts directly without DC braking. The larger the startup DC braking current is, the larger the braking force is.

F02.09	Speed search current	Range:0.0~180.0	Default:130.0%
--------	----------------------	-----------------	----------------

100% corresponds to rated current of the drive. When output current of drive is less than this parameter value, it will be deemed that the output frequency of drive has been kept in step with motor speed and the search action finished.

F02.10	Sped search decel time	Range:0.0~10.0	Default:1.0s
--------	------------------------	----------------	--------------

This parameter sets the output frequency Decel time of speed search action. This time means the time required for Decel from maximum frequency to 0. The shorter the speed search Decel time is, the faster the search will be. However, excessively rapid search may bring about inaccuracy of search result.

F02.11	Sped search coefficient	Range:0.01~5.00	Default:0.30
--------	-------------------------	-----------------	--------------

Sped search coefficient

F02.12	Stop method	Range:0~1	Default: 0
--------	-------------	-----------	------------

0: Ramp to stop

Upon the receipt of stop command, drive will gradually decrease output frequency according to the set Decel time, and stop when frequency attains 0.

1: Coast to stop

Upon the receipt of stop command, drive will immediately lock the output and the motor will stop with its mechanical inertia.

F02.13	Initial frequency of stop DC braking	Range:0.00~50.00Hz	Default:2.00Hz
F02.14	Stop DC braking current	Range:0.0~150.0%	Default:0.0%
F02.15	Waiting time of stop DC braking	Range:0.0~30.0s	Default:0.0s
F02.16	Stop DC braking time	Range:0.0~30.0s	Default:0.0s

Initial frequency of stop DC braking:

During the process of decelerating to stop, the AC drive starts DC braking when the running frequency is lower than the value set in F02.13.

Stop DC braking current:

This parameter specifies the output current at DC braking and is a percentage relative to the base value.

If the rated motor current is less than or equal to 80% of the rated AC drive current, the base value is the rated motor current.

If the rated motor current is greater than 80% of the rated AC drive current, the base value is 80% of the rated AC drive current.

Waiting time of stop DC braking:

When the running frequency decreases to the initial frequency of stop DC braking, the AC drive stops output for a certain period and then starts DC braking. This prevents faults such as over current caused due to DC braking at high speed.

Stop DC braking time:

This parameter specifies the holding time of DC braking. If it is set to 0, DC braking is cancelled.

**ATTENTION:**

If there is a DC brake signal of external terminal at stop, then the DC brake time takes the bigger value between the active time of the terminal and the setting time of F02.16.

The stop DC braking process is shown in the following figure.

Figure 6-5 Stop DC braking process

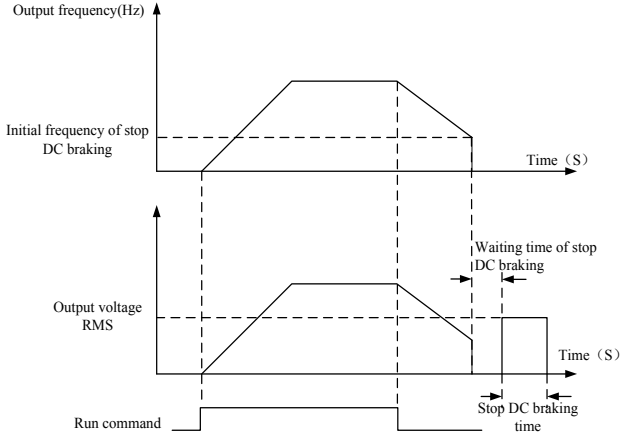


Fig. 6-5

F02.17	Dynamic brake	Range:0~3	Default: 0
--------	---------------	-----------	------------

When dynamic brake is enabled, the electric energy generated during Decel shall be converted into heat energy consumed by brake resistor, so as to attain rapid Decel. This brake method applies to brake of high-inertia load or the situations that require quick stop. In such a case, it is necessary to select appropriate dynamic brake resistor and break unit. The AC drives equal and below 30kW is provided with a standard built-in brake unit. Built-in brake unit is optional for AC drive 37kW~75kW.

- 0: Disabled
- 1: Enabled
- 2: Enabled at running
- 3: Enabled at deceleration

F02.18	Voltage of dynamic brake	Range: 480~800V	Default: 700V
--------	--------------------------	-----------------	---------------

This parameter takes effect only to the drives with built-in brake unit.

When bus voltage of AC drive attains the value of F02.18, dynamic brake shall perform. The energy shall be rapidly consumed through brake resistor. This value is used to regulate the brake effect of brake unit.

F02.19	Brake use ratio	Range:5.0~100.0%	Default:100.0%
--------	-----------------	------------------	----------------

It is valid only for the AC drive with internal braking unit and used to adjust the duty ratio of the braking unit. The larger the value of this parameter is, the better the braking result will be. However, too larger value causes great fluctuation of the AC drive bus voltage during the braking process.

F02.20	0Hz Output selection	Range: 0~1	Default: 0
--------	----------------------	------------	------------

- 0: No voltage output
- 1: Voltage output

F02.21	Auto-start of power-on again	Range: 0~1	Default: 0
--------	------------------------------	------------	------------

F02.22	Restart waiting time after outage	Range: 0.0~10.0s	Default: 0.5s
--------	-----------------------------------	------------------	---------------

## FR500A&FR510A Series Vector Control Inverter

Auto-start of power on again:

0:Invalid,after power off and power on again, inverter can't run before receiving running command.

When running on keyboard control or RS485 communication control, inverter will automatically clear running commands when power off.

When running on external terminal control , when power-off and then power on , no matter what value the function code F02.21 set, control commands of external terminal (FWD/REV) is valid . Inverter will run automatically according to starting mode that set before.

1: Valid

If inverter is in running condition before power-off, when power on again, after waiting time (set by F02.22), inverter will start automatically . The inverter will not accept run command within the waiting time between power off and restart, but in the meantime if input stop signal, inverter will clear restarting condition.

Attention: Power on again and auto-restart function can make inverter start running automatically after restoring the power. So, cause it's big occasionality, please be careful to adopt this function for personal and equipment's safety.

### Group F03 Accel/Decel Parameters

F03.00	Accel time 1	Range:0.0~6000.0s	Default: 15.0s
F03.01	Decel time 1	Range:0.0~6000.0s	Default: 15.0s
F03.02	Accel time 2	Range:0.0~6000.0s	Default: 15.0s
F03.03	Decel time 2	Range:0.0~6000.0s	Default: 15.0s
F03.04	Accel time 3	Range:0.0~6000.0s	Default: 15.0s
F03.05	Decel time 3	Range:0.0~6000.0s	Default: 15.0s
F03.06	Accel time 4	Range:0.0~6000.0s	Default: 15.0s
F03.07	Decel time 4	Range:0.0~6000.0s	Default: 15.0s

Accel time means required time for drive to Accelerate to maximum frequency F01.08 from zero frequency, while Decel time refers to the time required for drive to Decelerate to zero frequency from maximum frequency F01.08.

These four types of Accel/Decel time can be selected through the ON/OFF combination of DI terminals" Accel/Decel time determinant 1" and "Accel/Decel time determinant 2". See the following table.

Accel/Decel time determinant 2	Accel/Decel time determinant 1	Accel/Decel time
OFF	OFF	Accel/Decel time 1 ( F03.00, F03.01 )
OFF	ON	Accel/Decel time 2 ( F03.02, F03.03 )
ON	OFF	Accel/Decel time 3 ( F03.04, F03.05 )
ON	ON	Accel/Decel time 4 ( F03.06, F03.07 )

F03.08	Jog accel time	Range:0.0~6000.0s	Default: 15.0s
F03.09	Jog decel time	Range:0.0~6000.0s	Default: 15.0s

F03.08 and F03.09 set the rate of Accel/Decel of Jog, similar with F03.00~F03.07.

F03.10	Accel/Decel curve	Range:0~1	Default: 0
F03.11	Initial segment time of acceleration of S curve	Range:0.0~6000.0s	Default:0.0s
F03.15	End segment time of acceleration of S curve	Range:0.0~6000.0s	Default:0.0s
F03.16	Initial segment time of deceleration of S curve	Range:0.0~6000.0s	Default:0.0s
F03.17	End segment time of deceleration of S curve	Range:0.0~6000.0s	Default:0.0s

0: Linear Accel/Decel

Accel/Decel is in linear mode.

1: S-curve Accel/Decel

The 1<sup>st</sup> section and the last section in accelerating or decelerating are in smooth transition. The acceleration/deceleration curve is similar to S curve. When it is in S curve, the final acceleration/deceleration time= S curve time+ Linear acceleration/deceleration time. See Figure 6-13 for 2 acceleration/deceleration modes.

See Figure 6-6 for 2 acceleration/deceleration modes.

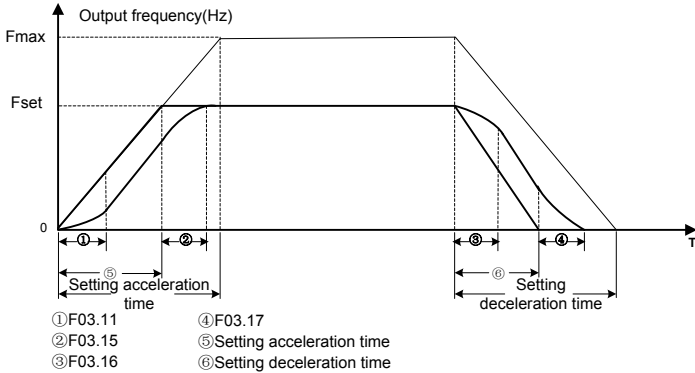


Figure 6-6

F03.12	unit of acceleration and deceleration time	0: 0.1s	0	×
		1: 0.01s		

This function is used to select unit of acceleration and deceleration time.

0: 0.1s

All the unit of acceleration and deceleration time is 0.1s, the function code decimal point of 4 section acceleration and deceleration time (F03.00~F03.07), jog acceleration and deceleration time, 4 section S-curve time (F03.11, F03.15~F03.17) is one.

1: 0.01s

All the unit of acceleration and deceleration time is 0.01s, the function code decimal point of 4 section acceleration and deceleration time (F03.00~F03.07), jog acceleration and deceleration time, 4 section S-curve time (F03.11, F03.15~F03.17) is two.

F03.13	Frequency switchover point between acceleration time 1 and acceleration time 2	Range:0.00~Fmax	Default:0.00Hz
F03.14	Frequency switchover point between deceleration time 1 and deceleration time 2	Range:0.00~Fmax	Default:0.00Hz

This function is valid when motor 1 is selected and acceleration/deceleration time switchover is not performed by means of DI terminal. It is used to select different groups of acceleration/deceleration time based on the running frequency range rather than DI terminal during the running process of the AC drive.

During acceleration, if the running frequency is smaller than the value of F03.13, acceleration time 2 is selected. If the running frequency is larger than the value of F03.13, acceleration time 1 is selected.

During deceleration, if the running frequency is larger than the value of F03.14, deceleration time 1 is selected. If the running frequency is smaller than the value of F03.14, deceleration time 2 is selected.

Figure 6-7 Acceleration/deceleration time switchovers.

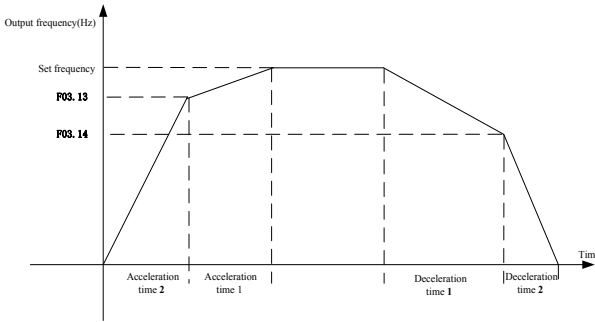


Figure 6-7

**Group F04 Digital Input**

F04.00	Function of terminal	DI1	Range:0~99	Default:1
F04.01	Function of terminal	DI2	Range:0~99	Default:2
F04.02	Function of terminal	DI3	Range:0~99	Default:7
F04.03	Function of terminal	DI4	Range:0~99	Default:13
F04.04	Function of terminal	DI5	Range:0~99	Default:0
F04.05	Function of terminal	DI6	Range:0~99	Default:0
F04.06	Function of terminal	DI7	Range:0~99	Default:0

Value	Function	description
0	No function	Set 0 for reserved terminals to avoid malfunction.
1	Forward RUN (FWD)	Terminals control forward running and reverse running of the drive. Refer to F04.15 for enabled conditions on initial power up.
2	Reverse RUN (REV)	
3	Three-wire control	The terminal determines three-line control of the AC drive. For details, see the description of F04.15.
4	Forward JOG (FJOG)	FJOG indicates forward JOG running, while RJOG indicates reverse JOG running. The JOG frequency, acceleration time and deceleration time are described respectively in F01.07, F03.08 and F03.09.
5	Reverse JOG (RJOG)	
6	Coast to stop	The AC drive blocks its output, the motor coasts to rest and is not controlled by the AC drive. It is the same as coast to stop described in F02.12.
7	Fault reset (RESET)	The terminal is used for fault reset function, the same as the function of RESET key on the operation panel.Remote fault reset is implemented by this function.
8	RUN pause	The AC drive decelerates to stop, but the running parameters are all memorized, such as PLC, swing frequency and PID parameters. After this function is disabled, the AC drive resumes its status before stop.
9	Normally open (NO) input of external fault	If this terminal becomes ON, the AC drive reports Err13 and performs the fault protection action. For more details, see the description of F11.11.
10	Terminal UP	If the frequency is determined by external terminals, the Terminals with the two functions are used as increment and decrement commands for frequency modification.
11	Terminal DOWN	

FR500A&FR510A Series Vector Control Inverter

12	UP and DOWN setting clear (terminal, keypad)	If the frequency source is master frequency source setting, the terminals used to clear the modification by using the UP/DOWN function or the increment/decrement key on the keypad, returning the set frequency to the value of master frequency source setting.
13	Multi-reference terminal 1	The setting of 16 speeds or 16 other references can be implemented through combinations of 16 states of these four terminals.
14	Multi-reference terminal 2	
15	Multi-reference terminal 3	
16	Multi-reference terminal 4	
17	Terminal 1 for acceleration/ deceleration time selection	Totally four groups of acceleration/deceleration time can be selected through combinations of two states of these two terminals.
18	Terminal 2 for acceleration/ deceleration time selection	
19	Acceleration/Deceleration prohibited	When "Accel/Decel disabled" terminal is enabled, the drive maintains the present output frequency and no longer responds to the change of command frequency. But it will still perform ramp-down stop when receiving stop command. This terminal is disabled during normal ramp-down stop.
20	Switch to auxiliary frequency source setting	Switch integrated frequency source setting mode to auxiliary frequency source setting mode.
21	PLC status reset	When simple PLC is running and this terminal is enabled. The status (running time and step) of PLC will be cleared and the output frequency is step 0. When this terminal is disabled again, the drive resumes PLC running from step 0.
22	Simple PLC paused	When simple PLC is running and this terminal is enabled, the current PLC status (running time and step) will be memorized, and the drive will run at 0Hz. When this terminal is disabled, the drive restores its running from the memorized moment.
23	PID pause	When this terminal is enabled, PID adjustment is paused, and the drive will maintain current output frequency. After this terminal becomes disabled, PID adjustment recovers.
24	Reverse PID action direction	After this terminal becomes ON, the PID action direction is reversed to the direction set in F13.04.
25	PID integral pause	After this terminal becomes ON, the integral adjustment function pauses. However, the proportional and differentiation adjustment functions are still valid.
26	PID parameter switchover	When PID parameter switch is set to "2: switched by terminal", this terminal could be used to realize the switching between two groups of PID parameters. When this terminal is enabled, PID parameters are Kp1 and Ti1, Td1. When this terminal is disabled, PID parameters are Kp2, Ti2 and Td2.
27	Swing frequency pause(output the current frequenc)	The AC drive outputs the current frequency, and the swing frequency function pauses.
28	Swing frequency reset(output the central frequency)	The AC drive outputs the central frequency, and the swing frequency function pauses.
29	Run comman	This terminal should be enabled by trigger edge. When this

## FR500A&FR510A Series Vector Control Inverter

	switched to keypad control	terminal status is switched from OFF to ON, run command will be switched to keypad control.
30	Run command switched to terminal control	This terminal should be enabled by trigger edge. When this terminal status is switched from OFF to ON, run command will be switched to terminal control.
31	Run command switched to communication control	This terminal should be enabled by trigger edge. When this terminal is switched from OFF to ON, run command will be switched to communication control.
32	Count input	The maximum frequency at count pulse input terminal is 200Hz, and the count value can be memorized in case of power loss. With the setting of F14.07 (set count value) and 14.08 (designated count value), this terminal can control digital output "set count value attained" and "designated count value attained".
33	Count clear	Used with "count input" terminal, to clear pulse count value.
34	Length count	It is used for fixed-length control, and only takes effect on digital input terminal DI7/HI. The length is calculated via pulse input. Please refer to specification of parameters 14.04~F14.06 for details. When the length is attained, digital output terminal "length attained" shall output effective signal. The current length value will be memorized on power loss.
35	Length clear	Used with "length count" terminal, to clear the length calculated.
36	DC brake input command at stop	When inverter is in the process of ramp-to-stop, and running frequency < DC brake frequency (Set by F02.13) at stop, if the terminal is ON, DC brake starts, until the terminal is OFF, DC brake ends. If the terminal is ON, and DC brake setting time is effective, take the bigger value between time when terminal is ON and DC brake setting time at stop.
37	Speed/torque control switch	When motor control mode is sensor-less vector control 2 and inverter stop, inverter will switch from speed control mode to torque control mode if this function is valid
38	No reverse	If this function is valid, the motor can't reverse.
39	No forward	If this function is valid, the motor can't forward
40	Zero-serve	Zero servo enabled terminal is only valid with PG vector control mode, and F21.00 (position control mode selection) needs to be set to 2:zero servo (terminal valid).
41	Enable spindle orientation	The spindle orientation function is only effective with PG vector control mode, and F21.00 (position control mode selection) needs to be set to 3: spindle orientation. When inverter is in operation, if it receives the effective signal of the " Enable spindle orientation " terminal, it reduces the output frequency according to the set deceleration time. When the motor speed reaches the directional speed, it detects the Z signal of the encoder, then decelerates and stops the machine according to the set directional deceleration time, and finally stops at the set directional position.
42	Spindle Orientation Position Selection 1	Through the state combination of the two input terminals, the switch can be made between four directional positions. For details, please refer to F21 group spindle orientation function instructions
43	Spindle Orientation Position Selection 2	
44	Simple carry origin signal input	This function only valid in PG vector control mode, and F21.00 (position control mode selection) is set to 4. When the simple carry control seeks the origin, this terminal signal is used as the input of the origin signal. The terminal input is ON at the origin position and OFF at the non-origin position

FR500A&FR510A Series Vector Control Inverter

45	FWD carry	It is only valid in simple carry control mode.
46	REV carry	It is only valid in simple carry control mode.
47	Carry amount selection terminal 1	When in simple carry mode, through a combination of the 3 terminals of different states, most can choose 8 kinds of carry amount. For details ,please refer to F21 group instruction.
48	Carry amount selection terminal 2	
49	Carry amount selection terminal 3	
70	Position given X7 direction input	When position control is pulse train control mode, X7 terminal is used to control the direction of pulse train. When this terminal is OFF, the input pulse is listed as positive; when this terminal is ON, the input pulse is listed as reverse.
71	Position Pulse Zero Clearing	Only valid in PG vector control mode, and F21.00=5 (pulse train control) conditions are effective. When this terminal is valid, the counting value of the burned pulse train is cleared to zero.
72	Forward position offset enable	Only valid in PG vector control mode, and F21.00=5 (pulse train control) conditions are effective. The two terminals are mainly used to adjust the phase of two or more motors in position synchronization control. When the motor position is synchronized, if the "positive position offset enable" terminal is valid, the frequency converter controls the phase of the motor to gradually change forward; if the "reverse position offset enable" terminal is valid, the phase of the motor will gradually change backward, thereby adjusting the relative position between two or more motors.
73	Reverse position offset enable	
74	Selection of pulse proportion of Ho output encoder	When the terminal is invalid, select the pulse proportion 1 set by f07.11, and when the terminal is valid, select the pulse proportion 2 set by f07.12
75	Current overrun switching(FR510A only)	When this function is disabled, if the current is over than the value set in F05.25, then the output terminal(the function is current overrun)valid. When this function is enabled, if the current is over than the value set in F05.26, then the output terminal(the function is current overrun)valid
76	Carry enable(FR510A only)	This function is used in combination with F21.13

Combination of different states of carry terminals 1-3. details as below:

Carry terminals 3	Carry terminals 2	Carry terminals 1	Carry amount
OFF	OFF	OFF	Carry amount 0 (F21.17、 F21.18)
OFF	OFF	ON	Carry amount 1 (F21.19、 F21.20)
OFF	ON	OFF	Carry amount 2 (F21.21、 F21.22)
OFF	ON	ON	Carry amount 3 (F21.23、 F21.24)
ON	OFF	OFF	Carry amount 4 (F21.25、 F21.26)
ON	OFF	ON	Carry amount 5 (F21.27、 F21.28)
ON	ON	OFF	Carry amount 6 (F21.29、 F21.30)

# FR500A&FR510A Series Vector Control Inverter

ON	ON	ON	Carry amount 7 (F21.31、F21.32)
----	----	----	-----------------------------------

The four multi-reference terminals have 16 state combinations, corresponding to 16 reference values, as listed in the following table.

Table 1 State combination of the four multi-reference terminals

Multi-reference terminal 4	Multi-reference terminal 3	Multi-reference terminal 2	Multi-reference terminal 1	Reference Setting	Corresponding Parameter
OFF	OFF	OFF	OFF	Reference 0	F12.16
OFF	OFF	OFF	ON	Reference 1	F12.01
OFF	OFF	ON	OFF	Reference 2	F12.02
OFF	OFF	ON	ON	Reference 3	F12.03
OFF	ON	OFF	OFF	Reference 4	F12.04
OFF	ON	OFF	ON	Reference 5	F12.05
OFF	ON	ON	OFF	Reference 6	F12.06
OFF	ON	ON	ON	Reference 7	F12.07
ON	OFF	OFF	OFF	Reference 8	F12.08
ON	OFF	OFF	ON	Reference 9	F12.09
ON	OFF	ON	OFF	Reference 10	F12.10
ON	OFF	ON	ON	Reference 11	F12.11
ON	ON	OFF	OFF	Reference 12	F12.12
ON	ON	OFF	ON	Reference 13	F12.13
ON	ON	ON	OFF	Reference 14	F12.14
ON	ON	ON	ON	Reference 15	F12.15

Table 2 State combinations of two terminals for acceleration/deceleration time selection

Acceleration/Deceleration time determinant 2	Acceleration/Deceleration time determinant 1	Acceleration/Deceleration Time Selection	Corresponding Parameters
OFF	OFF	Acceleration/Deceleration time 1	F03.00, F03.01
OFF	ON	Acceleration/Deceleration time 2	F03.02, F03.03
ON	OFF	Acceleration/Deceleration time 3	F03.04, F03.05
ON	ON	Acceleration/Deceleration time 4	F03.06, F03.07

F04.10	Filtering time of digital	Range:0.000~1.000s	Default:0.010s
--------	---------------------------	--------------------	----------------

	input terminal		
--	----------------	--	--

Set the filtering time of DI1~DI7 (when DI7/HI is used as ordinary low-speed terminal), AI1, AI2 and AI3 (when used as digital input terminal). Interference immunity of digital input terminals can be improved by appropriate filtering time. However, the response time of digital input terminal will become slower when filtering time is increased.

**ATTENTION:**

This filtering time takes no effect on DI7/HI when DI7/HI terminal is used as DI high-speed input terminal, while the filtering time of DI is determined by parameter F06.36.

F04.11	Delay time before terminal DI1 is valid	Range:0.0~300.0s	Default:0.0s
F04.12	Delay time before terminal DI2 is valid	Range:0.0~300.0s	Default:0.0s
F04.19	Delay time before terminal DI1 is invalid	Range:0.0~300.0s	Default:0.0s
F04.20	Delay time before terminal DI2 is invalid	Range:0.0~300.0s	Default:0.0s

The four parameters set the delayed response time before DI1/DI2 is valid or invalid

**ATTENTION:**

Terminal delay time F04.11 and F04.12 can be set with filtering time F04.10 at the same time. The drive will respond after the signals via DI1 and DI2 go through filtering time, and then delay time. Terminals DI3~DI7 have no delay time function.

F04.13	Terminal DI1~DI5 positive/negative logic	Range:00000~11111	Default:00000
--------	--	-------------------	---------------

These parameters are used to set the valid mode of DI terminals.

**Unit's place: DI1**

0: Positive logic

The DI terminal is valid when being connected with COM, and invalid when being disconnected from COM.

1: Negative Logic

The DI terminal is invalid when being connected with COM, and invalid when being disconnected from COM.

**Ten's place: DI2 (same as DI1)****Hundred's place: DI3 (same as DI1)****Thousand's place: DI4 (same as DI1)****Ten thousand's place: DI5 (same as DI1)**

F04.14	Terminal DI6~AI3 positive/negative logic	Range:00000~11111	Default:00000
--------	--	-------------------	---------------

**Unit's place: DI6**

0: Positive logic

The DI terminal is valid when being connected with COM, and invalid when being disconnected from COM.

1: Negative Logic

The DI terminal is invalid when being connected with COM, and invalid when being disconnected from COM.

**Ten's place: DI7 (same as DI6)****Hundred's place: AI1**

0: Positive logic ; < 3V, valid ; > 7V, invalid

1: Negative Logic ; < 3V, invalid ; > 7V, valid

**Thousand's place: AI2 (same as AI1)****Ten thousand's place: AI3**

0: Positive logic ; < -6V, valid ; > 4V, invalid

1: Negative Logic ; < -6V, invalid ; > 4V, valid

F04.15	Terminal command mode	Range:0~4	Default: 0
--------	-----------------------	-----------	------------


This parameter is used to set the mode in which the AC drive is controlled by external terminals. The following uses DI1, DI2 and DI3 among DI1 to DI7 as an example, with allocating functions of DI1, DI2 and DI3 by setting F4-00 to F4-02.

0: Two-line mode 1

## FR500A&FR510A Series Vector Control Inverter

It is the most commonly used two-line mode, in which the forward/reverse rotation of the motor is decided by DI1 and DI2. The parameters are set as below:

Function Code	Parameter Name	Value	Function Description
F04.15	Terminal command mode	0	Two-line 1
F04.00	DI1 function selection	1	Forward RUN (FWD)
F04.01	DI2 function selection	2	Reverse RUN (REV)

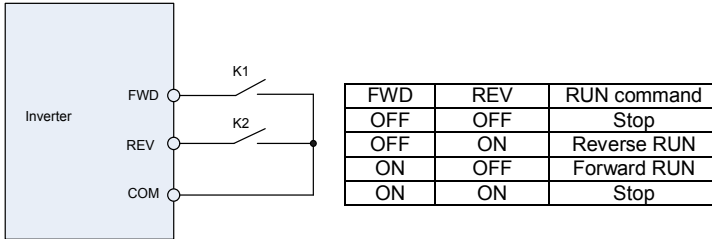

**Figure 6-8 setting of two-line mode 1**


As shown in the preceding figure, when only K1 is ON, the AC drive instructs forward rotation. When only K2 is ON, the AC drive instructs reverse rotation. When K1 and K2 are ON & OFF simultaneously, the AC drives stops.

### 1: Two-line mode 2

In this mode, DI1 is RUN enabled terminal, and DI2 determines the running direction.

The parameters are set as below:

Function Code	Parameter Name	Value	Function Description
F04.15	Terminal command mode	1	Two-line 2
F04.00	DI1 function selection	1	Forward RUN (FWD)
F04.01	DI2 function selection	2	Reverse RUN (REV)

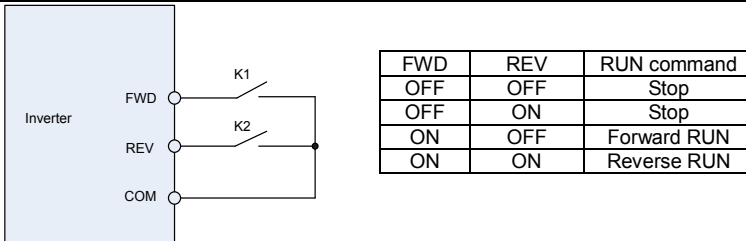

**Figure 6-9 setting of two-line mode 2**

As shown in the preceding figure, if K1 is ON, the AC drive instructs forward rotation when K2 is OFF, and instructs reverse rotation when K2 is ON. If K1 is OFF, the AC drives stops.

### 2: Three-line mode 1

In this mode, DI3 is RUN enabled terminal, and the direction is decided by DI1 and DI2.

The parameters are set as below:

Function Code	Parameter Name	Value	Function Description
F04.15	Terminal command mode	2	Three-line 1
F04.00	DI1 function selection	1	Forward RUN (FWD)
F04.01	DI2 function selection	2	Reverse RUN (REV)
F04.02	DI3 function selection	3	Three-line control

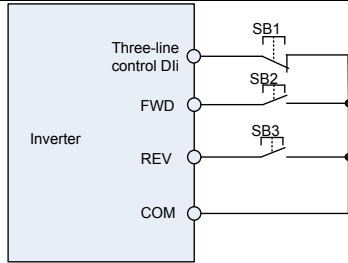


Figure 6-10 setting of three-line mode 1

As shown in the preceding figure, if SB1 is ON, the AC drive instructs forward rotation when SB2 is pressed to be ON and instructs reverse rotation when SB3 is pressed to be ON. The AC drive stops immediately after SB1 becomes OFF. During normal startup and running, SB1 must remain ON. The AC drive's running state is determined by the final actions on SB1, SB2 and SB3.

3: Three-line mode 2

In this mode, DI3 is RUN enabled terminal. The RUN command is given by DI1 and the direction is decided by DI2. The parameters are set as below:

Function Code	Parameter Name	Value	Function Description
F04.15	Terminal command mode	3	Three-line 2
F04.00	DI1 function selection	1	Forward RUN (FWD)
F04.01	DI2 function selection	2	Reverse RUN (REV)
F04.02	DI3 function selection	3	Three-line control

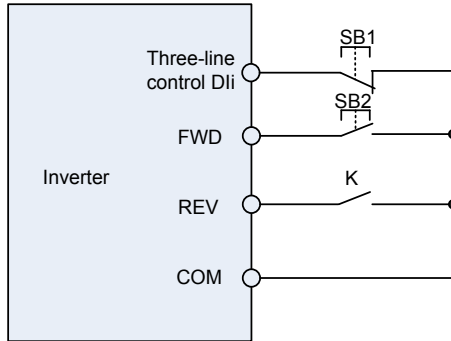


Figure 6-11 setting of three-line mode 2

As shown in the preceding figure, if SB1 is ON, the AC drive starts running when SB2 is pressed to be ON; the AC drive instructs forward rotation when K is OFF and instructs reverse rotation when K is ON. The AC drive stops immediately after SB1 becomes OFF. During normal startup and running, SB1 must remain ON. The AC drive's running state is determined by the final actions of SB1, SB2 and K.

4: Pulse operation stop


This mode is using one touch control, to start and stop inverter by pulse, motor forward and reverse operation is determined by DI1 and DI2.

Function code setting:

Function code	Name	Setting value	Function description
F04.15	FWD/REV terminal control mode selection	4	Pulse operation stop
F04.00	DI1 function selection	1	Forward operation (FWD)

# FR500A&FR510A Series Vector Control Inverter

F04.01	DI2 function selection	2	Reverse operation (REV)
--------	------------------------	---	-------------------------

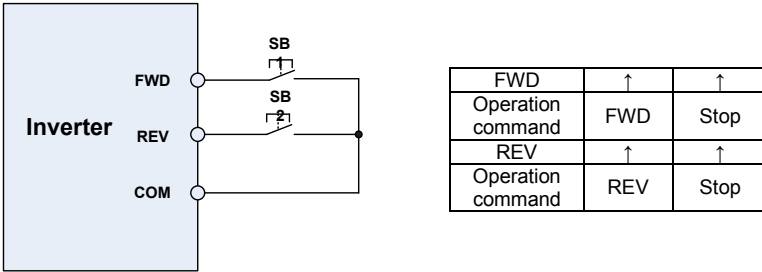

**Figure 6-12 Pulse operation stop control diagram**

Press SB1, inverter forward operation, press SB1 again inverter stop; Press SB2, inverter reverse operation, press SB2 again, inverter stop.

Press the SB1 button inverter run clockwise, press the SB1 button to stop the SB2 button is pressed again converter; inverter reverse operation, press the SB2button to stop again inverter.

F04.16	Terminal UP/DOWN frequency adjustment treatment	Range:00000~11111	Default:00000
--------	---	-------------------	---------------

**Unit's place: action when stop**

- 0: Clear  
Terminal UP/DOWN frequency adjustment value is cleared when the drive stops.
- 1: Holding  
Terminal UP/DOWN frequency adjustment value is maintained when the drive stops.

**Ten's place: action on power loss**

- 0: Clear  
Terminal UP/DOWN frequency adjustment value is cleared in case of power loss.
- 1: Holding  
Terminal UP/DOWN frequency adjustment value is saved in case of power loss.

**Hundred's place: integral function**

- 0: No integral function  
Adjustment step size is kept constant during terminal UP/DOWN adjustment, in compliance with

**F04.17.**

- 1: Integral function enabled  
When frequency is adjusted through terminal UP/DOWN, initial step size is set by F04.17.  
With the effective lasting time of the terminals, adjustment step size will increase gradually.

**Thousand's place: UP/DOWN frequency adjust selection**

- 0: Can't be reduced to negative frequency  
When adjusted by terminal UP/DOWN, frequency can't be reduced to negative value
- 1: Can be reduced to negative frequency  
When adjusted by terminal UP/DOWN, frequency can be reduced to negative value

**Ten thousand's place: Jog function to clear UP/DOWN**

- 0: Not clear
- 1: Clear

F04.17	Terminal UP/DOWN frequency change step size	Range:0.00~50.00Hz	Default:1.00Hz/200ms
--------	---	--------------------	----------------------

It is used to adjust the rate of change of frequency when the frequency is adjusted by means of terminal UP/DOWN.

F04.18	Power on running terminal action selection	Range: 0~1	Default: 0
--------	--	------------	------------

It is only valid to running command terminal which is set in number 1,2,4,5(Running forward, running reverse, JOG forward, JOG reverse), and only valid for the first running after power on.

- 0: Electrical level effective

When terminal is given running command, running terminal is detected to be ON, inverter start to run. Please ensure the terminal status before power on.

1: Edge trigger + Electrical level effective(When power on)

When terminal is given running command, the terminal is detected to jump from OFF to ON and maintain ON, inverter start to run.

2: Edge trigger + Electrical level effective(Every start)

When terminal is given running command, the terminal is detected to jump from OFF to ON and maintain ON, inverter start to run.

### Group F05 Digital Output

F05.00	Y1 output function	Range:0~99	Default:1
F05.01	Y2/HO output function (when used as Y2)	Range:0~99	Default:3
F05.02	Relay 1 output function	Range:0~99	Default:2
F05.03	Relay 2 output function	Range:0~99	Default:11

Define the functions of digital output terminals Y1 & Y2, relay 1 and relay 2. Output terminal function selections are as follows:

Setting	Corresponding function	Description
0	No output	Output terminal is disabled, and there is no output.
1	Drive is running	The output is ON when the drive is running, and output is OFF when drive stopped.
2	Fault output	When the drive is in fault, outputs ON.
3	Frequency-level detection FDT1 output	Refer to the descriptions of F05.10 and F05.11.
4	Frequency-level detection FDT2 output	Refer to the descriptions of F05.12 and F05.13.
5	Drive in 0Hz running 1(no output at stop)	When be running at 0Hz, this corresponding terminal outputs ON signal. No ON signal will be output at stop.
6	Drive in 0Hz running 2(output at stop)	Outputs ON signal when is running at 0Hz and also outputs ON signal at stop.
7	Upper limit frequency attained	When output frequency attains F01.09 (upper limit frequency), outputs ON.
8	Lower limit frequency attained (no output at stop)	When output frequency attains F01.10 (lower limit frequency), outputs ON. In the stop state, the terminal becomes OFF.
9	Frequency attained	Refer to the descriptions of F05.09.
10	Ready for RUN	If the AC drive main circuit and control circuit become stable, and the AC drive detects no fault and is ready for RUN, the terminal becomes ON.
11	Drive (motor) overloaded alarm	In case drive output current exceeds F11.19 (overload alarm threshold) and its last time exceeds F11.20 (overload alarm activated time that exceeding threshold), outputs ON. Refer to parameters F11.18~ F11.20 for information with regard to drive (motor) overloaded alarm.
12	Drive overheat alarm	When drive internally detected temperature exceeds F11.21 (Drive overheat alarm threshold), ON signal will be output.
13	Current running time attained	When current running time attains the value of F05.14, corresponding terminal outputs ON. Current running time is cleared when stop.
14	Accumulative power-on time attained	When accumulative power-on time attains the value of F05.15, corresponding terminal outputs ON. Accumulative power-on time is maintained when stop.
15	Accumulative running time attained	When accumulative running time attains the value of F05.16, corresponding terminal outputs ON. Accumulative running time is maintained when stop.

## FR500A&FR510A Series Vector Control Inverter

16	PLC cycle completed	Upon the completion of a cycle of simple PLC running, ON signal with a width of 250ms will be output.
17	Set count value attained	The terminal becomes ON when the count value reaches the value set in F14.07.
18	Designated count value attained	The terminal becomes ON when the count value reaches the value set in F14.08. Refer to the specification of parameter F14.07 and F14.08.
19	Length attained	The terminal becomes ON when the detected actual length exceeds the value set in F14.04. Refer to the specification of parameter F14.05~F14.07.
20	Under load alarm	When inverter under load, output ON signal
21	Brake Output	When the brake function selection is effective and reach brake open condition, output signal ON
22	DI1	Output DI1 status
23	DI2	Output DI2 status
24	Reach the range of FDT1	When running frequency reach the range of FDT1's upper limit and lower limit, output signal ON
25	Spindle orientation completion	Inverter spindle orientation, when the error between the encoder detection position and the setting location is less than the location completion width and the duration reaches the location completion time, the ON signal is considered to be fixed and output
26	PID feedback loss	When PID feedback value is more than the high value of PID feedback loss(F13.28) or less than the low value of PID feedback loss(F13.24) and duration reaches their accordingly detection time, then ON signal output.
27	Operation status (exclude Jog)	When inverter is running(exclude jog running), the terminal output valid
28	Communication setting (address 2007h)	When the terminal is set to this function, the output state of the terminal can be controlled through communication, and the data format written is R2 R1 Y2 Y1. For example: if R1 is set to 28, you can write 0100 to address 2007h, then R1's status becomes valid, and write 0000, then it becomes invalid
40	The current exceeds the limit	This function is used in combination with F05.25 and F05.26

F05.04	Y1 output delay time	Range:0.0~6000.0s	Default:0.0s
F05.05	Y2 output delay time	Range:0.0~6000.0s	Default:0.0s
F05.06	Relay 1 output delay time	Range:0.0~6000.0s	Default:0.0s
F05.07	Relay 2 output delay time	Range:0.0~6000.0s	Default:0.0s

These four parameters define the delay response time of digital output terminals Y1 & Y2, relay 1 and relay 2.

F05.08	Enabled state of digital output	Range:0000~1111	Default:0000
--------	---------------------------------	-----------------	--------------

Unit's place: Y1

0: Positive logic; ON when current passes through

1: Negative logic; ON when no current passes through

Decade: Y2 (sameas Y1)

Hundreds place: relay 1 output

0: Positive logic; ON when there is coil excitation

1: Negative logic; ON when there is no coil excitation

Thousands place: relay 2 output (same as relay 1)

Wiring diagram of digital output terminal is shown as Fig. 6-12:

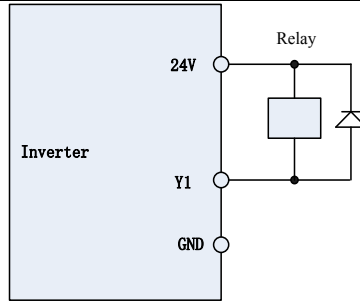


Fig. 6-12

F05.09	Detection width of frequency attained	Range:0.0~20.0Hz	Default:5.0Hz
--------	---------------------------------------	------------------	---------------

This parameter should be set with digital output terminal "frequency attained". When the difference between output frequency and command frequency is less than this value, terminal "frequency attained" output ON. See Fig. 6-13:

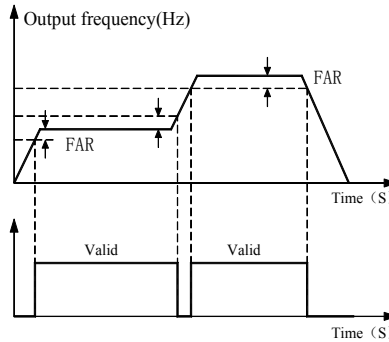


Fig. 6-13

F05.10	FDT1 upper bound	Range:0.00~Fmax	Default:30.00Hz
F05.11	FDT1 lower bound	Range:0.00~Fmax	Default:30.00Hz
F05.12	FDT2 upper bound	Range:0.00~Fmax	Default:30.00Hz
F05.13	FDT2 lower bound	Range:0.00~Fmax	Default:30.00Hz

These parameters should be set with digital output terminals "FDT1" and "FDT2".

Take FDT1 for example, the drive outputs ON signal when output frequency exceeds upper bound of FDT1 and will not output OFF signal unless output frequency drops to below lower bound of FDT1. Please set F05.10 to be larger to some certain extent than F05.11, avoiding status change frequently. See Fig. 6-14:

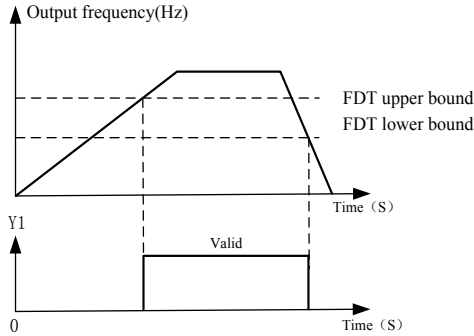


Fig. 6-14

F05.14	Consecutive running time	Range:0.0~6000.0Min	Default: 0.0Min
--------	--------------------------	---------------------	-----------------

This parameter should be set with digital output terminal "Consecutive running time attained". When current running time attains the value of F05.14, corresponding terminal outputs ON. Current running time is cleared when stop. When this parameter value is set to 0.0, this function is invalid.

F05.15	Accumulative power-on time	Range:0~65535h	Default: 0h
--------	----------------------------	----------------	-------------

This parameter should be set with digital output terminal "Accumulative power-on time attained". When accumulative power-on time attains the value of F05.15, corresponding terminal outputs ON. Accumulative power-on time is maintained when stop. When this parameter value is set to 0, this function is invalid.

F05.16	Accumulative running time	Range:0~65535h	Default: 0h
--------	---------------------------	----------------	-------------

This parameter should be set with digital output terminal "Accumulative running time attained". When accumulative running time attains the value of F05.16, corresponding terminal outputs ON. Accumulative running time is maintained when stop. When this parameter value is set to 0, this function is invalid.

F05.17	Brake control selection	Range: 0~1	Default value: 0
--------	-------------------------	------------	------------------

- 0: Disabled
- 1: Enabled

F05.18	Brake open frequency	Range: 0.00~20.00Hz	Default value: 2.50Hz
F05.19	Brake open current	Range: 0.0~200.0%	Default value: 0.0%
F05.20	Brake open waiting time	Range: 0.00~10.00s	Default value: 0.00s
F05.21	Brake open operating time	Range: 0.00~10.00s	Default value: 0.50s
F05.22	Brake closed frequency	Range: 0.00~20.00Hz	Default value: 2.00Hz
F05.23	Brake close waiting time	Range: 0.00~10.00s	Default value: 0.00s
F05.24	Brake close operating time	Range: 0.00~10.00s	Default value: 0.50s

Scheme of brake control process:

F05.25	Current overrun 1	Range: .1~1500.0A	Default value: 0.0A
F05.26	Current overrun 2	Range: .1~1500.0A	Default value: 0.0A

These two function codes are used as thresholds for over-current signal output . used in combination with output terminal.

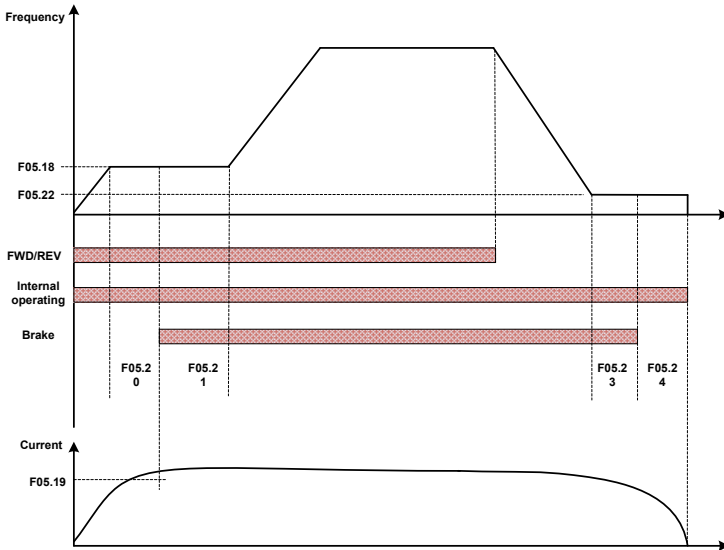


Fig 6-15 Break control logic scheme

- 1) After inverter receives a run command, accelerate the run to set F05.18 brake open frequency.
- 2) After the frequency reaches F05.18 set frequency, inverter keeps constant running and the duration reaches the F05.20 set brake open waiting time, inverter running constant speed continue to the F05.20 set brake open waiting time, switching output "brake output" terminal output OFF signal.
- 3) After reaching the brake open waiting time, if inverter current is more than or equal with the F05.19 set brake open current, at this time switching output "brake output" terminal output signal ON, inverter continue working on the F05.18 set frequency, when operating time reaches the F05.21 set time, running starts acceleration up to set frequency.
- 4) After inverter receives the stop command, running decelerate to the F05.22 set brake closing frequency, and then operate on the constant frequency.
- 5) After running frequency reaches the F05.22 set frequency, after delay the F05.23 set brake closing delay time, this period of time, "Brake Output" output ON signal.
- 6) After reaching the F05.23 set time, "Brake Output "terminal output OFF signal, the inverter output frequency keeps the F05.22 set value, after delaying reach the F05.24 set value, inverter blocks output, get into stopped state.

### Group F06 Analog and Pulse Input

F06.00	Minimum input of curve A11	Range: 0.0%~input of inflection point1 of curve A11	Default:1.0%
F06.01	Set value corresponding to minimum input of curve A11	Range:-100.0~100.0%	Default:0.0%
F06.02	Input of inflection point 1 of curve A11	Range: Minimum input of curve A11~Input of inflection point 2 of curve A11	Default:100.0%
F06.03	Set value corresponding to input of inflection point 1 of curve A11	Range:-100.0~100.0%	Default: 100.0%
F06.04	Input of inflection point 2 of curve A11	Range: Input of inflection point 1 of curve A11~Maximum input of curve A11	Default: 100.0%

# FR500A&FR510A Series Vector Control Inverter

F06.05	Set value corresponding to input of inflection point 2 of curve AI1	Range:-100.0~100.0%	Default: 100.0%
F06.06	Maximum input of curve AI1	Range: Input of inflection point 2 of curve AI1~100.0%	Default:100.0%
F06.07	Set value corresponding to maximum input of curve AI1	Range:-100.0~100.0%	Default:100.0%

Curve AI1 is defined by above-noted 8 parameters.

Input values F06.00, F06.02, F06.04, F06.06:

AI1~AI2 are 0~10V or 0~20mA programmable by jumper on control board.

If 0~10V is selected: 0V corresponds to 0%, while 10V corresponds to 100%.

If 0~20mA is selected: 0mA corresponds to 0%, while 20mA corresponds to 100%.

AI3 only supports -10V~10V input; For AI3, -10V corresponds to -100%, while 10V corresponds to 100%.

Corresponding set values F06.01, F06.03, F06.05, F06.07:

When the corresponding set value is frequency: 100% is the maximum frequency, while -100% is the maximum negative frequency.

When corresponding set value is torque: 100% means 2 times the rated torque, while -100% means negative "2 times the rated torque".

When the corresponding set value is output voltage (e.g. the voltage setting in case of V/f separated pattern): 100% corresponds to rated voltage of motor. "Less than or equal to 0%" corresponds to 0V voltage.

Curve diagram is shown as below:

**For Instance:**

Following description is taken AI1 as the example.

(1) Parameter setting


**Table 6-3(1) Parameter setting 1**

Code	Value	Code	Value
F06.01	-100%	F06.00	0.0%
F06.03	-50%	F06.02	25.0%
F06.05	70%	F06.04	75.0%
F06.07	100%	F06.06	100.0%

**Table 6-3(2) Parameter setting 2**

Code	Value	Code	Value
F06.01	100%	F06.00	0%
F06.03	70%	F06.02	40%
F06.05	-50%	F06.04	75%
F06.07	-100%	F06.06	100%

See Figure 6-15 (1) and Figure 6-15 (2) for input/output bias of Table 6-3(1) and Table 6-3(2) respectively.

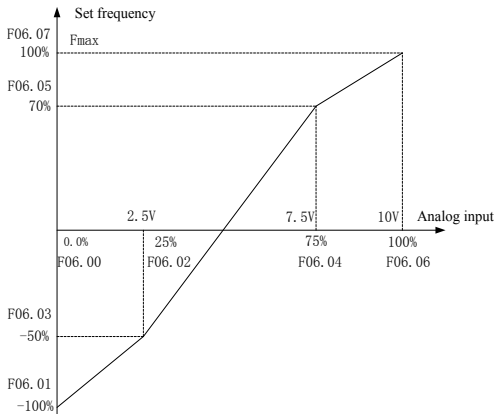

**Figure 6-16 (1)**

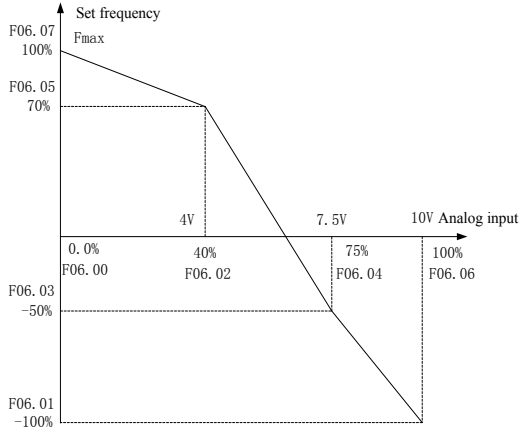


Figure 6-17 (2)

F06.08	Minimum input of curve AI2	Range:0.0%~input of inflection point1 of curve AI2	Default:1.0%
F06.09	Set value corresponding to minimum input of curve AI2	Range:-100.0~100.0%	Default:0.0%
F06.10	Input of inflection point 1 of curve AI2	Range:Minimum input of curve AI2~Input of inflection point 2 of curve AI2	Default: 100.0%
F06.11	Set value corresponding to input of inflection point 1 of curve AI2	Range:-100.0~100.0%	Default: 100.0%
F06.12	Input of inflection point 2 of curve AI2	Range:Input of inflection point 1 of curve AI2~Maximum input of curve AI2	Default: 100.0%
F06.13	Set value corresponding to input of inflection point 2 of curve AI2	Range:-100.0~100.0%	Default: 100.0%
F06.14	Maximum input of curve AI2	Range:Input of inflection point 2 of curve AI2~100.0%	Default:100.0%
F06.15	Set value corresponding to maximum input of curve AI2	Range:-100.0~100.0%	Default:100.0%
F06.16	Minimum input of curve AI3	Range:0.0%~input of inflection point1 of curve AI3	Default:0.0%
F06.17	Set value corresponding to minimum input of curve AI3	Range:-100.0~100.0%	Default:-100.0%
F06.18	Input of inflection point 1 of curve AI3	Range:Minimum input of curve AI3~Input of inflection point 2 of curve AI3	Default:25.0%
F06.19	Set value corresponding to input of inflection point 1 of curve AI3	Range:-100.0~100.0%	Default:-50.0%
F06.20	Input of inflection point 2 of curve AI3	Range:Input of inflection point 1 of curve AI3~Maximum input of curve AI3	Default:75.0%
F06.21	Set value corresponding to input of inflection point 2 of curve AI3	Range:-100.0~100.0%	Default:25.0%
F06.22	Maximum input of curve AI3	Range:Input of inflection	Default:100.0%

## FR500A&FR510A Series Vector Control Inverter

		point 2 of curve AI3~100.0%	
F06.23	Set value corresponding to maximum input of curve AI3	Range:-100.0~100.0%	Default:100.0%

Curve AI2 is defined by F06.08~F06.15. Curve AI3 is defined by F06.16~F06.23. The usage of curve AI2 and curve AI3 is the same as that of curve AI1.

F06.24	Minimum input of curve keypad potentiometer	Range:0.0~Maximum input of curve keypad potentiometer	Default:0.5%
F06.25	Set value corresponding to minimum input of curve keypad potentiometer	Range:-100.0~100.0%	Default:0.0%
F06.26	Maximum input of curve keypad potentiometer	Range: Minimum input of curve keypad potentiometer~100.0%	Default:99.9%
F06.27	Set value corresponding to maximum input of curve keypad potentiometer	Range:-100.0~100.0%	Default:100.0%

Curve keypad potentiometer is defined by above-noted 4 parameters.

Input values F06.24, F06.26:

keypad potentiometer is 0~5V on control board. 0V corresponds to 0%, while 5V corresponds to 100%.

Corresponding set values F06.25, F06.27:

When the corresponding set value is frequency: 100% is the maximum frequency, while -100% is the maximum negative frequency.

When corresponding set value is torque: 100% means 2 times the rated torque, while -100% means negative "2 times the rated torque".

When the corresponding set value is output voltage (e.g. the voltage setting in case of V/f separated pattern): 100% corresponds to rated voltage of motor. "Less than or equal to 0%" corresponds to 0V voltage. The difference is that curve keypad potentiometer is a straight line while curve AI1~AI3 is a broken line with two inflection points.

F06.28	AI1 terminal filtering time	Range:0.000~10.000s	Default:0.100s
F06.29	AI2 terminal filtering time	Range:0.000~10.000s	Default:0.100s
F06.30	AI3 terminal filtering time	Range:0.000~10.000s	Default:0.100s
F06.31	Keypad potentiometer filtering time	Range:0.000~10.000s	Default:0.100s

F06.28~F06.31 define the filtering time of analog input terminals AI1, AI2, AI3 and Keypad potentiometer. Long filtering time results in strong immunity from interference but slow response, while short filtering time brings rapid response but weak immunity from interference.

F06.32	Minimum input of curve HI	Range:0.00kHz~Maximum input of curve HI	Default:0.00kHz
F06.33	Set value corresponding to minimum input of curve HI	Range:-100.0~100.0%	Default:0.0%
F06.34	Maximum input of curve HI	Range: Minimum input of curve HI~100.00kHz	Default:50.00kHz
F06.35	Set value corresponding to maximum input of curve HI	Range:-100.0~100.0%	Default:100.0%

Curve HI is defined by above-noted 4 parameters.

Input values F06.32, F06.34:

HI is 0~100kHz.

Corresponding set values F06.33, F06.35:

When the corresponding set value is frequency: 100% is the maximum frequency, while -100% is the maximum negative frequency.

When corresponding set value is torque: 100% means 2 times the rated torque, while -100% means negative "2 times the rated torque".

When the corresponding set value is output voltage (e.g. the voltage setting in case of V/f separated pattern): 100% corresponds to rated voltage of motor. "Less than or equal to 0%" corresponds to 0V voltage.

### ATTENTION:

When pulse input is selected as the frequency command, DI7/HI terminal shall be set to "pulse input" function (F00.09 is set to 1).

F06.36	HI terminal filtering time	Range:0.000~10.000s	Default:0.100s
--------	----------------------------	---------------------	----------------

F06.36 defines the filtering time of pulse input terminals DI7/HI. Long filtering time results in strong immunity from interference but slow response, while short filtering time brings rapid response but weak immunity from interference.

### Group F07 Analog and Pulse Output

F07.00	AO1 output function	Range:0~99	Default:1
F07.01	AO2 output function	Range:0~99	Default:2
F07.02	HO output function	Range:0~99	Default:3

AO1 and AO2 are analog output terminals. Voltage output(0~10V) or current output(0~20mA) of AO1 and AO2 can be selected through toggle switch AO1 and AO2. When used as high-speed pulse output HO, Y2/HO terminal's functions are set in F00.11. Output range of HO pulse frequency is 0~F07.09 (maximum output pulse frequency).

The ranges of corresponding digital output of AO1, AO2 and HO are as shown in the following table.

Value	Function	Range
0	No output	No output
1	Output frequency	0.00~Fmax
2	Command frequency	0.00~Fmax
3	Output current	0~2 times the rated current of inverter
4	Output voltage	0~2 times the rated voltage of motor
5	Output power	0~ 2 times the rated power
6	Bus voltage	0~1000V
7	+10V	+10V
8	Keypad potentiometer	0~5V
9	AI1	0~10V/0~20mA
10	AI2	0~10V/0~20mA
11	AI3	-10~10V
12	HI	0.01kHz~100.00kHz
13	Output torque	0~2 times the rated torque
14	AO communication given 1	Output values set by communication address 2005H
15	AO communication given 2	Output values set by communication address 2006H
16	Encoder input	This function is only valid for Ho and is used to output ABZ pulse.

F07.03	AO1 offset	Range:-100.0~100.0%	Default:0.0%
F07.04	AO1 gain	Range:-2.000~2.000	Default:1.000

When users need to change AO1 measuring range or correct the error of meter, it can be realized by setting of F07.03 and F07.04. When using factory default set: 0~10V (or 0~20mA) of AO1 corresponds to "0~maximum". By expressing standard output of AO1 as x, the adjusted AO1 output as y, the gain as k, and the offset as b (100% of offset corresponds to 10V or 20mA), there is the equation:

$$y=kx+b$$

Example:

Set F07.00 to 1: output frequency. Standard AO1 output: AO1 outputs 0V when output frequency is 0, and outputs 10V when output frequency is maximum frequency. If AO1 is requested to output 2V when output frequency is 0.00Hz, and requested to output 8V when output frequency is the maximum frequency. There is:  $2=k \cdot 0+b$ ;  $8=k \cdot 10+b$ . Through these two equations, we obtain:  $k = 0.6$ ,  $b = 2V$ , i.e. F07.03 is set to 20.0% while F07.04 is set to 0.600.

F07.05	AO1 filtering time	Range:0.000~10.000s	Default:0.000s
--------	--------------------	---------------------	----------------

Define output filtering time of AO1 terminal.

## FR500A&FR510A Series Vector Control Inverter

F07.06	AO2 offset	Range:-100.0~100.0%	Default:0.0%
F07.07	AO1 gain	Range:-2.000~2.000	Default:1.000
F07.08	AO2 filtering time	Range:0.000~10.000s	Default:0.000s

Adjustment method of AO2 output curve is the same as AO1.

F07.09	HO maximum output pulse frequency	Range:0.01~100.00kHz	Default:50.00kHz
--------	-----------------------------------	----------------------	------------------

This parameter sets the maximum output frequency when Y2/HO terminal is selected as high-speed pulse output.

F07.10	HO output filtering time	Range:0.000~10.000s	Default:0.010s
--------	--------------------------	---------------------	----------------

Set the filtering time of HO high-speed pulse output. Filtering can change the change rate of output pulse frequency. The longer the filtering time is, the lower the change rate of output pulse frequency would be.

F07.11	Ho output encoder pulse proportion 1	Range: 0.00~10.00	Default: 1.00
F07.12	Ho output encoder pulse proportion 2	Range: 0.00~10.00	Default: 1.00

When Y2 / Ho outputs ABZ pulse as high-speed pulse output terminal, the ratio of ABZ pulse output can be set by setting two function codes f07.11 and f07.12. The switching of ratio 1 and 2 is determined by terminal function 74.

## Group F08 Parameters of Motor 1

F08.00	Motor 1 type selection	Range: 0~3	Default: 0
--------	------------------------	------------	------------

- 0: Three phase asynchronous motors
- 1: Sync motor(PMSM)
- 2: Single phase asynchronous motors(remove capacitance)
- 3: Single phase asynchronous motors(not remove capacitance)

F08.01	Power rating of motor 1	Range:0.1~1000.0kW	Default: Model defined
F08.02	Rated voltage of motor 1	Range:60~660V	Default: Model defined
F08.03	Rated current of motor 1	Range:0.1~1500.0A	Default: Model defined
F08.04	Rated frequency of motor 1	Range:20.00~Fmax	Default: Model defined
F08.05	Rated speed of motor 1	Range:1~60000rpm	Default: Model defined

Set the parameters according to the motor nameplate no matter whether V/F control or vector control is adopted.

To achieve better V/F or vector control performance, motor auto-tuning is required. The motor auto-tuning accuracy depends on the correct setting of motor nameplate parameters.

F08.08	Stator resistance R1 of async motor 1	Range:0.001~65.535Ω	Default: Model defined
F08.09	Rotor resistance R2 of async motor 1	Range:0.001~65.535Ω	Default: Model defined
F08.10	Leakage inductance L1 of async motor 1	Range:0.001~65.535mH	Default: Model defined
F08.11	Mutual inductance L2 of asynchronous motor 1	Range:0.1~6553.5mH	Default: Model defined
F08.12	No-load current of async motor 1	Range:0.1~1500.0A	Default: Model defined
F08.13	Field weakening coeff 1 of async motor 1	Range:0.0~100.0%	Default:87% (1.1)
F08.14	Field weakening coeff 2 of async motor 1	Range:0.0~100.0%	Default:75% (1.6)
F08.15	Field weakening coeff 2 of async motor 1	Range:0.0~100.0%	Default:70% (3)

## FR500A&FR510A Series Vector Control Inverter

The parameters in F08.08 to F08.15 are asynchronous motor parameters. These parameters are unavailable on the motor nameplate and are obtained by means of motor auto-tuning. Only F08.08 to F08.10 can be obtained through static motor auto-tuning. Through complete motor auto-tuning, encoder phase sequence and current loop PI can be obtained besides the parameters in F08.08 to F08.12. Each time "Rated motor power" (F08.01) or "Rated motor voltage" (F08.02) is changed, the AC drive automatically restores values of F08.08 to F08.12 to the parameter setting for the common standard Y series asynchronous motor.

If it is impossible to perform motor auto-tuning onsite, manually input the values of these parameters according to data provided by the motor manufacturer.

F08.16	Stator resistance of sync motor	Range: 0.001~65.535Ω	Default: Model defined
F08.17	D-axis inductance of sync motor	Range: 0.01~655.35mH	Default: Model defined
F08.18	Q-axis inductance of sync motor	Range: 0.01~655.35mH	Default: Model defined
F08.19	Back EMF of sync motor	Range: 0~65535V	Default: Model defined

The parameters in F08.16 to F08.19 are synchronous motor parameters. These parameters are unavailable on the motor nameplate and are obtained by means of motor auto-tuning.

F08.21	Pole number of motor	Range: 0~1000	Default: 4
--------	----------------------	---------------	------------

Pole number of motor, this function code is read only, after setting motor parameters, the value of this code will be calculated auto.

F08.20	Installation angle of encoder	Range: 0.0~359.9°	Default: 0.0°
--------	-------------------------------	-------------------	---------------

This function code shows the initial angle of encoder. The value is obtained by means of motor auto-tuning.

F08.22	Find encoder origin at beginning	Range: 0~ 1	Default: 1
--------	----------------------------------	-------------	------------

This code is used to determine whether or not to find encoder origin.

0: Not find

1: Find

F08.23	Encoder line number	Range: 0~10000	Default: 1024
--------	---------------------	----------------	---------------

That is, the number of pulses per turn of the encoder. When choosing PG vector control, it must be set correctly, otherwise the motor can not run normally.

F08.24	Encoder type	0: ABZ encoder 1: UVW encoder 2: Rotary encoder 3: ECN1313 4: Sine-cosine encoder	Default: 0
--------	--------------	---	------------

This function code is used to select Encoder type.

F08.25	AB Phase Sequence of ABZ Incremental Encoder	0: Positive 1: Negative	Default: 0
--------	--	----------------------------	------------

If the output signals of A and B phases of the encoder do not match the rotation direction of the motor, the output wiring of A and B phases should be exchanged. You can also change the F08.25 setting without rewiring.

## FR500A&FR510A Series Vector Control Inverter

F08.26	Speed feedback PG disconnection detection time	0.0: Invalid 0.1~10.0s	0.0s
--------	--	---------------------------	------

It is effective with PG vector control mode. The detection time of PG disconnection is set in seconds. When the converter runs at non-zero speed, if the input signals of A and B phases of the encoder are not detected continuously within the time set by F08.26, the "Err36" fault will be reported and the encoder will stop freely. Setting to 0 means no detection of encoder breaking.

F08.27	Speed Ratio of Motor to Encoder	0.001~60.000	1.000
--------	---------------------------------	--------------	-------

When the encoder is not installed on the motor, PG vector control for motor is also available by setting the speed ratio correctly. This parameter is defined as the ratio of motor speed to encoder speed.

For example, the deceleration ratio of motor and spindle on machine tool is 3:1, that is to say, every three turns of motor spindle rotates one turn, the encoder and the spindle are rigidly connected, set F08.27=3.000, then the encoder signal can be connected to the frequency converter for PG vector control.

F08.28	Pole pairs of rotary encoder	Range: 1~100	Default: 1
--------	------------------------------	--------------	------------

It is used to adapt the rotary encoder with different pole pairs.

F08.30	Autotuning of motor 1	Range:0~2	Default: 0
--------	-----------------------	-----------	------------

0: No auto-tuning

Auto-tuning is prohibited.

1: Motor static auto-tuning

It is applicable to scenarios where complete auto-tuning cannot be performed because the motor cannot be disconnected from the load. Before performing static auto-tuning, properly set the motor type and motor nameplate parameters of F08.00 to F08.07 first. The AC drive will obtain parameters of F08.08 to F08.10 by static auto-tuning. Set this parameter to 1, and press RUN. Then, the AC drive starts static auto-tuning.

2: Motor complete auto-tuning

To perform this type of auto-tuning, ensure that the motor is disconnected from the load. During the process of complete auto-tuning, the AC drive performs static auto-tuning first and then accelerates to 80% of the rated motor frequency within the acceleration time 4. The AC drive keeps running for a certain period and then decelerates to stop within deceleration time 4

Before performing complete auto-tuning, properly set the motor type, motor nameplate parameters of F08.00 to F08.07.

The AC drive will obtain motor parameters of F08.08 to F08.12 by complete auto-tuning.

Set this parameter to 2, and press RUN. Then, the AC drive starts complete auto-tuning.

### ATTENTION:

1) Please make sure the motor is in a stationary status before autotuning, or autotuning cannot be performed normally.

2) Keypad displays "TUNE", and RUN indicator is lighting during autotuning. RUN indicator turns off upon the completion of autotuning.

3) If autotuning failed, the fault code "Err17" shall be displayed.

## Group F09 V/f Control Parameters of Motor 1

F09.00	V/f curve setting	Range:0~13	Default: 0
--------	-------------------	------------	------------

Set the relation between output voltage and output frequency of the drive when motor 1 is under V/f control.

0: Linear V/f

Applies to general constant-torque load. When drive output frequency is 0, output voltage will be 0, while when output frequency is rated frequency of motor, the output voltage would be rated voltage of motor.

1: Broken line V/f (determined by F09.03~F09.10)

Applies to spin drier, centrifuge, industrial washing machine and to other special loads. When drive output frequency is 0, output voltage will be 0, while when output frequency is rated frequency of

motor, the output voltage would be rated voltage of motor. What is different is this pattern can set 4 inflection points by F09.03~F09.10.

- 2: 1.2nd power
- 3: 1.4nd power
- 4: 1.6nd power
- 5: 1.8nd power
- 6: 2.0nd power

Parameter values 2~6 apply to torque-dropped loads such as fans and water pumps. See Fig. 6-16.

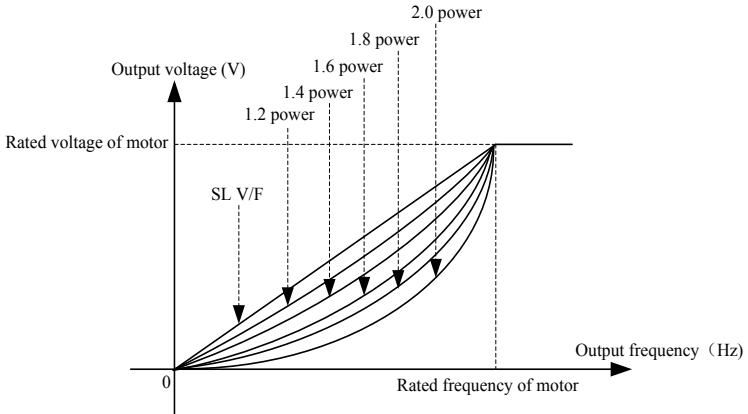


Fig. 6-24

#### 7: V/F complete separation

In this mode, the output frequency and output voltage of the AC drive are independent. The output frequency is determined by the frequency source, and the output voltage is determined by "Voltage source for V/F separation" (F09.15). It is applicable to induction heating, inverse power supply and torque motor control.

#### 8: V/F half separation

In this mode, V and F are proportional and the proportional relationship can be set in F09.15. The relationship between V and F are also related to the rated motor voltage and rated motor frequency in Group F08. Assume that the voltage source input is X (0 to 100%), the relationship between V and F is:

$$V/F = 2 \square X \square \square (\text{Rated motor voltage}) / (\text{Rated motor frequency})$$

#### 9: 1.2 power inverse curve

#### 10: 1.4 power inverse curve

#### 11: 1.6 power inverse curve

#### 12: 1.8 power inverse curve

#### 13: 2.0 power inverse curve

9~13 curve is for torque boost, which is rotated 180 degrees along diagonal line of 2~6 curve

F09.01	Torque boost	Range:0.0~30.0%	Default: 0.0%
F09.02	Cut-off frequency of torque boost	Range:0.0~Fmax	Default:50.0Hz

#### Torque boost:

Under V/f pattern, output voltage at low frequency can be compensated by this parameter, improving the torque output. 0.0% corresponds to automatic torque boost, and drive output voltage is automatically compensated via detection of load current. Automatic torque boost is valid only for linear V/f pattern. 100% of torque boost corresponds to rated voltage of motor. A non-zero value means the output voltage rises on the basis of V/f curve and this takes effect at parameter values 0~6 of F09.00. It is suggested this parameter value be gradually increased from zero until the starting requirement is met. Boost value is not suggested to be set to a relatively big one, as it is likely to bring about a bigger drive current and higher motor temperature.

# FR500A&FR510A Series Vector Control Inverter

Cut-off frequency of torque boost:

F09.02 specifies the frequency under which torque boost is valid. Torque boost becomes invalid when this frequency is exceeded, as shown in the following figure.

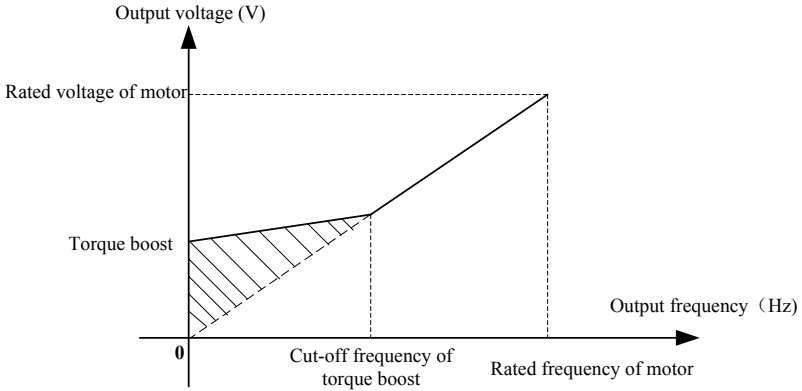


Fig. 6-25

Parameter	Description	Range	Default
F09.03	Multi-point V/F frequency 1(F1)	Range:0.0~F09.05	Default:0.0Hz
F09.04	Multi-point V/F voltage 1(V1)	Range:0.0~100.0%	Default:0.0%
F09.05	Multi-point V/F frequency 2(F2)	Range:F09.03~F09.07	Default:5.0Hz
F09.06	Multi-point V/F voltage 2(V2)	Range:0.0~100.0%	Default:14.0%
F09.07	Multi-point V/F frequency 3(F3)	Range:F09.05~F09.09	Default:25.0Hz
F09.08	Multi-point V/F voltage 3(V3)	Range:0.0~100.0%	Default:50.0%
F09.09	Multi-point V/F frequency 4(F4)	Range:F09.07~rated motor frequency	Default:50.0Hz
F09.10	Multi-point V/F voltage 4(V4)	Range:0.0~100.0%	Default:100.0%

F09.03~F09.10 is used for broken line V/f mode. Voltage value 100% corresponds to rated voltage of motor. Please rationally set the values of frequency and voltage at knees on the basis of characteristics of motor and load. Improper setting may rise output current even burn the motor. Figure 6-18 setting of multi-point V/F curve.

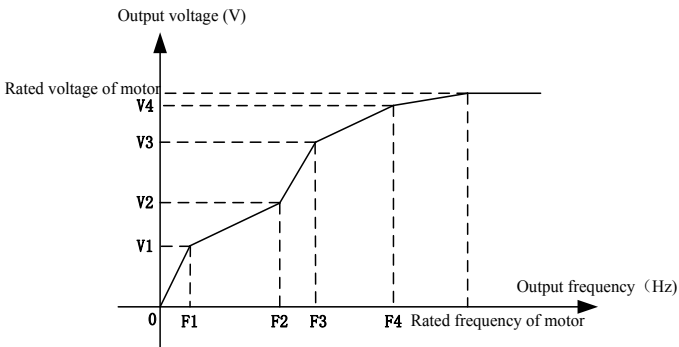


Fig. 6-26

**ATTENTION:**

The multi-point V/F curve is set based on the motor's load characteristic. The relationship between voltages and frequencies is:  $V1 \leq V2 \leq V3 \leq V4$ ,  $F1 \leq F2 \leq F3 \leq F4$ . At low frequency, higher voltage

may cause overheat or even burnt out of the motor and overcurrent stall or overcurrent protection of the AC drive.

F09.11	V/F slip compensation gain	Range:0.0~300.0%	Default: 80.0%
--------	----------------------------	------------------	----------------

This parameter is valid only for the asynchronous motor.

It can compensate the rotational speed slip of the asynchronous motor when the load of the motor increases, stabilizing the motor speed in case of load change.

F09.12	Stator voltage drop compensation gain	Range:0.0~200.0%	Default:100.0%
--------	---------------------------------------	------------------	----------------

Stator voltage drop compensation is to compensate voltage drop produced by stator resistance and connecting cable.

F09.13	Excitation boost gain	Range:0.0~200.0%	Default:100.0%
--------	-----------------------	------------------	----------------

F09.14	Oscillation Suppression	Range:0.0~300.0%	Default: Model defined
--------	-------------------------	------------------	------------------------

Set this parameter to a value as small as possible in the prerequisite of efficient oscillation suppression to avoid influence on V/F control. Set this parameter to 0 if the motor has no oscillation. Increase the value properly only when the motor has obvious oscillation. The larger the value is, the better the oscillation suppression result will be.

When the oscillation suppression function is enabled, the rated motor current and no-load current must be correct. Otherwise, the V/F oscillation suppression effect will not be satisfactory.

F09.15	Voltage source for V/F separation	Range:0~7	Default: 0
--------	-----------------------------------	-----------	------------

F09.16	Voltage digital setting for V/F separation	Range:0.0~100.0%	Default:0.0%
--------	--	------------------	--------------

V/F separation is generally applicable to scenarios such as induction heating, inverse power supply and motor torque control. If V/F separated control is enabled, the output voltage can be set in F09.15 or by means of analog, multi-reference, simple PLC, PID or communication. If you set the output voltage by means of non-digital setting, 100% of the setting corresponds to the rated motor voltage. If a negative percentage is set, its absolute value is used as the effective value.

0: Digital setting (F09.16)

1: Keypad potentiometer

2: AI1

3: Multi-reference

4: Pulse setting (DI7/HI)

5: PID

6: AI2

7: AI3

F09.17	Voltage rise time of V/F separation	Range: 0.0~6000.0s	Default:0.1s
--------	-------------------------------------	--------------------	--------------

This parameter value is the time rising from 0V to motor rated voltage or dropping from rated voltage to 0V.

F09.18	Set the IQ filter time below 0.5Hz in VVF mode	Range: F09.19~3000ms	Default: 500ms
--------	--	----------------------	----------------

F09.19	Set the IQ filter time above 2.0Hz in VVF mode	Range: 1ms~F09.18	Default: 100ms
--------	--	-------------------	----------------

F09.18~F09.19 set the current filter time of torque

F09.20	Torque revision when run forward	Range: 0.0~5.0%	Default: 0.0%
--------	----------------------------------	-----------------	---------------

F09.21	Torque revision when run reverse	Range: 1ms~F09.18	Default: 1.0%
--------	----------------------------------	-------------------	---------------

F09.20~F09.21 set the revision coefficient of torque.

F09.18	IQ filtering time below VVF 0.5Hz	Range: F09.19~3000ms	Default: 500ms
--------	-----------------------------------	----------------------	----------------

F09.19	IQ filtering time above VVF 2Hz	Range: 1ms~F09.18	Default: 100ms
--------	---------------------------------	-------------------	----------------

Used to adjust the filtering time of torque current.

F09.18	Forward torque correction	Range: 0.0~5.0%	Default: 0.0%
F09.19	Reverse torque correction	Range: 0.0~5.0%	Default: 1.0%

## FR500A&FR510A Series Vector Control Inverter

It is used to correct the torque when reversing.

F09.22	PMSM acceleration current compensation setting	Range: 0.0~200.0%	Default: 0.0%
F09.23	Compensation current drop time after PMSM acceleration	Range: 0.0~100.0s	Default: 2.0s
F09.24	Maintain ID current value after PMSM acceleration	Range: 0.0~200.0%	Default: 0.0%

It is used for the current compensation parameter during acceleration under VF control mode of PMSM.

### Group F10 Vector Control Parameters of Motor 1

F10.00	Speed/torque control	Range:0~1	Default: 0
--------	----------------------	-----------	------------

Sensor-less vector control 2 and close-loop vector control support torque control. Under these two control patterns, speed control and torque control can be programmed by this parameter. Added to this, the switchover between speed control and torque control can also be realized by digital input terminal "speed/torque control switch". The relation of the switchover via terminal and parameter is shown in the following table:

F10.00	Speed/torque control switch terminal	Control mode
0	OFF	Speed control
0	ON	Torque control
1	OFF	Torque control
1	ON	Speed control

Under speed control, output torque of motor will match load automatically. In order to avoid overcurrent fault caused by excessive output torque, it is necessary to set appropriate torque limit value and keep output torque of motor within this limit. Please refer to the specification of F10.10 for torque limited information.

Under torque control, torque can be set by different sources, by F10.16. Under torque control, motor speed is determined by the difference between set torque and load torque. When the set torque is bigger than load torque, motor will be accelerated continuously. When the set torque is smaller than load torque, motor will be decelerated continuously. When the set torque is matching load torque well, the speed of motor will be maintained. Therefore, it is necessary to set limit value of forward or reverse speed during torque control so as to prevent over-run caused by continuous acceleration of motor. Please set the speed limits in F10.18~F10.19 under torque control.

#### ATTENTION:

Jog mode will run in the manner of speed control, and torque control is disabled.

F10.01	ASR low-speed proportional gain Kp1	Range:0.0~100.0	Default:15.0
F10.02	ASR low-speed integration time T11	Range:0.001~30.000s	Default:0.10s
F10.03	ASR switching frequency 1	Range:0.0~F10.06	Default:5.0Hz
F10.04	ASR high-speed proportional gain Kp2	Range:0.0~100.0	Default:10.0
F10.05	ASR high-speed integration time T12	Range:0.000~30.000s	Default:0.50s
F10.06	ASR switching frequency 2	Range:F10.03~Fup	Default:10.0Hz

Speed loop PI parameters vary with running frequencies of the AC drive.

If the running frequency is less than or equal to "Switchover frequency 1" (F10.03), the speed loop PI parameters are F10.00 and F10.01.

If the running frequency is equal to or greater than "Switchover frequency 2" (F10.06), the speed loop PI parameters are F10.04 and F10.05.

If the running frequency is between F10.03 and F10.06, the speed loop PI parameters are obtained from the linear switchover between the two groups of PI parameters.

The speed dynamic response characteristics in vector control can be adjusted by setting the proportional gain and integral time of the speed regulator. To achieve a faster system response,

increase the proportional gain and reduce the integral time. Be aware that this may lead to system oscillation.

The recommended adjustment method is as follows:

If the factory setting cannot meet the requirements, make proper adjustment. Increase the proportional gain first to ensure that the system does not oscillate, and then reduce the integral time to ensure that the system has quick response and small overshoot.

**ATTENTION:**

Improper PI parameter setting may cause too large speed overshoot, and overvoltage fault may even occur when the overshoot drops.

F10.07	ASR input filtering time	Range:0.0~500.0ms	Default:3.0ms
F10.08	ASR output filtering time	Range:0.0~500.0ms	Default:0.0ms

Sets the input/output filtering time of ASR.No need to modify its default setting if not have special requirement.

F10.09	Vector control slip gain	Range:50~200%	Default:100%
--------	--------------------------	---------------	--------------

For SFVC, it is used to adjust speed stability accuracy of the motor. When the motor with load runs at a very low speed, increase the value of this parameter; when the motor with load runs at a very large speed, decrease the value of this parameter.

For CLVC, it is used to adjust the output current of the AC drive with same load.

F10.10	Digital setting of torque upper limit in speed control mode	Range:50.0~200.0%	Default:165%
--------	---	-------------------	--------------

In the speed control mode, the maximum output torque of the AC drive is restricted by F10.10.

F10.11	Excitation adjustment proportional gain Kp1	Range:0.00~10.00	Default:0.50
F10.12	Excitation adjustment integral gain Ti1	Range:0.0~3000.0ms	Default:10.0ms
F10.13	Torque adjustment proportional gain Kp2	Range:0.00~10.00	Default:0.50
F10.14	Torque adjustment integral gain Ti2	Range:0.0~3000.0ms	Default:10.0ms

These are current loop PI parameters for vector control. These parameters are automatically obtained through "Asynchronous motor complete auto-tuning" or "Synchronous motor no-load auto-tuning", and need not be modified.

F10.15	Excitation gain coefficient	Range: 50.0~200.0%	Default: 100.0%
--------	-----------------------------	--------------------	-----------------

For sensor-less vector control, the parameter is used to adjust the exciting current of the motor. When the motor torque is low, the parameter is increased, otherwise the parameter is decreased. For speed sensor vector control, this parameter can adjust the no-load excitation current of the motor.

F10.16	Torque setting source under torque control	Range:0~6	Default:0
F10.17	Digital setting of torque	Range:-200~200%	Default:50.0%

F10.16 is used to set the torque setting source. There are a total of 6 torque setting sources.

The torque setting is a relative value. 100.0% corresponds to the AC drives rated torque. The setting range is -200.0% to 200.0%, indicating the AC drive's maximum torque is twice of the AC drive's rated torque.

If the torque setting is positive, the AC drive rotates in forward direction. If the torque setting is negative, the AC drive rotates in reverse direction.

0: Digital setting (F10.17)

The target torque directly uses the value set in F10.17.

1: Keypad potentiometer

2: AI1

3: AI2

4: AI3

The target torque is decided by analog input.

5: Pulse setting (DI7/HI)

The target torque is set by DI7/HI (high-speed pulse). The pulse setting signal specification is 9–30 V (voltage range) and 0–100 kHz (frequency range). The pulse can only be input via DI7.

6: Communication setting

## FR500A&FR510A Series Vector Control Inverter

The target torque is set by means of communication.

F10.18	Forward speed limited value under torque control	Range:0.0~Fmax	Default:50.0Hz
F10.19	Reverse speed limited value under torque control	Range:0.0~Fmax	Default:50.0Hz

When F00.26=0, Two parameters are used to set the maximum frequency in forward or reverse rotation in torque control mode.

In torque control, if the load torque is smaller than the motor output torque, the motor's rotational speed will rise continuously. To avoid runaway of the mechanical system, the motor maximum rotating speed must be limited in torque control.

You can implement continuous change of the maximum frequency in torque control dynamically by controlling the frequency upper limit.

F10.20	Set torque accel time	Range:0.0~6000.0s	Default:0.0s
F10.21	Set torque decel time	Range:0.0~6000.0s	Default:0.0s

In torque control, the difference between the motor output torque and the load torque determines the speed change rate of the motor and load. The motor rotational speed may change quickly and this will result in noise or too large mechanical stress. The setting of acceleration/deceleration time in torque control makes the motor rotational speed change softly.

However, in applications requiring rapid torque response, set the acceleration/deceleration time in torque control to 0.0s.

For example, two AC drives are connected to drive the same load. To balance the load allocation, set one AC drive as master in speed control and the other as slave in torque control. The slave receives the master's output torque as the torque command and must follow the master rapidly. In this case, the acceleration/deceleration time of the slave in torque control is set to 0.0s.

F10.22	Static friction torque compensation	Range:0.0~100.0%	Default:5.0%
F10.23	Static friction frequency range	Range:0.0~20.0Hz	Default:1.0Hz

This parameter takes effect only in torque control. To compensate the static friction of system at the start, additional torque might be needed. When the motor runs, static friction torque compensation is disabled. 100% corresponds to rated torque of motor.

F10.24	Static Frequency of Open-Loop Torque	Range: 1.00~10.00Hz	Default:1.00Hz
--------	--------------------------------------	---------------------	----------------

It is setting the initial frequency that is effective in torque control mode.

F10.25	SVC optimization method	0: Optimization method 0 1: Optimization method 1 2: Optimization method 2	Default: 1
--------	-------------------------	--	------------

Vector control optimization method.

F10.26	Max Frequency source under torque control	0: Set by F10.18 & F10.19	Default: 0
		1: Keypad potentiometer	
		2:A11	
		3:A12	
		5: Pulse setting ( DI7/HI )	

This parameter takes effect only in torque control. F10.26 is used to set the Max frequency source under torque control.

F10.27	Start Excitation Current of Synchronous Motor	0.0~150.0%	Default: 50.0%
--------	---	------------	----------------

For synchronous motor control, when starting, give the motor an excitation current to accelerate the starting process.

F10.28	Flux weakening control of synchronous motor	0: Invalid 1: Valid	Default: 1
--------	---	------------------------	------------

It is suitable for areas above rated frequency of motor.

F10.29	Flux weakening Voltage of synchronous motor	70.0~100.0%	Default: 95.0%
F10.30	Flux weakening gain(Kp) of	0.0~500.0%	Default: 50.0%

	synchronous motor		
F10.31	Flux weakening integral(Ti) of synchronous motor	0.00~60.00s	Default: 0.5s
F10.32	Flux weakening limit of synchronous motor	0.0~200.0%	Default: 100.0%

F10.30~F10.31 is the PI parameter used for weak magnetic regulation, and F10.32 is used to limit the PI output of weak magnetic regulation.

F10.33	PMSM excitation current frequency high point	Range: F10.34~600.00Hz	Default: 15.00Hz
F10.34	PMSM excitation current frequency low point	Range: 0.0~F10.33	Default: 10.00Hz
F10.35	PMSM excitation current conversion delay	Range: 0.0~10.0s	Default: 1.0s
F10.36	PMSM speed estimation Kp	Range: 0.00~10.00	Default: 2.00
F10.37	PMSM speed estimation Ti	Range: 0.1~1000.0ms	Default: 20.0ms

F10.33 ~ f10.35 are used for the current compensation when the synchronous motor starts. If it is difficult to start the synchronous motor, the frequency compensation point can be adjusted properly.

F10.36 ~ f10.37 are used for speed estimation of synchronous motor. If there is sound in the spindle when the synchronous motor is running, these two parameters can be adjusted properly.

### Group F11 Protection Parameters

F11.00	Current limit control	Range:0~2	Default:2
F11.01	Current limit	Range:100.0~200.0%	Default:150.0%
F11.02	Frequency decreasing time (limit current in constant speed operation)	Range:0.0~6000.0s	Default:5.0s
F11.03	Current limit mode 2 proportional gain	Range:0.1~100.0%	Default:3.0%
F11.04	Current limit mode 2 integral time	Range:0.00~10.00	Default:10.00s

F11.00=0: Current limit disabled

F11.00=1: Current limit mode 10

During acceleration and deceleration, if output current exceeds current limit (F11.01), inverter stops acceleration/deceleration and remains at present running frequency, and will accelerate/decelerate as per previous acceleration/deceleration time after output current decreased.

During steady state, after output current exceeds the current limit (F11.01), inverter decelerates as per the decreasing time (F11.02) of constant speed current frequency, and the minimum deceleration could reach lower limit frequency (F01.10). After output current decreases, inverter will accelerate to setting frequency as per setting acceleration time, see Figure 6-19.

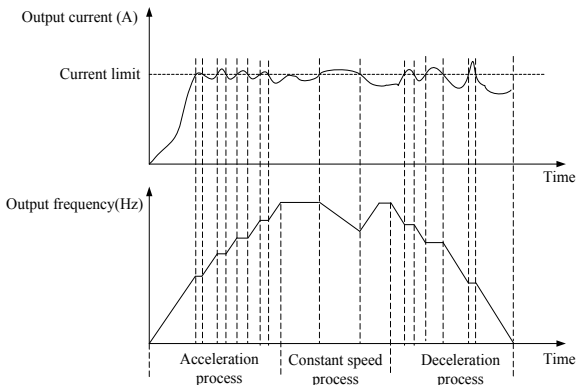


Figure 6-27

F11.00=2: Current limit mode 2

## FR500A&FR510A Series Vector Control Inverter

Current limit mode 2 is applied to the applications which are sensitive to acceleration/ deceleration time. In this mode, the motor current is automatically adjusted by regulating the output frequency as per the PI parameters set in F11.03 and F11.04.

For load with larger inertia if overcurrent occurs during acceleration, the proportional gain may be increased. For overcurrent during deceleration, the proportional gain may be decreased. For load with smaller inertia, the proportional gain may be kept smaller. Integral time can be adjusted for fine tuning in both cases.

F11.05	Overvoltage stall control	Range:0~2	Default: 2
F11.06	Overvoltage stall voltage	Range: 600~800V	Default: 730V
F11.07	Overvoltage stall mode 2 proportion gain	Range:0.1~100.0%	Default:50.0%
F11.08	Overvoltage stall mode2 frequency limited	Range: 0.00~50.00Hz	Default: 5.00Hz

F11.05=0: Overvoltage Stall Disabled.

F11.05=1: Overvoltage Stall Mode 1

In deceleration process, after DC bus voltage exceeds overvoltage stall voltage (F11.06), inverter stops deceleration process, and remains at present running frequency. After DC bus voltage decreases, inverter will decelerate as per previous deceleration time, see Figure 6-20.

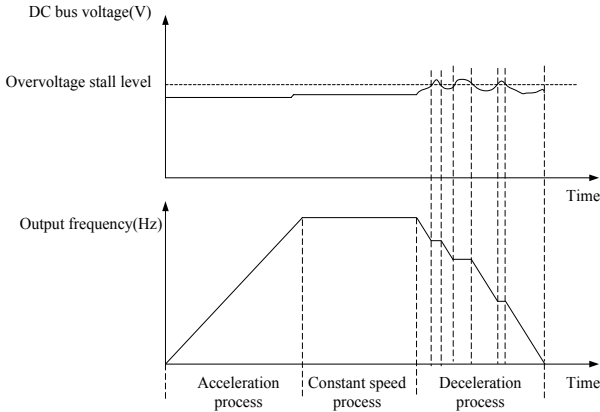


Figure 6-20

F11.05=2: Overvoltage Stall Mode 2

For large inertia load, mode 2 can be used when there are still overvoltage faults in mode 1.

Mode 2 control bus voltage within the set values by adjusting output frequency.

For larger inertia load, scaling factor(F11.07) of overvoltage stall mode 2 will be larger, otherwise, it will result in overvoltage fault when without good control. F11.08 function code control use to output frequency in mode 2.

F11.10	Protection action 1	Range:00000~33333	Default:03330
--------	---------------------	-------------------	---------------

**Unit's place: Bus undervoltage (Err07)**

0: Fault reported and coast to stop

1: Stop according to the stop mode

2: Fault reported but continues to run

3: Fault protection disabled

**Ten's place: Power input phase Loss (Err09) (Same as unit's place)**

**Hundred's place: Power output phase loss (Err10) (Same as unit's place)**

**Thousand's place: Motor overload (Err11) (Same as unit's place)**

**Ten thousand's place: Inverter overload (Err11) (Same as unit's place)**

**Note:**

If "Coast to stop" is selected, the AC drive displays Err\*\* and directly stops.

If "Stop according to the stop mode" is selected, the AC drive displays A\*\* and stops according to the stop mode. After stop, the AC drive displays Err\*\*.

If "Continue to run" is selected, the AC drive continues to run and displays A\*\*. The running frequency is set in F11-14.

F11.11	Protection action 2	Range:00000~22222	Default:00000
--------	---------------------	-------------------	---------------

**Unit's place: External equipment fault (Err13)**

- 0: Fault reported and coast to stop
- 1: Stop according to the stop mode
- 2: Fault reported but continues to run

**Ten's place: EEPROM read/write fault (Err15) (Same as unit's place)**

**Hundred's place: Communication overtime error (Err18) (Same as unit's place)**

**Thousand's place: PID feedback loss (Err19) (Same as unit's place)**

**Ten thousand's place: Continuous running time reached (Err20) (Same as unit's place)**

F11.12	Protection action 2	Range: 00~32	Default: 00
--------	---------------------	--------------	-------------

**Unit's place: Module temperature detection disconnection (Err24)**

- 0: Fault reported and coast to stop
- 1: Stop according to the stop mode
- 2: Fault reported but continues to run

**Ten's place: Load becoming 0 (Err25) (Same as unit's place)**

F11.14	Frequency selection for continuing to run upon fault	Range: 0~4	Default: 00
--------	--	------------	-------------

F11.15	Backup frequency upon abnormality	Range:0.0~Fmax	Default: 0.0Hz
--------	-----------------------------------	----------------	----------------

- 0: Current running frequency
- 1: Set frequency
- 2: Frequency upper limit
- 3: Frequency lower limit

F11.17	Motor overload protection time	Range:30.0~300.0s	Default:60s
--------	--------------------------------	-------------------	-------------

4: Backup frequency upon abnormality (F11.15)

The default is that inverter trips Err11 fault if 150% overload lasts for 1 minute at hot start, see Figure 6-21 for motor overload protection time. During normal operation, motor overload protection operates in the area between a cold start and a hot start.

Cold start: Motor protection operation time in response to an overload situation that was suddenly reached when starting a stationary motor.

Hot start: Motor protection operation time in response to an overload situation that occurred during sustained operation at rated current.

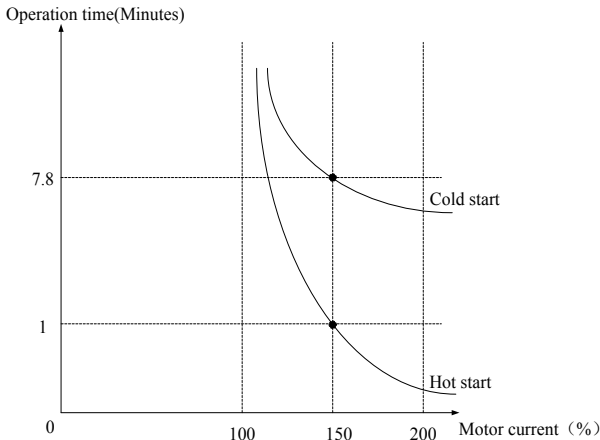


Figure 6-29

F11.18	Overload alarm	Range:00000~11111	Default:00000
--------	----------------	-------------------	---------------

FR500A&FR510A Series Vector Control Inverter

**Unit's place: detection option**

0: Always detect

Overload alarm works all the time during drive running.

1: Detect at constant speed only

Overload pre-alarm only works during constant-speed running of inverter.

**Ten's place: compared object**

0: Rated current of motor

Compared object is the rated current relative to motor, and display " A11" when the alarm is given under this setting

1: Rated current of drive

Compared object is the rated current of drive, and display " A12" when the alarm is given under this setting.

**Hundred's place: Select whether report fault or not**

0: Not report fault.

1: Report fault

**Thousand's place: Select whether decelerate or not**

0: Not decelerate

1: Decelerate

**Ten thousand's place: Given mode for over-load level**

0: F11.19 Set

1: F11.19 \* VP(potentiometer on keypad)

2: F11.19 \* AI1

3: F11.19 \* AI2

4: F11.19 \* AI3

F11.19	Overload alarm threshold	Range:20.0~200.0%	Default:130.0%
--------	--------------------------	-------------------	----------------

When 0 is set at decade of F11.18, this set value is a percentage compared to rated current of motor. When 1 is set of that, this set value is a percentage compared to rated current of drive.

F11.20	Overload alarm activated time that exceeding threshold	Range:0.1~60.0s	Default:5.0s
--------	--	-----------------	--------------

Set the lasting time that overload alarm is activated when output current of drive is bigger than the threshold set by F11.19.

F11.21	Inverter overheat warning threshold	Range:50.0~overheat Temperature	Default: Model defined
--------	-------------------------------------	---------------------------------	------------------------

Sets the threshold of drive t overheat alarm. When the maximum internal temperature of drive is higher than this value, the drive displays thermal alarm code "A14", but won't influence the running.

F11.22	Detection level of load loss	Range:5.0~100.0%	Default:20.0%
F11.23	Detection time of load loss	Range:0.1~60.0s	Default:5.0s

When the output current of the AC drive is lower than the detection level (F11.22) and the lasting time exceeds the detection time (F11.23), fault reported (Err25) and coast to stop.

F11.24	Action selection at instantaneous power failure	Range: 0~2	Default: 0
--------	---	------------	------------

0: Disabled

1: Deceleration

After power off, bus voltage is less than instantaneous power off bus voltage F11.30, and keep instantaneous power off voltage judge time F11.32, inverter start to reduce the running frequency via decel time at instantaneous power failure, the motor is in the state of power generation, the power feedback to maintain the bus voltage to ensure the normal running of inverter until the bus voltage is bigger than the instantaneous power off recovery voltage F11.31, then continue to run till the target frequency.

2: Bus voltage constant control

After power off, bus voltage is less than the instantaneous power off bus voltage F11.30, inverter will adjust the output frequency via PI adjustment F11.33 automatically

F11.25	Decel time at instantaneous power failure	Range: 0.0~6000.0s	Default: 5.0s
--------	---	--------------------	---------------

## FR500A&amp;FR510A Series Vector Control Inverter

F11.30	Instantaneous power off bus voltage	Range: 60.0%~F11.31	Default: 80.0%
F11.31	Instantaneous power off recovery voltage	Range: F11.30~100.0%	Default: 85.0%
F11.32	Instantaneous power off voltage judge time	Range: 0.01~10.00s	Default: 0.10s
F11.33	Instantaneous power off gain Kp	Range: 0.1~100.0%	Default: 40.0%
F11.34	Instantaneous integration time Ti	Range: 0.00~10.00s(0.00: Integration invalid)	Default: 0.10s

Notice:

1. Proper adjustment of F11.25, can avoid production stop due to the protection of the inverter when power switch

2. Input phase lack protection function must be forbidden to enable this feature

F11.26	Rapid current limit	Range: 0~2	Default: 2
--------	---------------------	------------	------------

0: Disabled

1: Rapid current limiting mode 1

The rapid current limit function can reduce the AC drive's overcurrent faults at maximum, guaranteeing uninterrupted running of the AC drive. However, long-time rapid current limit may cause the AC drive to overheat, which is not allowed. In this case, the AC drive will report Err26, indicating the AC drive is overloaded and needs to stop

2: Rapid current limiting mode 2

The output current is limited by reducing the frequency.

F11.27	Times of automatic trip(fault ) reset	Range:0~20	Default: 0
--------	---------------------------------------	------------	------------

It is used to set the times of fault auto resets if this function is used. After the value is exceeded, the AC drive will remain in the fault state.

F11.28	Interval of automatic trip(fault) reset	Range:0.1~100.0s	Default:1.0s
--------	---	------------------	--------------

It is used to set the waiting time from the alarm of the AC drive to fault auto reset.

F11.29	DO action during fault auto reset	Range:0~1	Default: 0
--------	-----------------------------------	-----------	------------

0: Not act

1: Act

It is used to decide whether the DO acts during the fault auto reset if the fault auto reset function is selected.

F11.35	Motor temperature sensor type	Range:0~3	Default:0
--------	-------------------------------	-----------	-----------

0: No

1:PT100

2:PT1000

3:KTY

F11.36	Zero drift value of motor temperature sensor	Range:-100~100℃	Default:0
--------	--	-----------------	-----------

When the temperature of temperature sensor appears linear deviation, it can be adjusted by setting this parameter.

F11.37	Reserved	Range:0~3	Default:0
--------	----------	-----------	-----------

F11.38	The threshold value of motor temperature warning	Range: 0~200℃	Default: 90℃
--------	--	---------------	--------------

F11.39	The threshold value of motor temperature action	Range: 0~200℃	Default: 110℃
--------	---	---------------	---------------

When the temperature detected by motor temperature sensor is greater than the value set by F11.38, inverter will give alarm and display A39 on keypad. When the temperature detected is greater than the value set by F11.39, inverter will report Err39.

## FR500A&FR510A Series Vector Control Inverter

F11.40	Action selection of Excessive Speed and Excessive Speed Deviation	Range: 00 ~ 33	Default:00
--------	---	----------------	------------

### Unit's place: Overspeed Action Selection

0:Report error and coast to stop

1:Warning and ramp to stop

2: Alarm and continue run with failure frequency

3:No protection

### Ten's place: Selection of Excessive Speed Deviation(same as Unit's place)

F11.41	Overspeed detection value	Range: 0.0~150.0%	Default : 120.0%
F11.42	Overspeed detection time	Range: 0.0~60.0s	Default : 1.0s

This function is only valid when the frequency converter runs with speed sensor vector control.

When the inverter detects that the actual speed of the motor exceeds the maximum frequency \* over-speed detection value F11.41, and the duration is longer than the over-speed detection time F11.42, the converter fault alarm Err37, which is processed according to the fault protection action F11.40 mode.

When the overspeed detection time is 0.0s, the overspeed fault detection is cancelled.

F11.43	Detection value of excessive velocity deviation	Range: 0.0~50.0%	Default : 20.0%
F11.44	Detection time of excessive velocity deviation	Range: 0.0~60.0s	Default : 5.0s

This function is only valid when the frequency converter runs with speed sensor vector control.

When the inverter detects that the actual speed of the motor deviates from the set frequency, the deviation is greater than the detection value F11.43 of the speed deviation, and the duration is longer than the detection time F11.44 of the speed deviation, the frequency converter fault alarm Err38 is processed according to the fault protection action F11.40 mode.

When the detection time of speed deviation is 0.0s, the fault detection of speed deviation is cancelled.

## Group F12 Multi-Reference and Simple PLC Function

F12.00	Reference 0	Range:-100.0~100.0%	Default:0.0%
F12.01	Reference 1	Range:-100.0~100.0%	Default:0.0%
F12.02	Reference 2	Range:-100.0~100.0%	Default:0.0%
F12.03	Reference 3	Range:-100.0~100.0%	Default:0.0%
F12.04	Reference 4	Range:-100.0~100.0%	Default:0.0%
F12.05	Reference 5	Range:-100.0~100.0%	Default:0.0%
F12.06	Reference 6	Range:-100.0~100.0%	Default:0.0%
F12.07	Reference 7	Range:-100.0~100.0%	Default:0.0%
F12.08	Reference 8	Range:-100.0~100.0%	Default:0.0%
F12.09	Reference 9	Range:-100.0~100.0%	Default:0.0%
F12.10	Reference 10	Range:-100.0~100.0%	Default:0.0%
F12.11	Reference 11	Range:-100.0~100.0%	Default:0.0%
F12.12	Reference 12	Range:-100.0~100.0%	Default:0.0%
F12.13	Reference 13	Range:-100.0~100.0%	Default:0.0%
F12.14	Reference 14	Range:-100.0~100.0%	Default:0.0%
F12.15	Reference 15	Range:-100.0~100.0%	Default:0.0%

At most 16 steps of multi-reference can be set by different status combinations of " multi-reference terminals 1~4" of digital input.

Multi-reference can be the setting source of frequency, V/F separated voltage and process PID. The multi-reference is relative value and ranges from -100.0% to 100.0%.

As frequency source, it is a percentage relative to the maximum frequency. As V/F separated voltage source, it is a percentage relative to the rated motor voltage. As process PID setting source, it does not require conversion.

Multi-reference can be switched over based on different states of DI terminals. For details, see the descriptions of group F4.

F12.16	Reference 0 source	Range:0~6	Default: 0
--------	--------------------	-----------	------------

- 0: Digital setting (F12.00)
- 1: keypad potentiometer
- 2: AI1
- 3: Process PID output
- 4: X7/HI pulse input
- 5: AI2
- 6: AI3


It determines the setting channel of reference 0. You can perform convenient switchover between the setting channels. When multi-reference or simple PLC is used as frequency source, the switchover between two frequency sources can be realized easily.

F12.17	Running mode of simple PLC	Range:0000~1132	Default:0000
--------	----------------------------	-----------------	--------------

**Unit's place: PLC running mode**

0: Stop after a single cycle

PLC stops upon the completion of one cycle and it won't be started unless another run command is given, shown as Fig. 6-22.

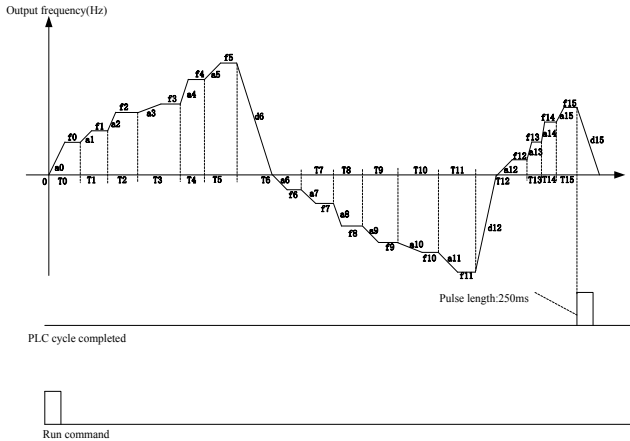

**Fig. 6-30**

1: Continue to run with the last frequency after a single cycle

After the completion of one cycle, PLC maintains the running frequency and direction of the last step. See the figure below:

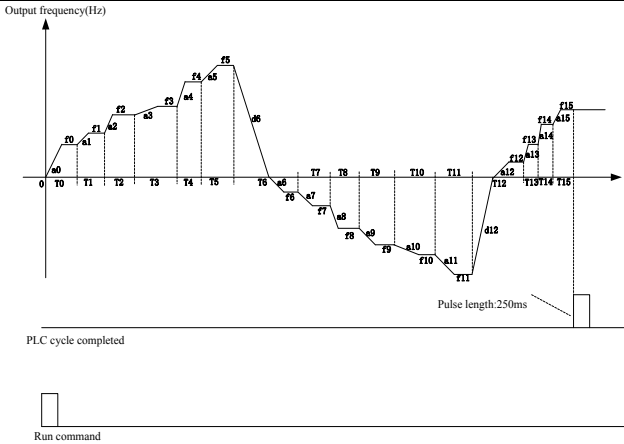


Fig. 6-31

2: Repeat cycles

PLC automatically starts another cycle after finishing one until there is a stop command, shown as Fig. 6-24.

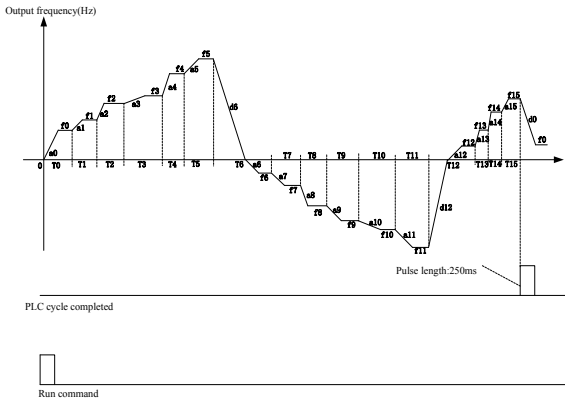


Fig. 6-32

**Ten's place: started mode**

0: Continue to run from the step of stop (or fault)

At the moment drive stop, the drive automatically records the running time of current step. When restarted, the drive will get into this step, continue to run the remanent time with the frequency of this step.

1: Run from the first step "multi-step reference 0"

When restarted after stop, the drive will start to run from "step 0".

2: Run from the Eighth step "multi-step reference 8"

When restarted after stop, the drive will start to run from "step 8".

3: Run from the Fifteenth step "multi-step reference 15"

When restarted after stop, the drive will start to run from "step15".

**Hundreds place: power loss memory**

0: Memory disabled on power loss

The drive does not memorize PLC running status on power loss and starts the running from step 0 after power up again.

1: Memory enabled on power loss

## FR500A&FR510A Series Vector Control Inverter

The drive saves PLC running status on power loss, including the running step, running frequency and finished running time at the moment of power loss. After the next power up, the running will be continued in accordance with the memorized status.

### Thousands place: unit of simple PLC running time

0: Second

1: Hour

Set the unit of running time and Accel/Decel time of simple PLC.

F12.18	Running time of step 0	Range:0.0~6000.0s(h)	Default:0.0s(h)
F12.19	Running time of step 1	Range:0.0~6000.0s(h)	Default:0.0s(h)
F12.20	Running time of step 2	Range:0.0~6000.0s(h)	Default:0.0s(h)
F12.21	Running time of step 3	Range:0.0~6000.0s(h)	Default:0.0s(h)
F12.22	Running time of step 4	Range:0.0~6000.0s(h)	Default:0.0s(h)
F12.23	Running time of step 5	Range:0.0~6000.0s(h)	Default:0.0s(h)
F12.24	Running time of step 6	Range:0.0~6000.0s(h)	Default:0.0s(h)
F12.25	Running time of step 7	Range:0.0~6000.0s(h)	Default:0.0s(h)
F12.26	Running time of step 8	Range:0.0~6000.0s(h)	Default:0.0s(h)
F12.27	Running time of step 9	Range:0.0~6000.0s(h)	Default:0.0s(h)
F12.28	Running time of step 10	Range:0.0~6000.0s(h)	Default:0.0s(h)
F12.29	Running time of step 11	Range:0.0~6000.0s(h)	Default:0.0s(h)
F12.30	Running time of step 12	Range:0.0~6000.0s(h)	Default:0.0s(h)
F12.31	Running time of step 13	Range:0.0~6000.0s(h)	Default:0.0s(h)
F12.32	Running time of step 14	Range:0.0~6000.0s(h)	Default:0.0s(h)
F12.33	Running time of step 15	Range:0.0~6000.0s(h)	Default:0.0s(h)
F12.34	Acceleration/deceleration time of simple PLC reference 0	Range: 0~3	Default: 0
F12.35	Acceleration/deceleration time of simple PLC reference 1	Range: 0~3	Default: 0
F12.36	Acceleration/deceleration time of simple PLC reference 2	Range: 0~3	Default: 0
F12.37	Acceleration/deceleration time of simple PLC reference 3	Range: 0~3	Default: 0
F12.38	Acceleration/deceleration time of simple PLC reference 4	Range: 0~3	Default: 0
F12.39	Acceleration/deceleration time of simple PLC reference 5	Range: 0~3	Default: 0
F12.40	Acceleration/deceleration time of simple PLC reference 6	Range: 0~3	Default: 0
F12.41	Acceleration/deceleration time of simple PLC reference 7	Range: 0~3	Default: 0
F12.42	Acceleration/deceleration time of simple PLC reference 8	Range: 0~3	Default: 0
F12.43	Acceleration/deceleration time of simple PLC reference 9	Range: 0~3	Default: 0
F12.44	Acceleration/deceleration time of simple PLC reference 10	Range: 0~3	Default: 0
F12.45	Acceleration/deceleration time of simple PLC reference 11	Range: 0~3	Default: 0
F12.46	Acceleration/deceleration time of simple PLC reference 12	Range: 0~3	Default: 0
F12.47	Acceleration/deceleration time of simple PLC reference 13	Range: 0~3	Default: 0
F12.48	Acceleration/deceleration time of simple PLC reference 14	Range: 0~3	Default: 0
F12.49	Acceleration/deceleration time of simple PLC reference 15	Range: 0~3	Default: 0

# FR500A&FR510A Series Vector Control Inverter

Sets the running time for step 0~15 of simple PLC. The time unit is set by thousand's place of F12.17.

F12.50	UP/DOWN function selection of multi-reference	Range: 00~11	Default: 00
F12.51	UP/DOWN speed of multi-reference	Range: 0.0~100%	Default: 0.0%

Frequency of multi-reference can be adjusted by UP/DOWN function, adjustment speed is set by function code F12.51

**Unit's place: Action selection when power off**

- 0:Zero clearing when power off
- 1:keep the value when power off

**Ten's place: select if it can be reduced to negative**

- 0:Disable
- 1:Enable

## Group F13 Process PID

The purpose of process PID control is to make feedback value consistent with the set value. PID control diagram is as shown in Fig. 6-25.

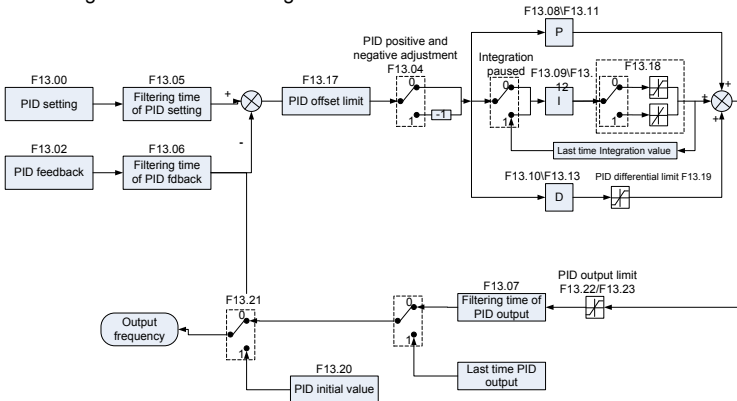


Fig. 6-33

F13.00	PID setting	Range: 0~7	Default: 0
--------	-------------	------------	------------

Select the setting source of PID control.

- 0: F13.01 digital setting
- 1: keypad potentiometer
- 2: AI1
- 3: Communication
- 4: Multi-Reference
- 5: DI7/HI pulse input
- 6: AI2
- 7: AI3

F13.01	PID digital setting	Range:0.0~100.0%	Default:50.0%
--------	---------------------	------------------	---------------

When F13.00 is set to 0, this parameter value is taken as set value of PID.

F13.02	PID feedback	Range:0~8	Default:0
--------	--------------	-----------	-----------

Select the feedback source of PID control.

- 0: AI1
- 1: AI2
- 2: Communication
- 3: AI1+AI2
- 4: AI1-AI2
- 5: Max{AI1, AI2}
- 6: Min{AI1, AI2}
- 7: DI7/HI pulse input

## 8: AI3

F13.03	PID setting feedback range	Range:0.0~6000.0	Default:100.0
--------	----------------------------	------------------	---------------

This parameter is a non-dimensional unit. It is used for PID setting display (U00.11) and PID feedback display (U00.12). Relative value 100% of PID setting feedback corresponds to the value of F13.03.

If F13.03 is set to 1000 and PID setting is 50.0%, the PID setting display (U00.11) is 500.

F13.04	PID action direction	Range:0~1	Default:0
--------	----------------------	-----------	-----------

0: Positive adjustment

1: Negative adjustment

This parameter can be used with digital input terminal "PID adjustment direction" to select positive or negative adjustment of PID.

F13.04	PID adjustment direction terminal	Adjustment
0	OFF	Positive
0	ON	Negative
1	OFF	Negative
1	ON	Positive

Positive adjustment:

When feedback signal is smaller than PID setting, output frequency of the drive will rise to reach PID balance.

When feedback signal is bigger than PID setting, output frequency of the drive will drop to reach PID balance.

Negative adjustment:

When feedback signal is smaller than PID setting, output frequency of the drive will drop to reach PID balance.

When feedback signal is bigger than PID setting, output frequency of the drive will rise to reach PID balance.

F13.05	Filtering time of PID setting	Range:0.000~10.000s	Default:0.000s
F13.06	Filtering time of PID feedback	Range:0.000~10.000s	Default:0.000s
F13.07	Filtering time of PID output	Range:0.000~10.000s	Default:0.000s

Set the filtering time of PID setting, feedback and output.

F13.08	Proportional gain Kp1	Range:0.0~100.0	Default:1.0
F13.09	Integration time Ti1	Range:0.01~10.00s	Default:0.10s
F13.10	Differential time Td1	Range:0.000~10.000s	Default:0.000s

Proportional gain Kp1:

It decides the regulating intensity of the PID regulator. The higher the Kp1 is, the larger the regulating intensity is. The value 100.0 indicates when the deviation between PID feedback and PID setting is 100.0%; the adjustment amplitude of the PID regulator on the output frequency reference is the maximum frequency.

Integral time Ti1:

It decides the integral regulating intensity. The shorter the integral time is, the larger the regulating intensity is. When the deviation between PID feedback and PID setting is 100.0%, the integral regulator performs continuous adjustment for the time set in FA-06. Then the adjustment amplitude reaches the maximum frequency.

Differential time Td1:

It decides the regulating intensity of the PID regulator on the deviation change. The longer the differential time is, the larger the regulating intensity is. Differential time is the time within which the feedback value change reaches 100.0%, and then the adjustment amplitude reaches the maximum frequency.

F13.11	Proportional gain Kp2	Range:0.0~100.0	Default:1.0
F13.12	Integration time Ti2	Range:0.01~10.00s	Default:0.10s
F13.13	Differential time Td2	Range:0.000~10.000s	Default:0.000s

In some applications, PID parameters switchover is required when one group of PID parameters cannot satisfy the requirement of the whole running process. These parameters are used for switchover between two groups of PID parameters. Regulator parameters F13.11 to F13.13 are set in the same way as F13.08 to F13.10.

## FR500A&FR510A Series Vector Control Inverter

F13.14	PID parameter switch	Range:0~2	Default: 0
F13.15	PID parameter switchover deviation 1	Range:0.0~100.0%	Default:20.0%
F13.16	PID parameter switchover deviation 2	Range:0.0~100.0%	Default:80.0%

Process PID is provided with two groups of proportional, integral and differential parameters, which is set by this parameter.

0: No switch, determined by parameters Kp1, Ti1 and Td1

Always determined by Kp1, Ti1 and Td1 set at F13.08 to F13.10.

1: Auto switched on the basis of input offset

When the offset between setting and feedback is less than the set value of F13.15, PID adjustment is determined by Kp1, Ti1 and Td1. When the offset between setting and feedback is bigger than the set value of F13.15, PID adjustment is determined by Kp2, Ti2 and Td2 set at F13.11 to F13.13.

2: Switched by terminal

When digital input terminal "PID parameters switch" is OFF, it is determined by Kp1, Ti1 and Td1.

When "PID parameters switch" is ON, it is determined by Kp2, Ti2 and Td2

F13.17	PID offset limit	Range:0.0~100.0%	Default:0.0%
--------	------------------	------------------	--------------

If the offset between PID feedback and setting is more than this set value, PID regulator will implement regulation. If the offset between PID feedback and setting is less than this set value, PID will stop the regulation and the PID controller output will be kept unchanged. This function can improve the stability of PID performance.

F13.18	PID integral property	Range:000~111	Default:000
--------	-----------------------	---------------	-------------

**Unit's place: Whether to stop integral operation when the output reaches the limit**

0: Continue integral operation

1: Stop integral operation

If "Stop integral operation" is selected, the PID integral operation stops, which may help to reduce the PID, overshoot.

**Ten's place: Integral separated**

0: Invalid

1: Valid

If it is set to valid, the PID integral operation stops when the DI allocated with function 25 "PID integral pause" is ON. In this case, only proportional and differential operations take effect.

If it is set to invalid, integral separated remains invalid no matter whether the DI allocated with function 25 "PID integral pause" is ON or not.

**Thousand's place: Integral attributes**

0: Incremental mode

1: Position mode

F13.19	PID differential limit	Range:0.0~100.0%	Default:0.5%
--------	------------------------	------------------	--------------

Set differential output limit of PID control.

F13.20	PID initial value	Range:0.0~100.0%	Default:0.0%
--------	-------------------	------------------	--------------

F13.21	Holding time of PID initial value	Range:0.0~6000.0s	Default:0.0s
--------	-----------------------------------	-------------------	--------------

PID does not make adjustment when the drive starts its running, but outputs the value set by F13.20 and maintains the holding time set by F13.21, then starts PID adjustment. When F13.21 is set to 0.0, PID initial value is disabled. This function makes PID adjustment get into stable status fast.

F13.22	PID output frequency upper limit	Range: PID output frequency lower limit~100.0%	Default:100.0%
--------	----------------------------------	--	----------------

F13.23	PID output frequency lower limit	Range:-100.0%~PID output frequency upper limit	Default:-100.0%
--------	----------------------------------	--	-----------------

This function is used to limit PID output frequency. 100.0% corresponds to maximum frequency.

F13.24	Low value of PID feedback loss	Range:0.0%~100.0%	Default:0.0%
--------	--------------------------------	-------------------	--------------

F13.25	Detection time for low value of PID feedback loss	Range:0.0~30.0s	Default:1.0s
--------	---	-----------------	--------------

F13.28	High value of PID feedback loss	Range:0.0%~100.0%	Default:100.0%
--------	---------------------------------	-------------------	----------------

F13.29	Detection time for high value of PID feedback loss	Range:0.0~30.0s	Default:1.0s
--------	--	-----------------	--------------

When the PID feedback value is not in the range of F13.24 and F13.28, and lasting time attains the set of F13.25/F13.28, then inverter will report Err19(PID feedback loss).

F13.26	PID operation at stop	Range:00000~11111	Default:000
--------	-----------------------	-------------------	-------------

**Unit's place:** operation selection when power off

0: No PID operation at stop

1: PID operation at stop

It is used to select whether to continue PID operation in the state of stop. Generally, the PID operation stops when the AC drives stops.

**Ten's place:** PID output is limited by output frequency

0: No limit

1: limit

When using PID regulation, Setting "1" can prevent output lags caused by the existence of acceleration and deceleration.

**Hundred's place:** Action selection when using UP/DOWN function to modify the frequency in PID mode.

0:Zero clearing when power off.

1:Clear the value(increased or decreased) caused by UP/DOWN function when power off

2:Keep the value when power off.

3:Keep the value (increased or decreased) caused by UP/DOWN function when power off

**Thousand's place:** Select whether to detect PID feedback loss or not at stop.

0: No detection at stop.

1: Do detection at stop

**Ten thousand's place:** Select action for PID feedback loss

0: Report fault

1: Ramp to stop

F13.27	UP/DOWN speed of PID digital given	Range:0.0~100%(0.0% invalid)	Default: 0.0%
--------	------------------------------------	------------------------------	---------------

This function code is to set the speed of UP/DOWN function, value 100% corresponding to 50Hz.

F13.30	PID upper limit source	Range: 0~5	Default: 0
--------	------------------------	------------	------------

This function code set the upper limit source of PID mode;

0:F13.22

1:F13.22\*VP(Potentiometer on keypad)

2:F13.22\*AI1

3:F13.22\*AI2

4:F13.22\*HI(Pulse input ,DI7)

5:F13.22\*AI3

F13.31	PID lower limit source	Range: 0~5	Default: 0
--------	------------------------	------------	------------

This function code set the lower limit source of PID mode;

0:F13.23

1:F13.23\*VP(Potentiometer on keypad)

2:F13.23\*AI1

3:F13.23\*AI2

4:F13.23\*HI(Pulse input ,DI7)

5:F13.23\*AI3

## Group F14 Swing Frequency, Fixed Length, Count and Wakeup

The swing frequency function is applied to the textile and chemical fiber fields and the applications where traversing and winding functions are required.

The swing frequency function indicates that the output frequency of the AC drive swings up and down with the set frequency as the center. The trace of running frequency at the time axis is shown in the following figure. The swing amplitude is set in F14.00 and F14.01. When F14.01 is set to 0, the swing amplitude is 0 and the swing frequency does not take effect.

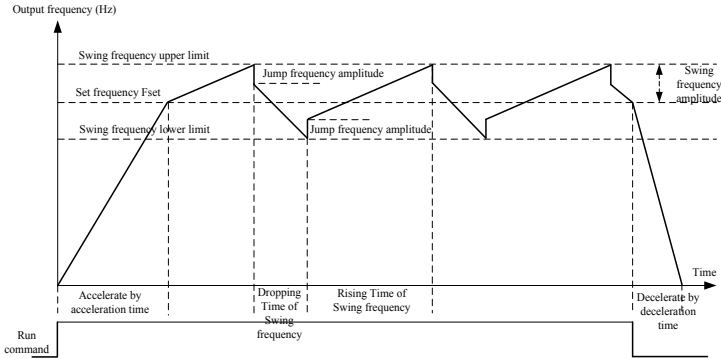


Figure 6-34

F14.00	Swing frequency setting mode	Range:0~1	Default:0
--------	------------------------------	-----------	-----------

This parameter is used to select the base value of the swing amplitude.

0: Relative to the central frequency (group F01)

It is variable swing amplitude system. The swing amplitude varies with the central frequency (set frequency).

1: Relative to the maximum frequency (F01.08maximum output frequency)

It is fixed swing amplitude system. The swing amplitude is fixed.

F14.01	Swing frequency amplitude	Range:0.0~100.0%	Default:0.0%
F14.02	Jump frequency amplitude	Range:0.0~50.0%	Default:0.0%

This parameter is used to determine the swing amplitude and jump frequency amplitude.

If relative to the central frequency (F14.00 = 0), the actual swing amplitude AW is the calculation result of group F01 (Frequency source selection) multiplied by F14.01.

If relative to the maximum frequency (F14.00 = 1), the actual swing amplitude AW is the calculation result of F01.08 (Maximum frequency) multiplied by F14.01.

Jump frequency = Swing amplitude AW x F14.02 (Jump frequency amplitude). If relative to the central frequency (F14.00= 0), the jump frequency is a variable value.If relative to the maximum frequency (F14.00= 1), the jump frequency is a fixed value.

The swing frequency is limited by the frequency upper limit and frequency lower limit.

F14.03	Rising Time of Swing frequency	Range:0.0~6000.0s	Default:5.0s
F14.04	Dropping Time of Swing frequency	Range:0.0~6000.0s	Default:5.0s

See Figure 6-26.

F14.05	Set length	Range:0~65535m	Default:1000m
F14.06	Number of pulses per meter	Range:0.0~6553.5	Default:100.0

The preceding parameters are used for fixed length control.

The length information is collected by DI terminals. U00.27 (Actual length) is calculated by dividing the number of pulses collected by the DI terminal by F14.06 (Number of pulses each meter). When the actual length U00.27 exceeds the set length in F14.05, the DO terminal allocated with function (Length reached) becomes ON. During the fixed length control, the length reset operation can be performed via the DI terminal allocated with function 35. For details, see the descriptions of F04.00 to F04.09.

Allocate corresponding DI terminal with function 34 (Length count input) in applications. If the pulse frequency is high, DI7/HI must be used.

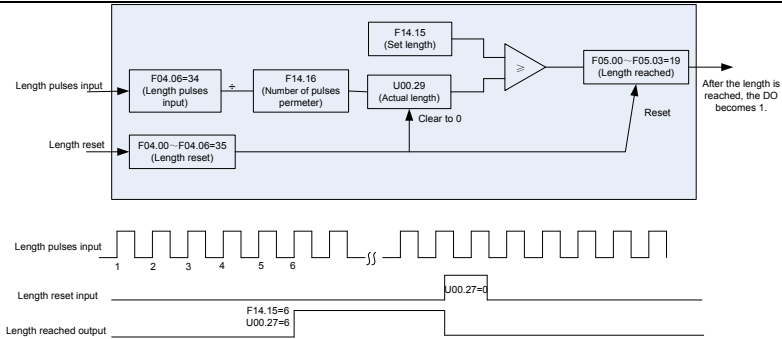


Figure 6-35

F14.07	Command when the length attained	Range:00~12	Default: 0
--------	----------------------------------	-------------	------------

**Units place: stop when the length reaches**

- 0: not stop
- 1: stop.

When the actual length detected reaches the length set in f14.05, select whether to stop. The actual length can be cleared through the terminal of "length reset" input of switching value.

**Tens: length calculation method**

- 0: pulse by pulse

The length is calculated by measuring the number of pulse inputs of the terminal (the terminal function is set to 34), and combining with the number of pulses per meter set in f14.06.

- 1: By maximum frequency

The linear velocity at the current frequency is estimated by setting the corresponding linear velocity f14.06 at the maximum frequency.

- 2: Refer to Ai1 channel

Using the method of estimation, by setting the corresponding line speed f14.06 when Ai1 is 100%, the line speed under the current Ai1 percentage is estimated.

- 3: Refer to Ai2 channel (same as Ai1)
- 4: Refer to ai3 channel (same as Ai1)

**ATTENTION:**

- When actual length is detected to attain the set length, digital output terminal "length attained" outputs ON signal no matter the drive is set to stop or not stop.
- Actual length is saved at power loss and can be read in both stop and running.

F14.08	Set count value	Range:1~65535	Default:1000
F14.09	Designated count value	Range:1~65535	Default:1000

The count value needs to be collected by DI terminal. Allocate the corresponding DI terminal with function 32 (Counter input) in applications. If the pulse frequency is high, DI7/HI must be used.

When the count value reaches the set count value (F14.08), the DO terminal allocated with function 17 (Set count value reached) becomes ON. Then the counter stops counting.

When the counting value reaches the designated counting value (F14.09), the DO terminal allocated with function 17 (Designated count value reached) becomes ON. Then the counter continues to count until the set count value is reached.

F14.09 should be equal to or smaller than F14.08.

Figure 6-28 Reaching the set count value and designated count value

# FR500A&FR510A Series Vector Control Inverter

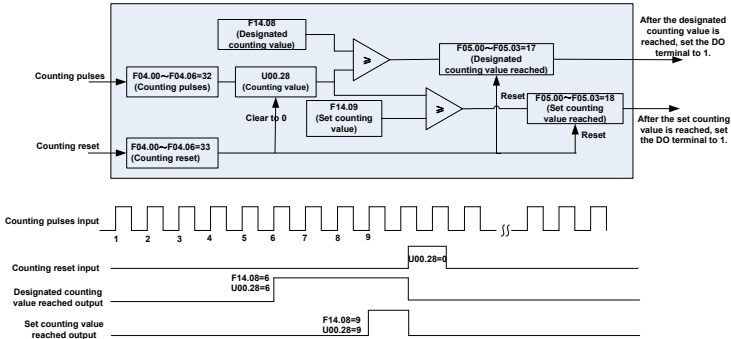


Figure 6-36

### ATTENTION:

Actual count value can be cleared through digital input terminal "count clear".

Actual count value is saved at power loss.

F14.10	Wake up frequency	Range: Dormancy frequency~Fmax	Default: 0.00Hz
F14.11	Wake up delay time	Range: 0.0~6000.0s	Default: 0.0s
F14.12	Dormancy frequency	Range: 0.00~Wake up frequency	Default: 0.00Hz
F14.13	Dormancy delay time	Range: 0.0~6000.0s	Default: 0.0s
F14.17	Wake up pressure	Range: 0.0%~Dormancy pressure	Default: 10.0%
F14.18	Dormancy pressure	Range: Wake up pressure~100.0%	Default: 50.0%

The parameters are used for the dormancy and wake up function in water supply application

During inverter operation, when F14.15 set to be "0", and when setting frequency is lower than F14.12, after delay time of F14.13, inverter entry dormancy and stop. When F14.15 set to be "1", and when pressure feedback is bigger than F14.18, after delay time of F14.13, inverter entry dormancy and stop

During inverter dormancy, when F14.14 set to be "0", and when setting frequency is bigger than F14.10, after delay time of F14.11, inverter start to operate; When F14.14 set to be "1", and when pressure feedback is lower than F14.17, after delay time of F14.11, inverter start to operate

Usually, please set wake up frequency bigger than dormancy frequency. If wake up frequency and dormancy frequency are set to be 0.00Hz, wake up and dormancy function is invalid.

When start dormancy function, if frequency source is PID, need to set F13.26 to be "1" PID operation at stop

F14.14	Wake up mode selection	Range: 0~1	Default: 0
--------	------------------------	------------	------------

0: Frequency

When inverter in dormancy, wake up mode is frequency wake up

1: Pressure

When inverter in dormancy, wake up mode is pressure wake up

F14.15	Dormancy mode selection	Range: 0~1	Default: 0
--------	-------------------------	------------	------------

0: Frequency

Inverter dormancy mode is frequency dormancy

1: Pressure

Inverter dormancy mode is pressure dormancy

F14.16	Pressure feedback source	Range: 00~13	Default: 00
--------	--------------------------	--------------	-------------

When voltage dormancy or wake up:

Unit's place: Pressure feedback channel

0: AI1

Pressure feedback given by AI1

1:AI2

Pressure feedback given by AI2

2:DI7/HI pulse input

Pressure feedback given by DI7/HI

Ten's place: dormancy mode on pressure

0: Positive mode, dormancy on high pressure and wakeup on low pressure

When inverter is running, if the pressure feedback is higher than dormancy pressure, then inverter enter into dormancy.

When inverter is in dormancy, if the pressure feedback is lower than wake up pressure, then inverter wake up from dormancy

1: Negative mode, dormancy on low pressure and wake up on high pressure.

When inverter is running, if the pressure feedback is lower than dormancy pressure, then inverter enter into dormancy.

When inverter is in dormancy, if the pressure feedback is higher than wake up pressure, then inverter wake up from dormancy

**Group F15 Communication Parameters**

F15.00	Baud rate	Range:0~5	Default:1
	0: 4800bps	1: 9600bps	
	2: 19200bps	3: 38400bps	
	4: 57600bps	5: 115200bps	

F15.01	Data format	Range:0~3	Default:0
	0: No check, data format (1-8-N-2) for RTU		
	1: Even parity check, data format (1-8-E-1) for RTU		
	2: Odd Parity check, data format (1-8-O-1) for RTU		
	3: No check, data format (1-8-N-1) for RTU		

F15.02	Local address	Range:1~247	Default:1
	Set this drive address. 0 is broadcast address, while available addresses are 1~247.		

F15.03	Communication timeout	Range:0.0~60.0s	Default:0.0s
	This parameter sets communication error detection time. When it's set to 0.0, no communication error will be reported.		

F15.04	Response time delay	Range:0~200ms	Default:1ms
	Set response time delay of this drive to the master.		

F15.05	Master-slave Communication Mode	Range:0~1	Default:0
	0: The inverter is the slave PC as master controls the drive. This supports all communication protocols.		
	1: The inverter is the master		

This drive as master sends current running frequency data or set frequency data (F15.06) through RS-485 port to 2001H. Data cannot be received but sent.

F15.06	The Master Communication Sending Data	Range:0~1	Default:0
	0: Set frequency		
	1: Current running frequency		

F15.07	Information return when communication error	Range: 0~1	Default: 1
	0: No return		
	1: Return		

F15.08	Group U00.00 output frequency numerical attribute	Range: 0~1	Default: 0
--------	---	------------	------------

0:Positive and negative value (Forward: Positive value, reverse: negative value)

1: Absolute value

**Group F16 Keys and Display of Keypad Parameters**

F16.00	MF.K key setting	Range:0~4	Default:1
	0: No function		
	1: Jog		

## FR500A&FR510A Series Vector Control Inverter

- 2: Forward/reverse switchover  
 3: Run command sources shifted  
 4: Jog reverse

F16.01	Function of STOP/RST key	Range:00~11	Default:01
F16.11	Speed display coefficient	Range:0.00~100.00	Default: 1.00

**Unit's place:** STOP/RST key function

- 0: STOP/RST key valid only when under keypad control  
 1: STOP/RST key valid under any run command source

**Ten's place:** speed display(the value of U00.05)

0:Display the speed estimated

1:Display the value(frequency multiply by speed display coefficient F16.11)

F16.02	Keys locked option	Range:0~4	Default:0
--------	--------------------	-----------	-----------

- 0: Not locked  
 1: Full locked  
 2: Keys locked other than RUN, STOP/RST  
 3: Keys locked other than STOP/RST  
 4: Keys locked other than >>

F16.03	LED displayed parameters setting 1 on running status	Range:0~99	Default:0
F16.04	LED displayed parameters setting 2 on running status	Range:0~99	Default:6
F16.05	LED displayed parameters setting 3 on running status	Range:0~99	Default:3
F16.06	LED displayed parameters setting 4 on running status	Range:0~99	Default:2

Sets LED displayed parameters on running status. When a number of parameters are selected to be displayed, skim- through could be performed using key >> on keypad. 0~99 corresponding U00.00~U00.99.

F16.07	LED displayed parameters setting 1 on stop status	Range:0~99	Default:1
F16.08	LED displayed parameters setting 2 on stop status	Range:0~99	Default:6
F16.09	LED displayed parameters setting 3 on stop status	Range:0~99	Default:15
F16.10	LED displayed parameters setting 4 on stop status	Range:0~99	Default:16

Sets LED displayed parameters on stop status. When a number of parameters are selected to be displayed, skim-through could be realized via key >> on keypad. 0~99 corresponding U00.00 ~ U00.99.

F16.12	Power display coefficient	Range: 0.0~300.0%	Default: 100.0%
--------	---------------------------	-------------------	-----------------

The parameter is used to adjust the value of power displayed on keypad

F16.13	The enable difference range of U00.00 and U00.01	Range: 0.00Hz~5.00Hz	Default:0.10Hz
--------	--	----------------------	----------------

When the difference range of U00.00 and U00.01 is within the set value of F16.13, then the value of U00.00 will be stable.

### Group F17 User-defined Display Parameters

F17.00	User-defined Display Parameter 0	Range:00.00~49.99	Default:00.03
F17.01	User-defined Display Parameter 1	Range:00.00~49.99	Default:01.01
F17.02	User-defined Display Parameter 2	Range:00.00~49.99	Default:01.02
F17.03	User-defined Display Parameter 3	Range:00.00~49.99	Default:01.08
F17.04	User-defined Display	Range:00.00~49.99	Default:01.09

## FR500A&amp;FR510A Series Vector Control Inverter

	Parameter 4		
F17.05	User-defined Display Parameter 5	Range:00.00~49.99	Default:02.00
F17.06	User-defined Display Parameter 6	Range:00.00~49.99	Default:02.01
F17.07	User-defined Display Parameter 7	Range:00.00~49.99	Default:02.12
F17.08	User-defined Display Parameter 8	Range:00.00~49.99	Default:03.00
F17.09	User-defined Display Parameter 9	Range:00.00~49.99	Default:03.01
F17.10	User-defined Display Parameter 10	Range:00.00~49.99	Default:04.00
F17.11	User-defined Display Parameter 11	Range:00.00~49.99	Default:04.01
F17.12	User-defined Display Parameter 12	Range:00.00~49.99	Default:04.02
F17.13	User-defined Display Parameter 13	Range:00.00~49.99	Default:04.03
F17.14	User-defined Display Parameter 14	Range:00.00~49.99	Default:05.02
F17.15	User-defined Display Parameter 15	Range:00.00~49.99	Default:08.01
F17.16	User-defined Display Parameter 16	Range:00.00~49.99	Default:08.02
F17.17	User-defined Display Parameter 17	Range:00.00~49.99	Default:08.03
F17.18	User-defined Display Parameter 18	Range:00.00~49.99	Default:08.04
F17.19	User-defined Display Parameter 19	Range:00.00~49.99	Default:08.05
F17.20	User-defined Display Parameter 20	Range:00.00~49.99	Default:08.30
F17.21	User-defined Display Parameter 21	Range:00.00~49.99	Default:11.10
F17.22	User-defined Display Parameter 22	Range:00.00~49.99	Default:13.00
F17.23	User-defined Display Parameter 23	Range:00.00~49.99	Default:13.01
F17.24	User-defined Display Parameter 24	Range:00.00~49.99	Default:13.02
F17.25	User-defined Display Parameter 25	Range:00.00~49.99	Default:13.08
F17.26	User-defined Display Parameter 26	Range:00.00~49.99	Default:13.09
F17.27	User-defined Display Parameter 27	Range:00.00~49.99	Default:00.00
F17.28	User-defined Display Parameter 28	Range:00.00~49.99	Default:00.00
F17.29	User-defined Display Parameter 29	Range:00.00~49.99	Default:00.00

F17 is user-defined parameter group. You can select the required parameters from all FR500A&FR510A functions codes and add them into this group, convenient for view and modification. Description of Function Codes FR500A&FR510A User Manual Group F17 provides a maximum of 30 user-defined parameters. If "00.00" is displayed, it indicates that group F17 is null. After you enter user-defined function code mode, the displayed parameters are defined by F17.00 to F17.29 and the sequence is consistent with that in group F17.

**Group F18 Parameters of Motor 2**

Please refer to F08 group parameters.

**Group F19 V/F Control Parameters of Motor 2**

Please refer to F09 group parameters.

**Group F20 Vector Control Parameters of Motor 2**

Please refer to F10 group parameters.

**Group F21 Position Control**

Position control is only effective in the presence of PG vector control. Position control includes zero servo and spindle orientation control.

F21.00	Selection of Position Control Mode	Range: 0~5	Default: 0
--------	------------------------------------	------------	------------

0: Non-position control

No position control is performed. Inverter is controlled by speed or torque.

1: Zero Servo (Effective when frequency arrives)

If the set frequency of inverter is less than the zero servo starting frequency F21.02 and the speed of the motor is lower than the corresponding speed of F21.02, it will enter the zero servo locking state. At this time, the motor will remain in this position regardless of whether the load of the motor changes or not. When the set frequency is greater than the zero servo starting frequency, the converter exits the zero servo locking state and runs at the set speed.

2: Zero Servo (Terminal Effective)

When the set frequency of the converter is less than the zero servo starting frequency F21.02 and the motor speed is lower than the corresponding speed of F21.02, if the converter receives the effective signal of the zero servo enabling terminal from the switching input, it immediately records the current position and locks it. Whether the load of the motor changes or not, the motor always remains in this position. When the "zero servo enabler" terminal is invalid, it exits the position locking state and runs at the set speed.

3: Spindle orientation

When the inverter runs, when the receiving "spindle orientation" terminal is valid, the motor slows down and stops at the set position. The orientation position is the angle relative to the Z signal of the encoder. When the "spindle orientation" terminal is invalid, the frequency converter runs at the set frequency.

4: Simple carry

Simple carry control, stop at the set position. The carry is the variable relative to the current position.

5: Pulse train position control

Impulse tracking control

F21.01	Position loop gain	Range: 0.000~40.000	Default: 1.000
--------	--------------------	---------------------	----------------

This parameter is proportional gain of position regulator in position control. Increasing this value can increase the rapidity of position control and the holding force when servo stops, but this value is too large to oscillate and overshoot.

F21.02	Zero Servo Initiation Frequency	Range: 0.00Hz~Fmax	Default: 1.00Hz
--------	---------------------------------	--------------------	-----------------

When the starting frequency of zero servo is chosen as position control mode 1 or 2, the frequency judgment condition of entering zero servo should not be too large. Otherwise, it will easily cause the impact of torque and current, and even lead to over-current fault.

F21.03	Location completion width	Range: 0~3000	Default: 10
F21.04	Location completion time	Range: 0.000~40.000s	Default: 0.200s

In the spindle orientation control, when the error between the encoder detection position and the location setting is less than the F21.03 setting value and the duration exceeds the F21.04 setting value, the positioning is considered to be completed, and the switch output "positioning completed" terminal output ON signal.

F21.05	Spindle orientation position 1	Range: 0~40000	Default: 0
F21.06	Spindle orientation position 2	Range: 0~40000	Default: 0
F21.07	Spindle orientation position 3	Range: 0~40000	Default: 0
F21.08	Spindle orientation position 4	Range: 0~40000	Default: 0

By inputting the state combination of "Directional Position Selection Terminals 1-2" into the switching quantity, the switching can be carried out among the four orientation positions of the spindle, as described in the table below.

Orientation Position Selection Terminal 2	Orientation Position Selection Terminal 1	Orientation position
OFF	OFF	Orientation position 1 (F21.05)
OFF	ON	Orientation position 2 (F21.06)
ON	OFF	Orientation position 3 (F21.07)
ON	ON	Orientation position 4 (F21.08)

The orientation position is the angle of the motor rotor corresponding to the Z signal of the encoder. The position of the Z signal of the encoder corresponds to 0 degrees, and the number of lines of the encoder corresponds to 360 degrees. For example, if the number of coder lines is 1024, the angle of 0-4096 corresponding to 0-360 degrees of the orientation position of the spindle is set. If the motor stops at 60 degrees, the orientation position of the spindle should be set as  $60/360(1024) = 682$ .

F21.09	Spindle orientation direction	Range: 00~12	Default: 00
--------	-------------------------------	--------------	-------------

When F21.00 is selected as 3:spindle orientation, this function is effective.

#### Unit's place: Spindle orientation

0: Oriented from the current direction of rotation

When the motor is rotating, if the frequency converter receives the ON signal of the switch input "directional enabling" terminal, it will decelerate to the spindle directional speed F21.10 according to the set deceleration time, and find the Z signal by spindle directional speed rotation. After finding the Z signal, it will decelerate immediately according to the directional deceleration time set by F21.11. When the motor stops, it will stop at the set position.

When the motor starts from the stop state, if the state of the switch input "directional enabling" terminal is ON, the frequency converter accelerates to the spindle directional speed F21.10 according to the set acceleration time, and finds Z signal by spindle directional speed rotation. After finding Z signal, it decelerates immediately according to the directional deceleration time set by F21.11. When the motor stops, it stops at the set position. In this process, the direction of motor rotation is determined by the operation command. The motor rotates in the positive direction when running the command, and in the reverse direction when running the command.

When the motor is locked in the orientation position, if the setting value of the current orientation position is changed or the terminal orientation position is selected by the orientation position, the motor rotates to the new position in the direction of the shortest distance.

1: Direction from the forward direction

When the motor is rotating, if the frequency converter receives the ON signal of the switch input "directional enabling" terminal, it first runs to the directional speed F21.10 in the positive direction according to the set acceleration and deceleration time, and then decelerates and locates.

When the motor starts from the stop state, if the state of the switch input "directional enabling" terminal is ON, the frequency converter accelerates to the directional speed F21.10 in the forward direction according to the set acceleration time, and then reduces the speed of positioning.

## FR500A&FR510A Series Vector Control Inverter

When the motor is locked in the orientation position, such as changing the setting value of the current orientation position, or switching the orientation position by selecting the terminal through the orientation position, the motor rotates to the new position in the forward direction of operation.

### 2: Orientation from reverse direction

When the motor is rotating, if the frequency converter receives the ON signal of the switch input "directional enabling" terminal, it first runs to the directional speed F21.10 in the reverse direction according to the set acceleration and deceleration time, and then decelerates and locates.

When the motor starts from the stop state, if the state of the switch input "directional enabling" terminal is ON, the frequency converter accelerates to the directional speed F21.10 in the reverse direction according to the set acceleration time, and then reduces the speed of positioning.

When the motor is locked in the orientation position, such as changing the setting value of the current orientation position, or switching the orientation position by selecting the terminal through the orientation position, the motor rotates to the new position in the reverse direction.

### Ten's place: Do orientation or not when stop inverter

If this bit is set to 1, orientation action will be executed when the inverter stops.

If this bit is set to 0, orientation action will not be performed when the inverter stops.

F21.10	Spindle orientation speed	Range: 0.00Hz~Fmax	Default: 10.00Hz
--------	---------------------------	--------------------	------------------

When F21.00 is chosen as 3, if the frequency converter receives ON signal of the switch input "directional enabling" terminal, the motor will first run to the speed set by F21.10, and then rotate to find Z signal. After finding Z signal, the motor will immediately stop according to the directional deceleration time set by F21.11. The higher the directional velocity is, the faster the process of finding Z signal is. But in the case of starting the orientation from the stop state, the motor needs to speed up to this speed before decelerating the stop. Therefore, too much orientation speed setting will slow down the whole orientation process. Please set it reasonably according to the practical application.

F21.11	Spindle orientation deceleration time	Range: 0.0~60.0s	Default: 2.0s
--------	---------------------------------------	------------------	---------------

In the course of orientation, after the motor runs to the orientation speed and has found the Z signal, it reduces the speed and stops at the set position according to the deceleration time. This time is the time to decelerate from the maximum frequency to zero. The smaller the setting, the faster the orientation process, but too small may cause oscillation and overshoot. In order to achieve rapid orientation effect, please cooperate with F21.10 spindle orientation speed reasonable setting.

F21.12	Orientation position confirmation time	Range: 0.000~6.000s	Default: 0.010s
--------	--	---------------------	-----------------

When switching orientation position by digital terminals input "Orientation position selection terminal1 ~ 2", the state changes of the two terminals may not be synchronous, thus stopping the motor in the undesirable position. When the duration of the combined state of the two position selection terminals reaches the set value of F21.12, the frequency converter responds to the action. A slightly larger setting of this value is beneficial to the reliability of the position switching action, but it will slow down the action response.

This confirmation time is invalid when the orientation position is switched by changing the set value of function code F21.05-F21.08.

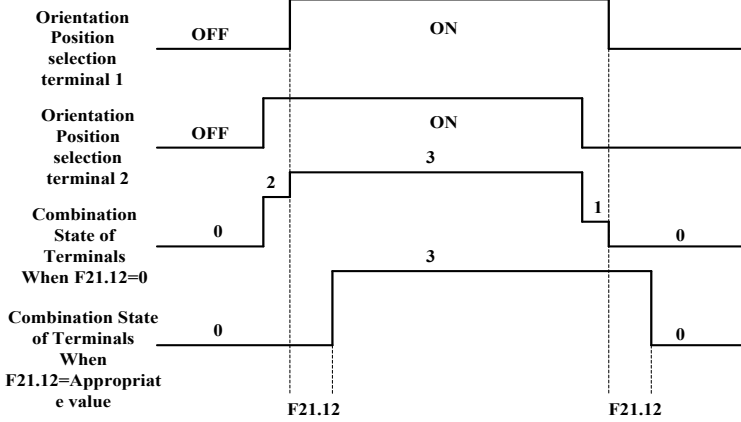


Fig. 6-30 Orientation position confirmation

Following are F21.13~F21.32 for simple carry function description. The simple carry control process is shown in the following figure:

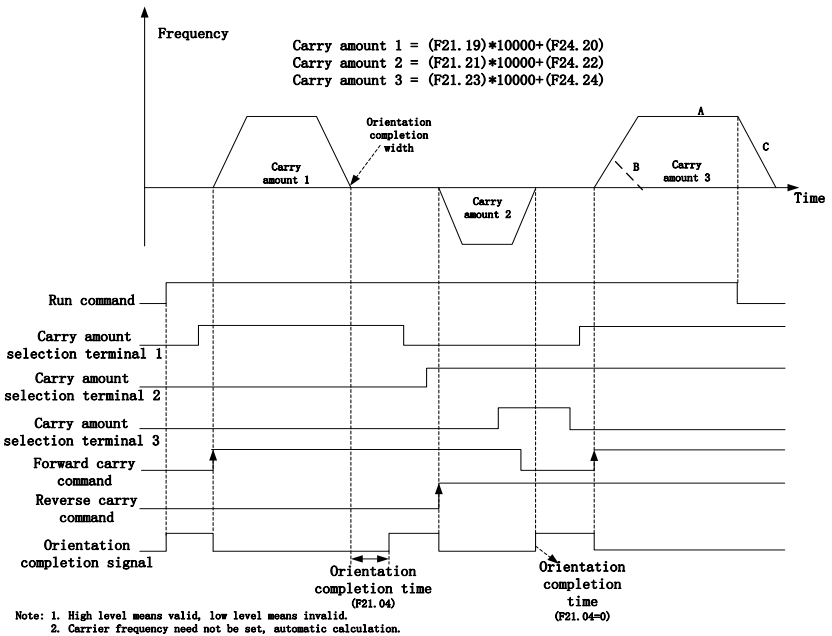


Fig. 6-31

F21.13	Regression Origin Selection	Range: 0~11	Default: 00
--------	-----------------------------	-------------	-------------

**Unit's place: back to origin selection**

The origin signal is detected by the "origin signal input" terminal through the digital input, and the ON signal is input by the terminal at the origin position, while the OFF signal is input by the terminal when it is not at the origin position.

0: No action

There is no origin regression function. When the frequency converter receives the operation instructions, it immediately locks in the current position, and the switch outputs the ON signal from the "positioning completed" terminal.

1: action

The frequency converter returns to the origin every time it starts from the downtime state.

When the converter starts, if the "origin signal input" terminal signal is OFF, that is, when it is not in the origin position, it runs in accordance with the direction set by F21.14 and the frequency set by F21.15. The "origin signal input" is located when the jump time from OFF to ON is found, and the "location completion" terminal outputs the ON signal. See F21.15 function description for details.

When the frequency converter starts, if the "origin signal input" terminal signal is ON, that is, in the origin position, the motor runs in reverse at the frequency set by F21.16, and finds that the "origin signal input" has ON to OFF jump time for position locking, and the "positioning completion" terminal outputs ON signal. See F21.16 function description for details.

**Ten's place: whether carry requires terminal enable signal**

0: No need

Carry function no need extra enable signal

1: Need

Carry function need extra enable signal

F21.14	Regression Origin Direction	Range: 0~1	Default: 0
--------	-----------------------------	------------	------------

0: Forward regression origin

1: Reverse regression origin

This function sets the direction of rotation when the inverter returns to the origin. F21.13 is valid at 1 time.

F21.15	Regression Origin frequency 1	Range: 0.00~Fup	Default: 10.00Hz
--------	-------------------------------	-----------------	------------------

When the frequency converter starts, if the "origin signal input" terminal signal is OFF, that is, when it is not in the origin position, it runs in accordance with the direction set by F21.14 and the frequency set by F21.15. It finds the jump time of the "origin signal input" terminal from OFF to ON to remember the position at this time, and then slows down and stops at this position to lock it. If the frequency of return origin 1 is large, the action of return origin is fast, but the position of return origin is overshoot; if the frequency of return origin 1 is small, the action of return origin is slow, but the position of return origin is overshoot. The process is shown in the following

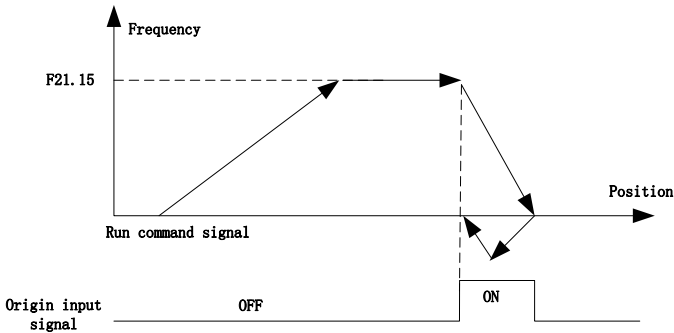


Fig. 6-32

F21.16	Regression Origin frequency 2	Range: 0.00~60.00Hz	Default: 1.00Hz
--------	-------------------------------	---------------------	-----------------

When the frequency converter starts, if the "origin signal input" terminal signal is ON, that is, when it is in the origin position, click on the frequency set by F21.16 to reverse the operation, and find that the "origin signal input" has the jump time of ON to OFF for position locking. Regression origin frequency 2 should not be set too large to avoid impact. The process is shown in the following figure:

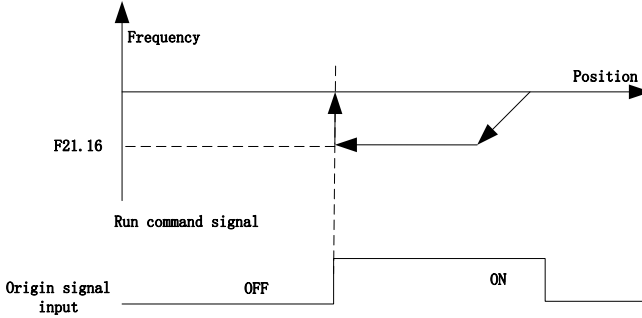


Fig. 6-33

F21.17	Carry amount 0 high value	Range: 0~9999	Default: 0
F21.18	Carry amount 0 low value	Range: 0~9999	Default: 0
F21.19	Carry amount 1 high value	Range: 0~9999	Default: 0
F21.20	Carry amount 1 low value	Range: 0~9999	Default: 0
F21.21	Carry amount 2 high value	Range: 0~9999	Default: 0
F21.22	Carry amount 2 low value	Range: 0~9999	Default: 0
F21.23	Carry amount 3 high value	Range: 0~9999	Default: 0
F21.24	Carry amount 3 low value	Range: 0~9999	Default: 0
F21.25	Carry amount 4 high value	Range: 0~9999	Default: 0
F21.26	Carry amount 4 low value	Range: 0~9999	Default: 0
F21.27	Carry amount 5 high value	Range: 0~9999	Default: 0
F21.28	Carry amount 5 low value	Range: 0~9999	Default: 0
F21.29	Carry amount 6 high value	Range: 0~9999	Default: 0
F21.30	Carry amount 6 low value	Range: 0~9999	Default: 0
F21.31	Carry amount 7 high value	Range: 0~9999	Default: 0
F21.32	Carry amount 7 low value	Range: 0~9999	Default: 0

Simple carry control is performed when F21.00 is selected as 4:

- 1) After the frequency converter receives the operation command, it immediately locks in the current position, and the "positioning completion" terminal outputs ON signal.
- 2) When the output of "positioning completion" terminal is ON, if receiving the rising edge of "positive carry" or "reverse carry" terminal from OFF to ON, that is to say, detecting the combination state of "carry selection terminal 1-3" at the moment, determining the carry, and then starting to speed up the operation to the set frequency. Acceleration time is set by F03 function codes and set frequency by F01 function selection. At this time, the operation process is exactly the same as the normal speed control operation.
- 3) When approaching the set position, the acceleration and deceleration time selected according to F03 functional codes will stop. When the motor stops, it reaches the target position and is locked in the target position. When the error between detection position and setting time of encoder is less than the setting value of F21.03 and the duration reaches the setting value of F21.04, it is considered that the positioning is completed and the switch output "positioning is completed" terminal output ON signal.
- 4) During the period when the output of the "positioning completion" terminal is ON, if the rising

## FR500A&FR510A Series Vector Control Inverter

edge of the "positive carry" or "reverse carry" terminals from OFF to ON is detected, the next carry is carried out from step 2.

★ : Note :

1. In simple carry control, the direction of rotation of the motor is determined by the "forward carry" and "reverse carry" terminals, which have nothing to do with the direction of the operation command.
2. The rising edge of "forward carry" or "reverse carry" terminals from OFF to ON can only be accepted during the completion of the previous positioning, and the terminal signals of "forward carry" or "reverse carry" are not accepted when the previous positioning is not completed.
3. The combination state of "carry selection terminals 1-3" is detected at the rising edge of "forward carry" or "reverse carry" terminals from OFF to ON. Therefore, please determine the status of carry terminals before the rising edge.
4. When the deceleration stops near the set position, the deceleration time is set by F03 functional codes. The deceleration mode is linear deceleration, and the S-curve and DC braking mode are invalid.
5. When the carry instruction value is small, it can't reach the set frequency. After accelerating to a certain frequency, it can directly decelerate and stop, as shown in Curve B of Figure 6-31.
6. If there is a stop command in the simple carry process, exit the carry control and stop according to the set deceleration time, as shown in Fig. 6-31 Curve C.
7. Simple carry control can adjust F21.01 parameters appropriately. Increasing this value can increase the rapidity of position control and the holding force when servo stops, but too large this value may cause vibration and overshoot.
8. When there is a deceleration ratio between encoder and motor, please set F08.27 correctly.

The setting of carry instruction value: Each carry is composed of 8-bit 10-digit numbers of high and low bits, and the setting range is 0-999999. The definition of carry is the distance of motor rotation starting from the current servo lock position. Please set the carry according to 4 times of the number of encoder pulses.

For example, using 1024 line encoder, if you want to carry 20 revolutions, then carry:  $1024 \text{ (number of coder lines)} \times 20 \text{ (number of rotating cycles)} \times 4 \text{ (frequency doubling)} = 81920$ . Set carry high (such as F21.17) = 8, carry low (such as F21.18) = 1920.

By inputting different combinations of "carry selection terminals 1-3" into the switch quantity, up to eight carry quantities can be selected. Specific relations are as follows:

Carry amount selection terminal 3	Carry amount selection terminal 2	Carry amount selection terminal 1	Carry amount
OFF	OFF	OFF	Carry amount 0 (F21. 17、F21. 18)
OFF	OFF	ON	Carry amount 1 (F21. 19、F21. 20)
OFF	ON	OFF	Carry amount 2 (F21. 21、F21. 22)
OFF	ON	ON	Carry amount 3 (F21. 23、F21. 24)
ON	OFF	OFF	Carry amount 4 (F21. 25、F21. 26)
ON	OFF	ON	Carry amount 5 (F21. 27、F21. 28)
ON	ON	OFF	Carry amount 6 (F21. 29、F21. 30)
ON	ON	ON	Carry amount 7 (F21. 31、F21. 32)

F21.33	Selection of Position-Given Mode	Range: 0~2	Default: 0
--------	----------------------------------	------------	------------

0:X7/DI Pulse Input

The "position given pulse input" terminal is only valid for X7/DI terminal. The given pulse mode is input through X7/DI terminal, and the maximum pulse frequency is 30K. When the secondary terminal is

OFF, the input pulse is positive; when the secondary terminal is ON, the input pulse is reverse.

1: Given the A/B phase pulse, the A phase is 90 degrees ahead of the B phase.

2: Given the A/B phase pulse, the encoder has a 90 degree positive turn in phase B ahead of phase A.

F21.34	Electronic Gear Ratio Molecule	Range: 1~9999	Default: 1000
F21.35	Electronic gear denominator	Range: 1~9999	Default: 1000

The change ratio of given pulse and feedback pulse can be changed by electronic gear.

Molecule: Denominator = Feedback Pulse Variation in Unit Time: Given Pulse Variation in Range Time.

For example, if the instruction changes 8 pulses and the motor is required to rotate 5 pulses, then set F21.34=5 and F21.35=8.

★: Attention:

If the position feedback encoder is not installed on the motor shaft, the correct setting of F08.27 (motor to encoder speed ratio) is needed to ensure the normal operation of PG vector control, and the molecule and denominator of the electronic gear ratio are set correctly according to the change ratio of the given pulse and the feedback pulse.

F21.36	feed forward gain	Range: 0.000~7.000	Default: 1.000
--------	-------------------	--------------------	----------------

When the frequency of the command pulse changes, if the follow-up of the feedback pulse lags, please gradually increase the feed-forward gain. On the contrary, please gradually reduce the feed-forward gain. Normally no adjustment is needed. If adjustment is needed, please fine-tune near the factory value.

F21.37	Feedforward filtering time	Range: 0.000~7.000s	Default: 0.001s
--------	----------------------------	---------------------	-----------------

The instruction pulse signal is filtered. Long filtering time leads to good anti-jamming performance, but position tracking may lag behind..

F21.38	Position offset change rate	Range: 0~9999	Default: 800
--------	-----------------------------	---------------	--------------

It is mainly used to adjust the phase between the given and feedback when it is used with the "forward position offset enablement" and "reverse position offset enablement" terminals. When the position is synchronized, if the "positive position offset enable" terminal is valid, the phase of the converter control motor will gradually change along the positive direction; if the "direction position offset enable" terminal is valid, the phase of the converter control motor will gradually change along the reverse direction.

### Group F22 Virtual IO

F22.00	Terminal function selection of virtual VDI1	Range: same as F04.00	Default: 0
F22.01	Terminal function selection of virtual VDI2	Range: same as F04.00	Default: 0
F22.02	Terminal function selection of virtual VDI3	Range: same as F04.00	Default: 0
F22.03	Terminal function selection of virtual VDI4	Range: same as F04.00	Default: 0
F22.04	Terminal function selection of virtual VDI5	Range: same as F04.00	Default: 0

Virtual VDI1~VDI2 can be used as multifunctional digital input, they are set as common DI

F22.05	Valid status setting mode of virtual terminals	Range: 00000~11111	Default: 00000
F22.06	Setting status of virtual VDI terminals	Range: 00000~11111	Default: 00000

There are two modes to set status of virtual VDI terminal, and selected by F22.05

0:the validity of VDI depends on validity of VDO output, and VDOx uniquely bound with VDOx(x range 1-5)

1:Binary digit of F22.06 determine the status of virtual terminal respectively

## FR500A&FR510A Series Vector Control Inverter

F22.07	Selection of virtual VDO1 output function	0:internal short circuited physics Dix Other: The same as F05.00	Default: 0
F22.08	Selection of virtual VDO2 output function	0:internal short circuited physics Dix Other: The same as F05.00	Default: 0
F22.09	Selection of virtual VDO3 output function	0:internal short circuited physics Dix Other: The same as F05.00	Default: 0
F22.10	Selection of virtual VDO4 output function	0:internal short circuited physics Dix Other: The same as F05.00	Default: 0
F22.11	Selection of virtual VDO5 output function	0:internal short circuited physics Dix Other: The same as F05.00	Default: 0

0:Output status of VDO1~VDO5 determined by input status of DI1~DI5 on the control board, at this situation, there is a one-one correspondence between VD0x and Dix.

F22.12	Virtual VDO1 output delay time	Range: 0.0s~6000.0s	Default: 0.0s
F22.13	Virtual VDO2 output delay time	Range: 0.0s~6000.0s	Default: 0.0s
F22.14	Virtual VDO3 output delay time	Range: 0.0s~6000.0s	Default: 0.0s
F22.15	Virtual VDO4 output delay time	Range: 0.0s~6000.0s	Default: 0.0s
F22.16	Virtual VDO5 output delay time	Range: 0.0s~6000.0s	Default: 0.0s
F22.17	Positive and negative logic of VD0 output terminal	Range: 00000~11111	Default: 00000

Positive and negative logic of VD0 output terminal:

Positive logic: If terminal is invalid, then output 0, if terminal is valid, then output 1.

Negative logic: If terminal is invalid, then output 1, if terminal is valid, then output 0.

### Group U00 Status Monitoring

Group U00 is used to monitor the AC drive's running state. You can view the parameter values by using keypad, convenient for on-site commissioning, or from the host computer by means of communication (address: 0x3000~0x3020). Status monitoring parameters in the running and stop state are defined by F16.03 and F16.103.

U00.00	Running frequency	Range:0.00~Fup	Default:0.00Hz
U00.01	Set frequency	Range:0.00~Fmax	Default:0.00Hz
U00.02	Output voltage	Range:0~660V	Default:0V
U00.03	Output current	Range:0.0~3000.0A	Default:0.0A
U00.04	Output power	Range:-3000.0~3000.0kW	Default:0.0kW
U00.05	Estimated Motor Speed	Range:0~60000rpm	Default:0rpm
U00.06	Bus voltage	Range:0~1200V	Default:0V
U00.07	Synchronous Frequency	Range:0.00~Fup	Default:0.00Hz
U00.08	PLC step	Range:1~15	Default:1
U00.09	Program Operation Time	Range:0.0~6000.0s(h)	Default:0.0s(h)

U00.10	PID set	Range:0~60000	Default:0
U00.11	PID feedback	Range:0~60000	Default:0

They display the PID setting value and PID feedback value.

FR500A&FR510A Series Vector Control Inverter

PID setting = PID setting (percentage) □ F13.03

PID feedback = PID feedback (percentage) □ F13.03

U00.12	Status of DI1~DI5 digital input terminal	Range:00000~11111	Default:00000
--------	--	-------------------	---------------

0 means terminal input status is OFF, while 1 means terminal input status is ON.

Unit's place: DI1

Decade: DI2

Hundreds place: DI3

Thousands place: DI4

U00.13	Status of DI6~DI7 digital input terminal	Range: 00~11	Default: 00
--------	--	--------------	-------------

Ten thousands place: DI5

0 means terminal input status is OFF, while 1 means terminal input status is ON.

Unit's place: DI6

Decade: DI7

U00.14	Status of digital output terminal	Range: 0000~1111	Default: 0000
--------	-----------------------------------	------------------	---------------

0 means terminal input status is OFF, while 1 means terminal input status is ON.

Unit's place: Y1

Decade: Y2

Hundreds place: R1

Thousands place: R2

U00.15	A11 input	Range: 0.0~100.0%	Default: 0.0%
U00.16	A12 input	Range: 0.0~100.0%	Default: 0.0%
U00.17	A13 input	Range: 0.0~100.0%	Default: 0.0%
U00.18	Keypad potentiometer input	Range: 0.0~100.0%	Default: 0.0%
U00.19	HI input	Range: 0.00~100.00kHz	Default: 0.00kHz
U00.20	AO1 output	Range: 0.0~100.0%	Default: 0.0%
U00.21	AO2 output	Range: 0.0~100.0%	Default: 0.0%
U00.22	HO output	Range: 0.00~100.00kHz	Default: 0.00kHz

U00.23	Temperature of inverter	Range:-40.0~120.0℃	Default: 0.0℃
U00.24	Accumulative power-on time	Range:0~65535min	Default: 0min
U00.25	Accumulative running time	Range:0~65535min	Default: 0min
U00.26	Cumulative power-on time	Range:0~65535h	Default: 0h
U00.27	Cumulative running time	Range:0~65535h	Default: 0h
U00.28	Count value	Range:0~65535	Default: 0
U00.29	Length value	Range:0~65535m	Default: 0m
U00.30	Linear speed	Range:0~65535m/min	Default: 0m/Min
U00.31	Output torque	Range:0.0~300.0%	Default: 0.0%
U00.32	PTC motor temperature detection	Range: -40~200℃	Default: 0℃
U00.35	Power consumption	Range: 0~65535kWh	Default: 0 kWh
U00.36	VDI1~VDI5 input status	Range: 00000~11111	Default: 00000
U00.37	VDO1~VDO5 output status	Range: 00000~11111	Default: 00000
U00.38	High speed pulse X7 or the line number of expansion card monitoring	Range: 0~65535	Default: 0
U00.39	Sine cosine encoder C signal	Range: 0~4096	Default: 0
U00.40	Sine cosine encoder D	Range: 0~4096	Default: 0

## FR500A&FR510A Series Vector Control Inverter

signal		
--------	--	--

C, D signals used to monitor the sine and cosine encoder

U00.41	UVW encoder UVV signal	Range: 000~111	Default: 000
--------	------------------------	----------------	--------------

Used to monitor the U, V, w signals of the UVW encoder.

### Group U01 Fault Record

U01.00	Code of the latest fault	Range:0~41	Default:0
U01.01	Running frequency when the latest fault occurred	Range:0.00~Fup	Default:0.0Hz
U01.02	Output current when the latest fault occurred	Range:0.0~3000.0A	Default:0.0A
U01.03	Bus voltage when the latest fault occurred	Range:0~1200V	Default:0V
U01.04	Cumulative running time when the latest fault occurred	Range:0~65535h	Default:0h

Check the information of the latest fault. See Chapter 7 for details of fault codes.

U01.05	Code of previous fault	Range:0~31	Default:0
U01.06	Running frequency when previous fault occurred	Range:0.00~Fup	Default:0.0Hz
U01.07	Output current when previous fault occurred	Range:0.0~3000.0A	Default:0.0A
U01.08	Bus voltage when previous fault occurred	Range:0~1200V	Default:0V
U01.09	Cumulative running time when previous fault occurred	Range:0~65535h	Default:0h

Check the information of previous fault. See Chapter 7 for details of fault codes.

U01.10	Before-previous fault code	Range:0~31	Default:0
U01.11	Running frequency when before-previous fault occurred	Range:0.00~Fup	Default:0.0Hz
U01.12	Output current when before-previous fault occurred	Range:0.0~3000.0A	Default:0.0A
U01.13	Bus voltage when before-previous fault occurred	Range:0~1200V	Default:0V
U01.14	Cumulative running time when before-previous fault occurred	Range:0~65535h	Default:0h
U01.15	Previous 3 categories of faults	The same with U01.00	Default: Err00
U01.16	Previous 4 categories of faults	The same with U01.00	Default: Err00
U01.17	Previous 5 categories of faults	The same with U01.00	Default: Err00
U01.18	Previous 6 categories of faults	The same with U01.00	Default: Err00
U01.19	Previous 7 categories of faults	The same with U01.00	Default: Err00
U01.20	Previous 8 categories of faults	The same with U01.00	Default: Err00
U01.21	Previous 9 categories of	The same with U01.00	Default: Err00

## FR500A&amp;FR510A Series Vector Control Inverter

	faults		
U01.22	Previous 10 categories of faults	The same with U01.00	Default: Err00
U01.23	Previous 11 categories of faults	The same with U01.00	Default: Err00
U01.24	Previous 12 categories of faults	The same with U01.00	Default: Err00
U01.25	Previous 13 categories of faults	The same with U01.00	Default: Err00

Check the information of 3~13 previous fault (the fault sequence: before-previous fault, previous fault, latest fault). See Chapter 7 for details of fault code.

## Chapter 7 Maintenance and Troubleshooting

FR500A&FR510A inverter provides a number of warning information and protection, when a fault occurs, the protective function is activated, the inverter will stop output, inverter fault relay contact, and in the inverter displays the fault code on the display panel. Before seeking service user can press the self-examination tips in this section, analyze problems, and identify solutions. If the problem still cannot be excluded, seek services, or contact the dealer you purchase the drive with my company.

Display	Fault Name	Possible Causes	Solutions
Err01	Accel overcurrent	1: The output circuit is grounded or short circuited. 2: The acceleration time is too short. 3: Manual torque boost or V/F curve is not appropriate. 4: The voltage is too low. 5: The startup operation is performed on the rotating motor. 6: A sudden load is added during acceleration. 7: The AC drive model is of too small power class.	1: Eliminate external faults. 2: Increase the acceleration time. 3: Adjust the manual torque boost or V/F curve. 4: Adjust the voltage to normal range. 5: Select rotational speed tracking restart or start the motor after it stops. 6: Remove the added load. 7: Select an AC drive of higher power class
Err02	Decel overcurrent	1: The output circuit is grounded or short circuited. 2: The deceleration time is too short. 3: The voltage is too low. 4: A sudden load is added during deceleration. 5: The braking unit and braking resistor are not installed.	1: Eliminate external faults. 2: Increase the deceleration time. 3: Adjust the voltage to normal range. 4: Remove the added load. 5: Install the braking unit and braking resistor.
Err03	Constant-speed overcurrent	1: The output circuit is grounded or short circuited. 2: The voltage is too low. 3: A sudden load is added during operation. 4: The AC drive model is of too small power class.	1: Eliminate external faults 2: Adjust the voltage to normal range. 3: Remove the added load 4: Select an AC drive of higher power class.
Err04	Accel overvoltage	1: The input voltage is too high. 2: An external force drives the motor during acceleration. 3: The acceleration time is too short. 4: The braking unit and braking resistor are not installed.	1: Adjust the voltage to normal range. 2: Cancel the external force or install a braking resistor. 3: Increase the acceleration time. 4: Install the braking unit and braking resistor.

FR500A&FR510A Series Vector Control Inverter

Err05	Decel overvoltage	<ol style="list-style-type: none"> <li>1: The input voltage is too high.</li> <li>2: An external force drives the motor during deceleration.</li> <li>3: The deceleration time is too short.</li> <li>4: The braking unit and braking resistor are not installed.</li> </ol>	<ol style="list-style-type: none"> <li>1: Adjust the voltage to normal range.</li> <li>2: Cancel the external force or install the braking resistor.</li> <li>3: Increase the deceleration time.</li> <li>4: Install the braking unit and braking resistor.</li> </ol>
Err06	Constant-speed overvoltage	<ol style="list-style-type: none"> <li>1: The input voltage is too high</li> <li>2: An external force drives the motor during deceleration.</li> </ol>	<ol style="list-style-type: none"> <li>1: Adjust the voltage to normal range.</li> <li>2: Cancel the external force or install the braking resistor.</li> </ol>
Err07	Bus undervoltage	<ol style="list-style-type: none"> <li>1: Instantaneous power failure occurs on the input power supply.</li> <li>2: The AC drive's input voltage is not within the allowable range.</li> <li>3: The bus voltage is abnormal.</li> <li>4: The rectifier bridge and buffer resistor are faulty.</li> <li>5: The drive board is faulty.</li> <li>6: The main control board is faulty.</li> </ol>	<ol style="list-style-type: none"> <li>1: Reset the fault.</li> <li>2: Adjust the voltage to normal range.</li> <li>3: Contact the agent or Frecon.</li> </ol>
Err08	Short circuit	<ol style="list-style-type: none"> <li>1: The output circuit is grounded or short circuited.</li> <li>2: The connecting cable of the motor is too long.</li> <li>3: The module overheats.</li> <li>4: The internal connections become loose.</li> <li>5: The main control board is faulty</li> <li>6: The drive board is faulty.</li> <li>7: The inverter module is faulty.</li> </ol>	<ol style="list-style-type: none"> <li>1: Eliminate external faults.</li> <li>2: Install a reactor or an output filter.</li> <li>3: Check the air filter and the cooling fan.</li> <li>4: Connect all cables properly.</li> <li>5: Contact the agent or Frecon.</li> </ol>
Err09	Power input phase loss	<ol style="list-style-type: none"> <li>1: The three-phase power input is abnormal.</li> <li>2: The drive board is faulty.</li> <li>3: The lightning board is faulty.</li> <li>4: The main control board is faulty.</li> </ol>	<ol style="list-style-type: none"> <li>1: Eliminate external faults.</li> <li>2: Contact the agent or FRECON.</li> </ol>
Err10	Power output phase loss	<ol style="list-style-type: none"> <li>1: The cable connecting the AC drive and the motor is faulty.</li> <li>2: The AC drive's three-phase outputs are unbalanced when the motor is running.</li> <li>3: The drive board is faulty.</li> <li>4: The module is faulty.</li> </ol>	<ol style="list-style-type: none"> <li>1: Eliminate external faults.</li> <li>2: Check whether the motor Three-phase winding is normal.</li> <li>3: Contact the agent or Frecon.</li> </ol>
Err11	Motor overload	<ol style="list-style-type: none"> <li>1: F11-17 is set improperly.</li> <li>2: The load is too heavy or locked-rotor occurs on the motor.</li> <li>3: The AC drive model is of too</li> </ol>	<ol style="list-style-type: none"> <li>1: Set F11-17 correctly.</li> <li>2: Reduce the load and check the motor and the mechanical condition.</li> <li>3: Select an AC drive of</li> </ol>

## FR500A&FR510A Series Vector Control Inverter

		small power class.	higher power class.
Err12	Inverter overload	1: The load is too heavy or locked-rotor occurs on the motor. 2: The AC drive model is of too small power class.	1: Reduce the load and check the motor and mechanical condition. 2: Select an AC drive of higher power class.
Err13	External equipment fault	1: External fault signal is input via DI.	Reset the operation.
Err14	Module overheat	1: The ambient temperature is too high. 2: The air filter is blocked. 3: The fan is damaged. 4: The thermally sensitive resistor of the module is damaged. 5: The inverter module is damaged.	1: Lower the ambient temperature. 2: Clean the air filter. 3: Replace the damaged fan. 4: Replace the damaged thermally sensitive resistor. 5: Replace the inverter module.
Err15	EEPROM read/write fault	The EEPROM chip is damaged.	Replace the main control board.
Err16	Motor auto-tuning cancelled	Since the identification process, press STOP / RST key	Press STOP / RST key to reset
Err17	Motor auto-tuning fault	1: the motor and the inverter output terminals are not connected 2: The motor does not disengage the load 3: The electrical fault	1: check the connection between the inverter and motor 2: The motor is disengaged load 3: Check the motor
Err18	Communication overtime error	1: The PC is not working properly 2: The communication line is not normal 3: F15 set communication parameters set incorrectly	1: Check the PC Connection 2: Check the communication cable 3: The communication parameters are set correctly
Err19	PID feedback loss	PID feedback set value is less than F13.24	Check the PID feedback signal or set to an appropriate value F13.24
Err20	Continuous running time reached	Set the running time to reach this function	reference F05.14 Description
Err21	Parameter upload fault	1: Is not installed or is not plugged parameter copy card 2: Parameter copy card anomalies 3: The control board abnormalities	1: a copy of the card is properly installed parameters 2: for technical support 3: for technical support
Err22	Parameter download fault	1: Is not installed or is not plugged parameter copy card 2: Parameter copy card anomalies 3: The control board abnormalities	1: A copy of the card is properly installed parameters 2: For technical support 3: For technical support
Err23	Braking unit fault	1: The brake line failure or damage the brake pipe 2: An external braking resistor is too small	1: Check the brake unit, replace the brake pipe 2: Increasing the braking resistor

FR500A&FR510A Series Vector Control Inverter

Err24	Module temperature detection disconnection	The temperature sensor failure or cable break	For technical support
Err25	Load becoming 0	The AC drive running current is lower than F11.22	Check that the load is disconnected or the setting F11-22 and F11-23 is correct.
Err26	With-wave current limit fault	1: The load is too heavy or locked rotor occurs on the motor. 2: The AC drive model is of too small power class.	1: Reduce the load and check the motor and mechanical condition. 2: Select an AC drive of higher power class.
Err27	Inverter soft-start relay is off	1: The grid voltage is too low 2: Rectifier module failure	1: Check the grid voltage 2: Demand for technical support
Err28	Software version compatibility fault	1: The upper and lower transmission module parameters in the parameter version of the control panel version mismatch.	re-upload module parameters to pass down
Err29	Instantaneous overcurrent	1. Inverter output circuit being grounded or short-circuit; 2. The acceleration and deceleration time is too short; 3. Manually torque boost or V/F curve not appropriate; 4. Voltage too low; 5. Start the running motor; 6. Sudden-load in the acceleration process; 7. Model selection of inverter power is too small.	1. Troubleshooting peripheral problems; 2. To increase the acceleration time; 3. Adjust the manually torque boost or V/F curve; 4. Adjust the voltage to normal range; 5. Select RPM track start or start after motor stopped; 6. Cancel sudden-load; 7. Select the inverter with larger power.
Err30	Instantaneous overvoltage	1: Input voltage is too high; 2. There is external force drag the motor to run in deceleration process; 3. The deceleration time is too short; 4. No installation of braking resistor.	1: Adjust the voltage to normal range; 2. Cancel external force or install brake resistor; 3. To increase the deceleration time; 4. Install braking resistor
Err39	Motor temperature too high	1, PTC sensor configuration not right 2, Motor temperature protection value too small 3, Motor temperature too high	1, Reset PTC sensor parameter 2, Increase motor temperature protection value 3, Waiting until motor is cooled
Err40	The setting running time ends	1, Running time more than F00.25	1. Contact the dealer
Err41	Overload warning	1, when F11.18 = 00100 and the current output amp is more than F11.19	1, Check the current load

## Chapter 8 Maintenance and Inspection

### 8.1 Inspection

Frequency semiconductor devices, passive electronic components, and the movement device is configured, these devices have life, even under normal working conditions, if over the useful life, some devices may have characteristic changes or failure. In order to prevent this phenomenon leads to failure and must be checked daily, periodic inspection, parts replacement and other preventative maintenance checks. After the machine installation is recommended every 3 to 4 months to conduct an inspection. If any of the following situations, please check to shorten the cycle.

High-temperature, high-altitude environment;

Frequent starting and stopping the environment;

The presence of AC power or load greater volatility environment;

Environment existed large vibration or shock;

The existence of environmental dust, metal dust, salt, sulfuric acid, chlorine element;

Storage environment is very bad.

#### 8.1.1 Daily inspection

To avoid damage and shorten the life of the inverter, please confirm the following items daily.

item	contents	Strategies
Power supply	Check the supply voltage meets the requirements phase power supply and the presence of the phenomenon.	Press nameplate asked to solve.
Surroundings	Installation environment meets the requirements of Table 3-1.	Confirm the source and properly resolve
Cooling System	Whether the inverter and the motor is abnormal discoloration 符 heating and cooling fan status.	Confirm whether the overload, tighten the screws, if the inverter heatsink fan is dirty confirm whether the stall.
Motor	Whether the motor is abnormal vibration and abnormal noise.	Tightening mechanical and electrical connections and do lubricated mechanical parts.
Load conditions	Inverter output current is higher than the rating of the motor or inverter and lasted for some time.	Confirm whether there is an overload condition occurs confirm the correct drive selection

Note: Do not relate jobs in the state power is turned on, otherwise there is danger of electric shock to cause death. When 止 conducting related operations, turn off the power and make sure the main circuit DC voltage has dropped to a safe level, five minutes before the related operations.

#### 8.1.2 Regularly check

Under normal circumstances, every three months to four months to conduct a periodic inspection is appropriate, but in the actual case, combined with the use of each machine and the working environment, to determine the actual inspection cycle.

item	contents	Strategies
Overall	<ul style="list-style-type: none"> <li>● Insulation resistance check;</li> <li>● environmental inspections.</li> </ul>	<ul style="list-style-type: none"> <li>● fastening and replace bad parts;</li> <li>● Clean improving operating environment.</li> </ul>
Electrical connection	<ul style="list-style-type: none"> <li>● Are there wires and connection portion discolored insulation for damage, cracks, discoloration and aging signs;</li> <li>● connection terminals for wear, damage, loose;</li> <li>● ground checks.</li> </ul>	<ul style="list-style-type: none"> <li>● Replace damaged wires;</li> <li>● tighten loose terminals and replace the damaged terminal;</li> <li>● measure ground resistance and tighten the corresponding ground terminal.</li> </ul>
Mechanical	<ul style="list-style-type: none"> <li>● whether there is abnormal vibration</li> </ul>	<ul style="list-style-type: none"> <li>● tightening, lubrication,</li> </ul>

connection	and noise, fixed loose.	replacement of bad parts.
Semiconductor or devices	<ul style="list-style-type: none"> <li>• Are stained with dirt and dust; 况</li> <li>• Are there significant changes in appearance.</li> </ul>	<ul style="list-style-type: none"> <li>• Clean the operating environment;</li> <li>• Replace damaged parts.</li> </ul>
Electrolytic capacitor	<ul style="list-style-type: none"> <li>• whether the leaks, discoloration, cracking, safety is exposed, swelling, cracking or leakage.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace damaged parts.</li> </ul>
Peripheral equipment	<ul style="list-style-type: none"> <li>• peripherals appearance and insulation inspection.</li> </ul>	<ul style="list-style-type: none"> <li>• Clean Environment 瑛 replace damaged parts.</li> </ul>
Printed circuit board	<ul style="list-style-type: none"> <li>• Are there odor, discoloration, severe rust connector is correct and reliable.</li> </ul>	<ul style="list-style-type: none"> <li>• Fastening;</li> <li>• Clean the printed circuit board;</li> <li>• Replace damaged printed circuit board. 况</li> </ul>
Cooling System	<ul style="list-style-type: none"> <li>• whether the cooling fan is broken and stall phenomenon;</li> <li>• fins are not stained with garbage and dirt, dirty;</li> <li>• air intake and exhaust ports are clogged or contaminated with foreign matter.</li> </ul>	<ul style="list-style-type: none"> <li>• Clean the operating environment;</li> <li>• Replace damaged parts.</li> </ul>
Keyboard	<ul style="list-style-type: none"> <li>• Are there broken keyboard and display incomplete phenomenon.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace damaged parts.</li> </ul>
Motor	<ul style="list-style-type: none"> <li>• The motor is abnormal vibration and abnormal noise.</li> </ul>	<ul style="list-style-type: none"> <li>• fastening mechanical and electrical connections, and the motor shaft lubrication.</li> </ul>

**Note:** Do not relate jobs in the state power is turned on, otherwise there is danger of electric shock to cause death. When conducting related operations, turn off the power and make sure the main circuit DC voltage has dropped to a safe level, five minutes before the related operations.

## 8.2 Maintenance

All equipment, parts are all life, the right to life has been extended maintenance, but the damage cannot be resolved equipment, devices, according to the requirements of life reached or are about to reach the end of the device to be replaced.

Part name	Life Cycle
Fan	2 to 3 years
Electrolytic capacitor	4 to 5 years
Printed circuit board	8 to 10 years

### 8.2.1 Fan

When replacing the cooling fan, use the original fan, buy original fan, and please contact the dealer where you purchased the product or the company's sales department. Drive is equipped with a plurality of cooling fan models. For a number of cooling fans with inverter, To maximize the useful life of the product, when changing the cooling fan to simultaneously replace all the fans.

#### Fan Removal Method

1. Under pressure Figure 8-1 (a) shows a fan elastic snaps, while a little harder to pull out in parallel, remove the fan cover from the Inverter.

2. Figure 8-1 (b) shown in order to come up with the fan cover and fan, and then press the fan as shown in the medial elastic snap lead terminal, while a little harder to pull the fan lead terminal.

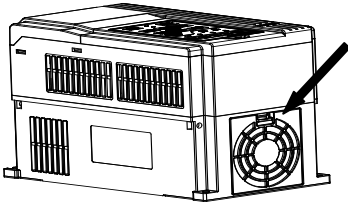


Figure 8-1 (a) Remove the fan covers

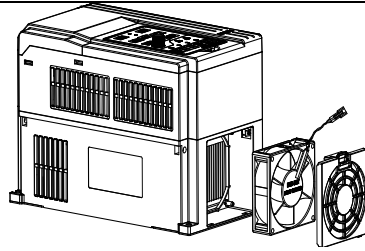


Figure 8-1 (b) Remove the fan

**Fan Installation**

1. Figure 8-2 (a) shown in finger pressure to the inside of the fan under the lead terminal elastic snaps, while a little harder vertically into the lead terminal, and then fan vertically into the slot.
2. Figure 8-2 (b), (c) as shown in the fan shroud assembly ramp into the hole at one end and the other end to snap into place.

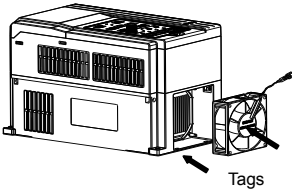


Figure 8-2 (a) Install the fan leads

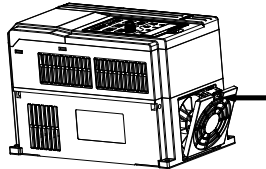


Figure 8-2 (b) Install the fan cover

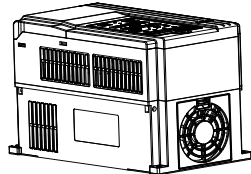


Figure 8-2 (c) fixed in place

**Note:**

- 1, do not related jobs in the state power is turned on, otherwise there is danger of electric shock to cause death. When conducting related operations, turn off the power and make sure the main circuit DC voltage has dropped to a safe level, five minutes before the related operations.
- 2, the drive to work due to the loss caused by the heat sink temperature, in order to prevent burns, do not touch the heat sink fins must be confirmed sufficiently cooled to a safe temperature below then replace the cooling fan.
- 3, in order to ensure that the inverter can maximize performance, please use the original fan.

**8.2.2 Other Devices**

Replacement of other devices to maintain familiarity with technology and products are very strict and must go through rigorous testing to be put into use after the replacement, so I do not recommend the user to replace the other internal components, if indeed need to be replaced, please contact the dealer where you purchased the product or our sales department.

## Appendix A: Modbus Communication Protocol

### 1. Application Scope

1. Applicable series: FRECON FR series inverter.
2. Applicable network: Support Modbus protocol, RTU format, with single-master/multi-slave Communication network of RS485 bus.

The typical RTU message frame format:

Start Bit	Device Address	Function Code	Data	CRC	Stop Bit
T1-T2-T3-T4	8Bit	8Bit	n*8Bit	16Bit	T1-T2-T3-T4

### 2. Physical Interface

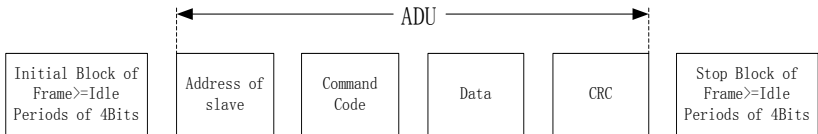
RS485 is asynchronous half-duplex Communication mode. LSB has transmission priority.

Default data format of RS485 terminal: 1-8-N-1, bits rate: 9600bps.

Data format 1-8-N-1, 1-8-O-1, 1-8-E-1, optional bits rates 4800bps, 9600bps, 19200bps, 38400bps, 57600bps and 115200bps can be selected.

Shielded twisted-pair cable is recommended Communication cable to lower external interference.

### 3. Protocol Format



The parity in ADU (Application Data Unit) is obtained via the CRC16 parity of the 1st three Parts of ADU and switch the low bytes and high bytes. Low bytes of CRC parity go first, and high bytes of it follow in the protocol format.

## 4. Description of Protocol Format

### 4.1 Address Code

Address of slave inverter. The setting range: 1~247, 0 is broadcast address.

### 4.2 Command Code

Command Code	Function
03H	Read parameters and status byte of inverter
06H	Write single function code or control parameter of inverter
08H	Circuit diagnosis and setting

# FR500A&FR510A Series Vector Control Inverter

## 4.3 Allocation of Register Addresses

name	Description
Function Code (F00.00~U01.99)	<p>High byte function code group number, F00~F31, U00, U01, respectively, corresponding to the high byte address is 00H~1FH, 30H, 31H.</p> <p>Low byte of the group function code number, from 0 to 99 corresponding to the low byte address is 00H~63H.</p> <p>For example: Modify F01.02 function code value, no power-down when storing the corresponding register address (referred to as RAM address) to 0102H.</p> <p>EEPROM is frequently modified, will reduce the life of the EEPROM. If you modify the value of the function code-down storage needs, you can make this function code is the highest position a high address. Note that this address is only to write, not read.</p> <p>For example: Modify F01.02 function code value, and the corresponding need to power down when storing the register address (referred to as EEPROM address) to 8102H.</p>

Function code group	RAM address high byte	EEPROM address high byte
F00	0x00	0x80
F01	0x01	0x81
F02	0x02	0x82
F03	0x03	0x83
F04	0x04	0x84
F05	0x05	0x85
F06	0x06	0x86
F07	0x07	0x87
F08	0x08	0x88
F09	0x09	0x89
F10	0x0A	0x8A
F11	0x0B	0x8B
F12	0x0C	0x8C
F13	0x0D	0x8D
F14	0x0E	0x8E
F15	0x0F	0x8F
F16	0x10	0x90
F17	0x11	0x91
F18	0x12	0x92
F19	0x13	0x93
F20	0x14	0x94
F21	0x15	0x95
F22	0x16	0x96
U00 (Read Only)	0x30	--
U01 (Read Only)	0x31	--

### 4.4 Address and control command functions: (write only)

Command word address	Command Function
2000H	0001: Forward run 0002: Reverse Run 0003: Inching Forward 0004: Reverse Jog 0005: Slowdown stop 0006: Freewheel 0007: Fault reset
2001H	Communication setting frequency (0~Fmax (Unit: 0.01Hz))
2002H	PID given range (0 to 1000, 1000 corresponds to 100.0%)
2003H	PID feedback range (0~1000, 1000 corresponds to 100.0%)

FR500A&FR510A Series Vector Control Inverter

2004H	Torque set point (-3000~3000, 1000 corresponds to 100.0% motor rated current)
2005~20FF	Retention

**4.5 The status and function of the read address Description: (read only)**

Status word address	functional status word
2100H	0000H: parameter setting 0001H: slave run 0002H: JOG operation 0003H: learning run 0004H: Slave parking 0005H: JOG parking 0006H: Fault Status
2101H	Bit0: 0 are given effective 1 Given negative effective Bit1:0 frequency output Forward 1 frequency output inversion Bit2~3: 00 Keyboard start-stop 01 terminal start-stop 10 start-stop communication 11 Reserved Bit4: 0 Factory password is invalid 1 factory password is valid Bit5: 0 user password is invalid 1 valid user password Bit6~7: 00 basic function code group 01 user-defined function code group 10 different functions with the factory default code group 11 Others

**5. Explanation of Command**

**Command code 0x03: Read parameter and status of inverter.**

ADU Item	Byte No.	Range
Master requests:		
Address of slave	1	0~127
Command Code	1	0x03
Register start address	2	0x0000~0xFFFF
The number of register	2	0x0000~0x0008
CRC parity(Low bytes go first)	2	
Slave responds :		
Address of slave	1	The local address
Command Code	1	0x03
Register start address	1	2□ number of registers
The number of register	2□ number of registers	
CRC parity	2	

Remarks: Read maximum 8 function codes consecutively.

**Command code 0x06: Write single function code or control parameter of inverter.**

ADU Item	Byte No.	Range
Master requests:		
Address of slave	1	0~127
Command Code	1	0x06

## FR500A&FR510A Series Vector Control Inverter

Register start address	2	0x0000~0xFFFF
The number of register	2	0x0000~0xFFFF
CRC parity	2	
Slave responds :		
Address of slave	1	The local address
Command Code	1	0x06
Register start address	2	0x0000~0xFFFF
The number of register	2	0x0000~0xFFFF
CRC parity	2	

### Command code 0x08: Circuit Diagnosis and Setting

ADU Item	Byte No.	Range
Master requests:		
Address of slave	1	0~127
Command Code	1	0x08
Register start address	2	0x0000~0xFFFF
The number of register	2	
CRC parity	2	
Slave responds :		
Address of slave	1	The local address
Command Code	1	0x08
Register start address	2	0x0000~0xFFFF
The number of register	2	
CRC parity	2	

**Remarks:** Command code 0x08 is only for circuit check.

## 6. CRC Parity

Sending equipment calculates CRC parity value first, and then attaches it to the sending message. Upon receipt of the message, receiving equipment will calculate CRC parity value again, and compare the operation result with received CRC parity value. If the two values are different, it indicates that there is error during transmission.

### Calculation process of CRC parity:

1. Define a CRC parity register, and initialize it as FFFFH.
2. Conduct XOR calculation between the first byte of sending message and the value of CRC parity register, and then upload the result to CRC parity register. Start from address code, the start bit and stop bit will not be calculated.
3. Collect and check LSB (the least significant bit of CRC parity register).
4. If LSB is 1, shift each bit of CRC parity register rightwards by 1 bit, the highest bit filled with 0. Conduct XOR calculation between the value of CRC register and A001H, and then upload the result to CRC parity register.
5. If LSB is 0, shift each bit of CRC parity register rightwards by 1 bit, the highest bit filled with 0.
6. Repeat steps 3, 4 and 5 until completing 8 rounds of shifting.
7. Repeat steps 2, 3, 4, 5 and 6, and process the next byte of sending message. Repeat above process continuously until each byte of sending message is processed.
8. CRC parity date will be saved in CRC parity register after calculation.
9. LUT (Look-up table) method is to obtain CRC parity in the system with limited time resources. Simple CRC functions as shown in following (C language Programming):

unsigned int CRC\_Cal\_Value (unsigned char □ Data, unsigned char Length)

```
{
    unsigned int crc_value = 0xFFFF;
    int i = 0;
    while (Length--)
    {
        crc_value ^= □ Data++;
        for (i=0; i<8; i++)
        {
            if (crc_value & 0x0001)
            {
                crc_value = (crc_value>>1) ^ 0xa001;
            }
            else
            {
                crc_value = crc_value>>1;
            }
        }
    }
    return (crc_value);
}
```

## 7. Error Message Response

Inverter will send an error message report when the master sends error data or inverter receives the error data due to the external interference.

When Communication error occurs, slave combines the highest bit 1 of command code and error code as the response to the master.

Responding data frame format when errors happened in Communication:

ADU Item	Byte No.	Range
Error response:		
Address of slave	1	0~127
Error command code	1	The highest bit 1 of command code
Error code	1	0x01~0x13
CRC parity(Low bytes go first)	2	

Responding command code at normal Communication and error Communication

Responding Command Code at Normal Communication	Responding Command Code at Error Communication
03H	83H
06H	86H
08H	88H

Description of Error Code:

error	Description	error	Description
01H	Exceptional command code	03H	Illegal Data
02H	Exceptional data address	04H	Operation failed

For example, for U00.00 write data 50.00HZ frequency. The host sends the data frame (hex):

01H	06H	30H	00H	13H	88H	8BH	9CH
-----	-----	-----	-----	-----	-----	-----	-----

Because F00.00 is read only, inverter responds error message. Inverter responds data frame in hexadecimal format:

01H	86H	02H	C3H	A1H
-----	-----	-----	-----	-----

Command code is 86H in error message, the highest bit 1 of 06H. If error code detail is 11H, it means the parameter is read only.

After responding to the error data receipt, master can revise the responding program via resending data frame or based on the error message responded by the inverter.

**8. Illustration**

1, No. 01 reads the output frequency value (U00.00), returned 5000, that 50.00Hz.

To send data:

01 03 30 00 00 01 8B 0A

The received data is:

01 03 02 13 88 B5 12

2, No. 01 Drive communication given frequency 30.00Hz, send the data content of 3000.

To send data:

01 06 20 01 0B B8 D4 88

The received data is:

01 06 20 01 0B B8 D4 88

3, communications sent on the 1st drive forward run command, write to the address 2000H 01

To send data:

01 06 20 00 00 01 43 CA

The received data is:

01 06 20 00 00 01 43 CA

4, No. 01 communications sent inverter deceleration stop command, the address to write to 2000H 05

To send data:

01 06 20 00 00 05 42 09

The received data is:

01 06 20 00 00 05 42 09

## Appendix B: Braking Resistor

When the inverter with high inertia loads or need to slow down rapid deceleration, Motor will in the state of power generation, the energy is transferred to the inverter DC link via the inverter bridge, causing the bus voltage of the inverter rises, when more than a certain value, the inverter will report overvoltage fault, and even lead to inverter power module damage of overvoltage, to prevent this happening, you must configure the brake components.

FR500A&FR510A versatile compact inverter series are all built-in brake unit, customers simply external braking resistor can be used. The following is recommended braking resistor power rating and resistance. Depending on the load, the user can change the values appropriately, but must be within the recommended range.

Inverter Model No.	Brake unit	Resistance( $\Omega$ )	Quantity	Minimum enabled brake resistance
FR500A-4T-0.7G/1.5PB	Standard built-in	200W 600 $\Omega$	1	100 $\Omega$
FR500A-4T-1.5G/2.2PB		300W 360 $\Omega$	1	100 $\Omega$
FR500A-4T-2.2G		300W 180 $\Omega$	1	100 $\Omega$
FR500A-4T-2.2G/4.0PB		300W 180 $\Omega$	1	100 $\Omega$
FR500A-4T-4.0G/5.5PB		400W 150 $\Omega$	1	100 $\Omega$
FR500A-4T-5.5G/7.5PB		600W 100 $\Omega$	1	80 $\Omega$
FR500A-4T-7.5GB		800W 75 $\Omega$	1	60 $\Omega$
FR500A-4T-7.5G/011PB		800W 75 $\Omega$	1	60 $\Omega$
FR500A-4T-011G/015PB		1.1kW 50 $\Omega$	1	43 $\Omega$
FR500A-4T-015G/018PB		1.6kW 40 $\Omega$	1	31 $\Omega$
FR500A-4T-018G/022PB		4.0kW 32 $\Omega$	1	24 $\Omega$
FR500A-4T-022G/030PB		4.5kW 27 $\Omega$	1	24 $\Omega$
FR500A-4T-030G/037PB		6.0kW 20 $\Omega$	1	19.2 $\Omega$
FR500A-4T-037GB		7.0kW 20 $\Omega$	1	19.2 $\Omega$
FR500A-4T-037G/045P(B)	Built-in optional	7.0kW 20 $\Omega$	1	19.2 $\Omega$
FR500A-4T-045G/055P(B)		9.0kW 13 $\Omega$	1	12.8 $\Omega$
FR500A-4T-055G/075P(B)		11.0kW 10.2 $\Omega$	1	9.6 $\Omega$
FR500A-4T-075G/090P(B)		15.0kW 7.5 $\Omega$	1	6.8 $\Omega$
FR500A-4T-090G/110P(B)		18.0kW 6.5 $\Omega$	1	6.3 $\Omega$
FR500A-4T-110G/132P	FRBU-4T-315	26.0kW 6 $\Omega$	1	6 $\Omega$
FR500A-4T-132G/160P		26.0kW 4 $\Omega$	1	4 $\Omega$
FR500A-4T-160G/185P		26.0kW 4 $\Omega$	1	4 $\Omega$
FR500A-4T-185G/200P		38.0kW 3.4 $\Omega$	1	3.4 $\Omega$
FR500A-4T-200G/220P		38.0kW 3.4 $\Omega$	1	3.4 $\Omega$
FR500A-4T-220G/250P		42.0kW 3 $\Omega$	1	3 $\Omega$
FR500A-4T-250G/280P		42.0kW 3 $\Omega$	1	3 $\Omega$
FR500A-4T-280G/315P		54.0kW 2 $\Omega$	1	2 $\Omega$
FR500A-4T-315G/355P		54.0kW 2 $\Omega$	1	2 $\Omega$

**\*Note:** The model of FR510A series inverter only needs to replace FR500A in the above table with FR510A

**Remark:**

Multiple braking resistors are connected in parallel mode. For example FR500A-4T-022G/030PB

## FR500A&FR510A Series Vector Control Inverter

---

inverter braking resistor selection: Recommend selecting two 2KW, 30Ω resistor in parallel connection, Equivalent braking resistor is 4KW, 15Ω.

If the power rating over 90kw, please refer to 《FRBU User's Manual Of Braking Unit》 to select the braking resistor.

Cables listed in above table refer to the lead cable of single resistor. The DC bus should be updated if the resistors are in parallel connection. Cable should withstand voltage above AC450V, and temperature resistance of cable: 105°C.

## Appendix C: PG Card

FR510A series is equipped with PG cards showed as below, as optional parts, is the necessary part for inverter with closed loop vector control mode. PG card feedback the real-time speed of motor through the signal acquisition from encoder to achieve the precise control of motor speed and steering

Model	Description	Connection mode
EXC-PG01	The differential input PG card	Terminal connection
EXC-PG02	Open collector,push input PG card	Terminal connection
EXC-PG03	Rotary transformer PGcard	DB9 interface
EXC-PG04	UVW encoder PG card	Terminal connection
EXC-PG05	ECN1313 PG card	Terminal connection
EXC-PG06	Sin-Cos encoder PG card	DB15 interface

### Relative Parameters

Function code	Code Name	Setting Range	Default	Attr				
F00.08	Motor control method	Unit's place: Motor1 control method	11	×				
		0: V/F control						
		1: Sensor-less vector control mode1						
		2: Sensor-less vector control mode2						
		3: Close-loop control(with PG card)						
		Ten's place: Motor2 control method						
		0: V/F control						
		1: Sensor-less vector control mode1						
F08.23	Encoder line count	0-65535	1024	×				
		F08.24			Encoder selection	0: ABZ incremental encoder	0	×
						1: UVW incremental encoder		
						2: Rotary transformer		
						3: ECN1313		
4: Sin-Cos encoder								
F08.25	AB phase sequence	0: Positive	0	×				
		1: Negative						
F08.30	Auto-tuning	0: No autotuning	0	×				
		1: Static autotuning of motor						
		2: Rotary autotuning of motor						

Set these parameter according to different encoder

Function code explanation:

- 1)F00.08 = 33(Close-loop control,with PG card)
- 2)When choosing ABZ incremental encoder, F08.24 should be rightly set.
- 3)When choosing ABZ incremental encoder, need to check that AB phase sequence is the same with frequency.

**Installation diagram shown as below C-1:**

- 1) All kinds of PG cards are installed in the same place
- 2) Cut off the power when to install PG card or uninstall it.
- 3) Connecting the 20 PIN interface of PG card to J3 interface of control board.

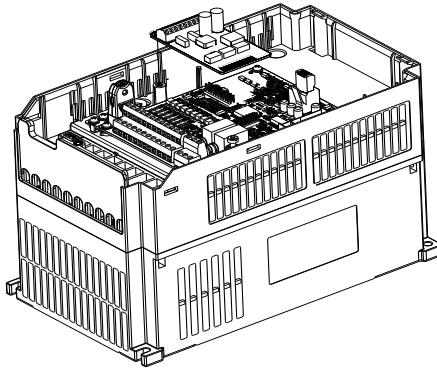


Fig.C-1 PG card installation

**C.1 ABZ encoder PG card**

External view:

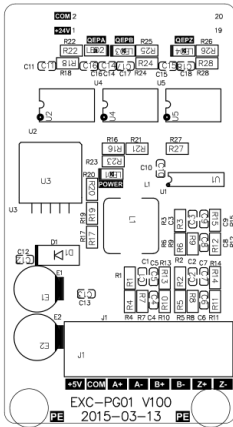


Fig.C-2(a)EXC-PG01

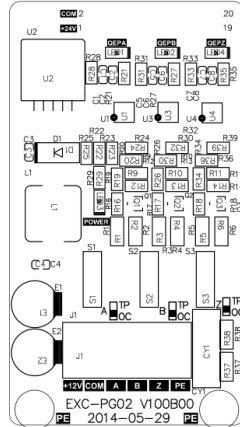


Fig.C-2(b)EXC-PG02

Table C-1 Technical parameter

Model	Power	Characteristics of the input signal		Characteristics of the ouput signal	
		Response frequency range	Input impedance	Output frequency range	Output current
EXC-PG01	5V	0-300KHz		0-300KHz	200mA
EXC-PG02	12V	0-80KHz		0-80KHz	100mA

Terminals outline drawing:



Fig.C-3(a)EXC-PG01 terminals



Fig.C-3(b)EXC-PG02 terminals

Table C-2 Terminal function description

Model	Connection object	Interface name	Description
EXC-PG 01	The differential input incremental encoder interface	A+, A-	Encoder output signal A, maximum frequency 300kHz
		B+, B-	Encoder output signal B, maximum frequency 300kHz
		Z+, Z-	Encoder output signal Z, zero signal
		+5V	Supply +5V/200mA power
		COM	Power earthing
EXC-PG 02	Open collector, Push input incremental encoder interface	+12V	Supply +12V/100mA power
		COM	Power earthing
		A	Encoder output signal A, maximum frequency 80kHz
		B	Encoder output signal B, maximum frequency 80kHz
		Z	Encoder output signal Z, zero signal
		PE	Shielding line

Schematic diagram of the application connection



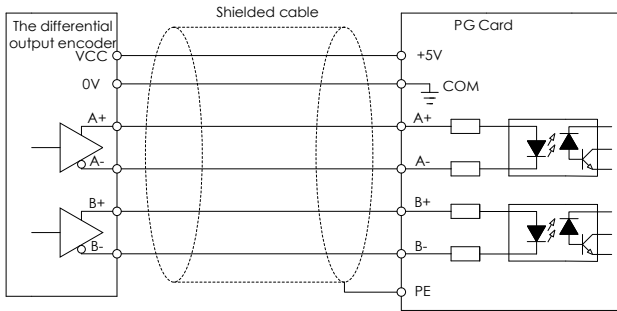


Fig. C-4 Connection schematic diagram of EXC-PG01 and the differential output encoder

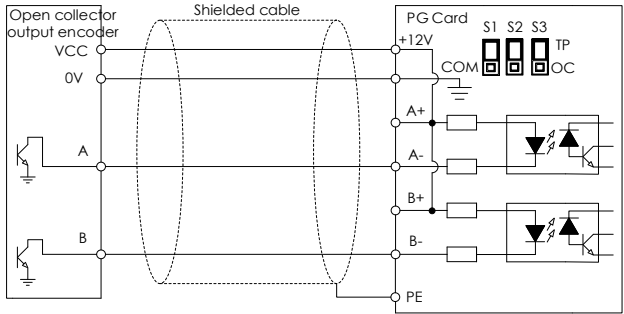

**Fig. C-5 Connection schematic diagram of EXC-PG01 and the open collector output encoder**

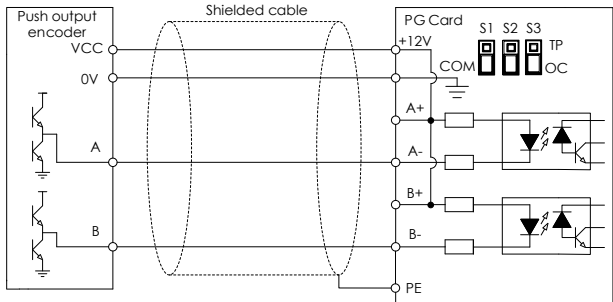

**Fig. C-6 Connection schematic diagram of EXC-PG01 and the push output encoder**

**Usage method**

- 1) Follow Figure C-1 to loading PG card
- 2) Follow Figure C-4、C-5、C-6 to connect PG card and encoder
- 3) Shielded cable earthing line PE is connected directly to the fixed screw of PG card
- 4) According to the actual situation to set the inverter parameters as follow:

Parameter setting	Description
F00.08 = 3	Close-loop control(with PG card)
F08.23 = 1024	Encoder line number, setting as the specification of encoder
F08.24 = 0	ABZ incremental encoder
F08.25 = 0	AB phase sequence.

## C.2 Rotary transformer PG card

Outline and its interface:

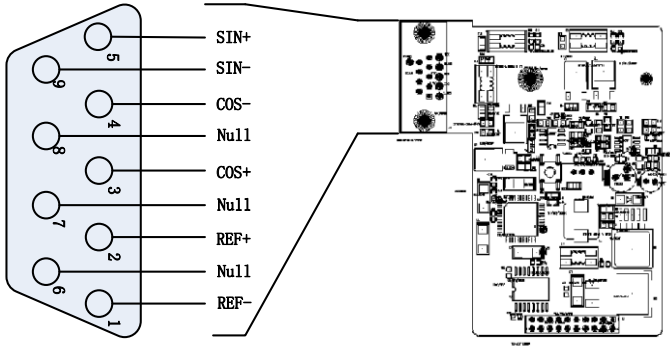


Fig.C-7 EXC-PG03 Schematic diagram and its DB9 pin interface

### DB9 PIN

PIN	1	2	3	4	5	6	7	8	9
Name	REF-	REF+	COS+	COS-	SIN+	Null	Null	Null	SIN-

### PIN function

Model	Connecting object	Pin name	Description
EXC-PG03	Rotary transformer	COS+、 COS-	Cosine signal
		SIN+、 SIN-	Sine signal
		REF+、 REF-	Voltage reference signal
		Null	Null

### Usage method

- 1) Follow Figure C-1 to loading PG card
- 2) Shielded cable earthing line PE is connected directly to the fixed screw of PG card
- 3) According to the actual situation to set the inverter parameters as follow:

Parameter setting	Description
F00.08 = 3	Close-loop control(with PG card)
F08.24 = 2	Select the rotary transformer

**C.3 UVW Encoder PG card**

There are two types of PG card of UVW encoder: one can only accept signals from encoder (exc-pg04b); the other can accept AB signals from upper computer (exc-pg04) in addition to encoder signals.

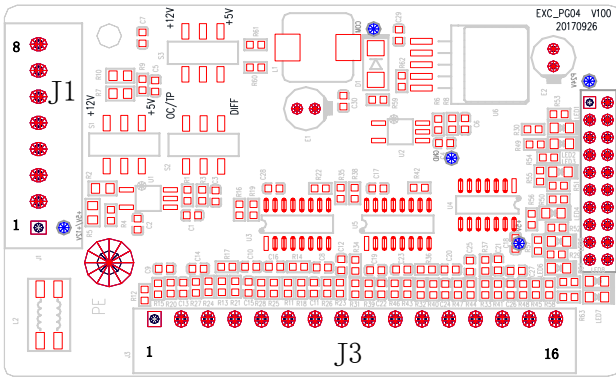


Fig c-10a EXC-PG04

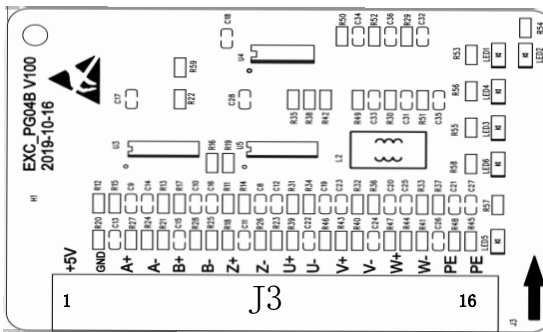


Fig c-10b EXC-PG04B

**J1 terminal description:**

J1 is mainly used to receive a and B signals from the upper computer, which is generally not used.

No.	Terminal Name	Description
1	VCC	Power input
2	COM	common end
3	QA+	signal A+
4	QA-	signal A-
5	QB+	signal B+
6	QB-	signal B-
7	VCC	Power input
8	COM	common end

**J3 terminal description:**

J3 terminal is used to receive signals from UVW encoder.

No.	Terminal Name	Description
1	5V	+5V power
2	GND	GND
3	A+	Encoder differential signal A+
4	A-	Encoder differential signal A-
5	B+	Encoder differential signal B+
6	B-	Encoder differential signal B-
7	Z+	Encoder differential signal Z+
8	Z-	Encoder differential signal Z-
9	U+	Encoder differential signal U+
10	U-	Encoder differential signal U-
11	V+	Encoder differential signal V+
12	V-	Encoder differential signal V-
13	W+	Encoder differential signal W+
14	W-	Encoder differential signal W-
15,16	PE	Shielding ground

◆ Usage method

- 1) Install the PG card according to figure C-1
- 2) Shielding cable ground PE can be directly punched on PG card fixing screw
- 3) Set the converter parameters according to the actual situation, as follows:

Function code set	Description
F00.08 = 3	With PG vector control mode
F08.24 = 1	UVW Encoder

**C.4 ECN1313 PG Card**

Outline and its interface:

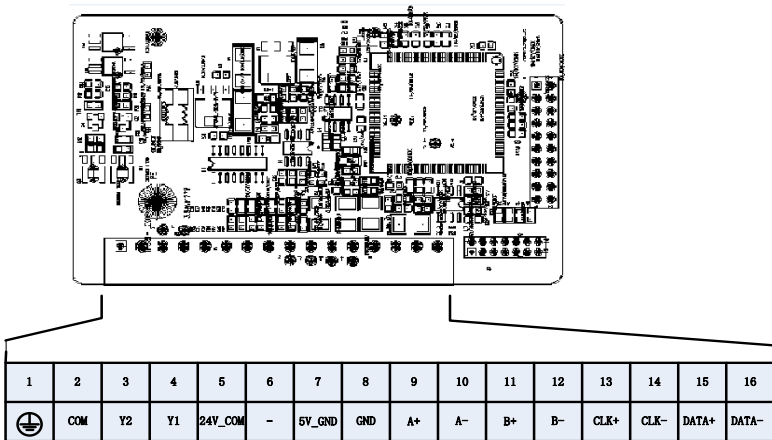



Fig.C-8 EXC-PG05 ECN1313 PG terminals

**Terminals:**

Model	Connecting Object	Pin Name	Description
-------	-------------------	----------	-------------

## FR500A&FR510A Series Vector Control Inverter

EXC-PG05	ECN1313 Encoder		GND
		24_COM、COM	24V output and its common terminal
		5V_GND、GND	5V output and its ground
		A+、A-	A differential signal
		B+、B-	B differential signal
		Y1	B signal OC output (24V)
		Y2	A signal OC output (24V)
		CLK+、CLK-	ECN1313 differential clock input
		DATA+、DATA-	ECN1313 differential data input

### Usage method

- 1) Follow Figure C-1 to loading PG card
- 2) Shielded cable earthing line PE is connected directly to the fixed screw of PG card
- 3) According to the actual situation to set the inverter parameters as follow:

Parameter setting	Description
F00.08 = 3	Close-loop control(with PG card)
F08.24 = 3	Select the ECN1313 encoder

### C.5 Sin-Cos encoder PG card

Outline and its interface:

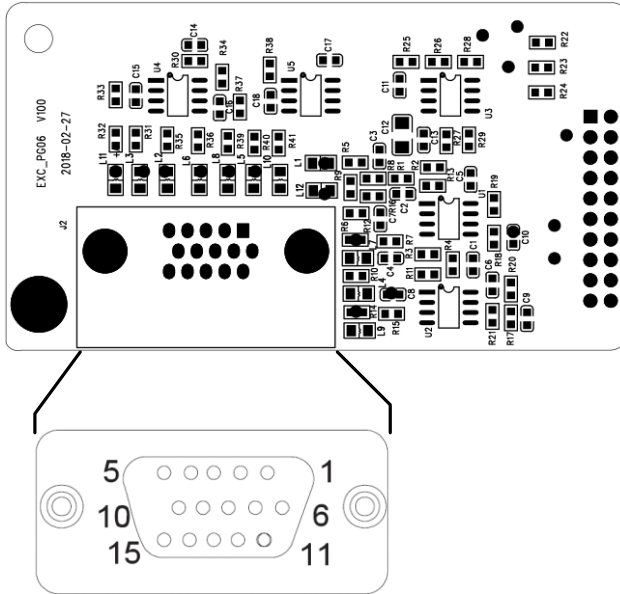


Fig.C-9 EXC-PG06 Sin-Cos encoder PG card

#### DB15 PIN:

Num.	Pin Name	Description
1	B-	Differential signal B-
2	NC	Null
3	R+	Differential signal R+
4	R-	Differential signal R-
5	A+	Differential signal A+
6	A-	Differential signal A-
7	GND	Power ground
8	B+	Differential signal B+
9	PG VCC	+5V Power
10	C+	Differential signal C+
11	C-	Differential signal C-
12	D+	Differential signal D+
13	D-	Differential signal D-
14、15	NC	Null